

IP Camera User Manual

O2iBD5

Important Safeguards and Warnings

Welcome

Thank you for purchasing this network camera!

This owner's manual is designed to be a reference tool for your system.

Please read this manual carefully before operating the unit and retain it for future reference.

Should you require any technical assistance, contact Speco Technologies Tech Support at 1-800-645-5516

Important Safeguards and Warnings

1 . Electrical safety

All installation and operation here should conform to local electrical safety codes.

Use a certified/listed 12VDC Class 2 power supply only.

Please note: Do not connect two power supplying sources to the device at the same time; it may result in device damage! The product must be grounded to reduce the risk of electric shock.

Improper handling and/or installation could run the risk of fire or electrical shock.

2 . Environment

Heavy stress, violent vibration or exposure to water is not allowed during transportation, storage and installation.

This product should be installed in a cool, dry place away from direct sunlight and heat sources.

Do not install the product in extreme temperature conditions.

Do not expose the camera to electromagnetic radiation. Otherwise it may result in CMOS sensor failure.

Do not block any ventilation openings.

Do not allow water and liquid intrusion into the camera.

3. Operation and Daily Maintenance

Please shut down the device and then unplug the power cable before you begin any maintenance work.

Do not touch the CMOS sensor optic component. You can use a blower to clean the dust on the lens surface.

Always use the dry soft cloth to clean the device. If there is too much dust, use a cloth dampened with a small quantity of neutral detergent. Finally use the dry cloth to clean the device.

Please use a professional optical cleaning method to clean the enclosure. Improper enclosure cleaning (such as using cloth) may result in poor IR functionality and/or IR reflection.

The grounding holes of the product are recommended to be grounded to further enhance the reliability of the camera.

Dome cover is an optical device, please don't touch or wipe cover surface directly during installation and use, please refer to the following methods if dirt is found:

Stained with dirt: Use oil-free soft brush or hair dryer to remove it gently.

Stained with grease or fingerprint: Use oil-free cotton cloth or paper soaked with alcohol or detergent to wipe from the lens center outward. Change the cloth and wipe several times if it is not clean enough.

Warning

This camera should be installed by qualified personnel only.
All the examination and repair work should be done by qualified personnel.
Any unauthorized changes or modifications could void the warranty.

Statement

This guide is for reference only.
Product, manuals and specifications may be modified without prior notice. Speco Technologies reserves the right to modify these without notice and without incurring any obligation.
Speco Technologies is not liable for any loss caused by improper operation.

Note:

Before installation, check the package and make sure that all components are included.
Contact your rep or Speco customer service department immediately if something is broken or missing in the package.

Accessory Name	Amount
Network Camera Unit	1
Junction Box	1
Quick Start Guide	1
Installation Accessories Bag	1
CD	1

Table of Contents


Regulatory Information	2
1. Introduction.....	6
Welcome.....	6
2. Web Access and Login	7
2.1 LAN	7
3. Live View	8
4. Camera Configuration.....	9
4.1 System.....	9
4.1.1 System Restart	9
4.1.2 Factory Default	10
4.1.3 Export / Import	10
4.1.4 Date / Time	11
4.1.5 System Log.....	11
4.1.6 System Information.....	12
4.2 Basic Setup	13
4.2.1 Video Setup	13
4.2.2 Image Setup	14
4.2.3 Display.....	17
4.3 Network Setup.....	18
4.3.1 IP Address Setup.....	18
4.3.2 DNS.....	18
4.3.3 DDNS Client	18
4.3.4 NTP	19
4.3.5 FTP.....	19
4.3.6 SMTP	20
4.3.7 RTSP	20
4.3.8 SNMP	21
4.3.9 Port Setting.....	21
4.3.10 IP Filter	22
4.3.11 UPnP	22
4.4 Event Setup	23
4.4.1 Motion Detection.....	23
4.4.2 Tampering Alarm	23

4.4.3 Alarm In Mode	23
4.4.4 Notification	24
4.5 User Admin	25
4.5.1 Password Change	25
4.5.2 User Account	25
Appendix	26
Appendix 1 Troubleshooting	26

1. Introduction

Thank you for purchasing this network camera!
Please read this manual carefully before operating the unit and retain it for future reference.
Should you require any technical assistance, please contact Speco Technologies Technical Support.

Applications

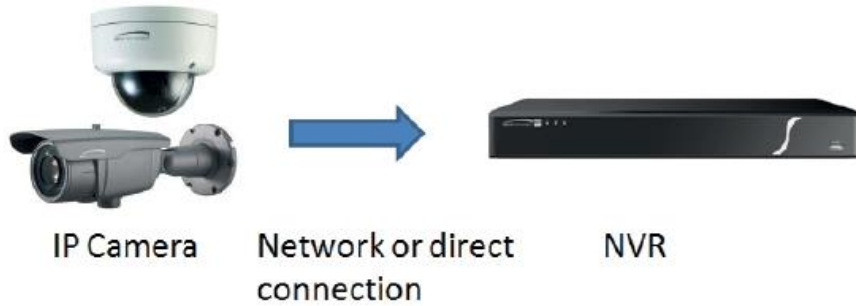

2. Web Access and Login

The IP camera settings can be accessed via a web browser through the LAN.


2.1 LAN

- Access through IP Scanner

Network connection:



- ① Make sure that the camera and the PC are connected on the same local network. The camera is set to DHCP by default and will be assigned an IP address by the DHCP server. Make sure that the local network has a DHCP server. Routers typically have a DHCP server built in.
- ② Install IP Scanner from the CD and run it after installation. IP Scanner is the tool for discovering the IP cameras on the local network.

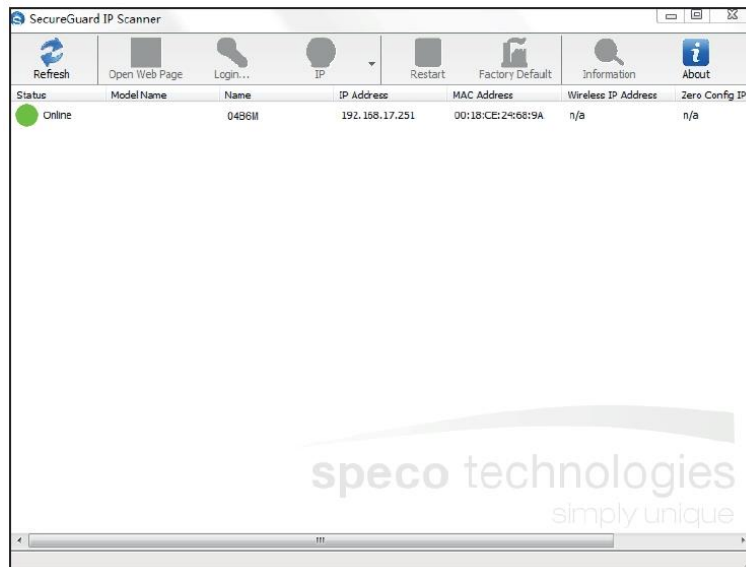


- ③ In the device list, the IP address, model number, and MAC address of each device will be listed. Select the applicable device and double click to open up the web viewer. You can also manually enter the IP address in the address bar of the web browser.

When prompted, enter the user name and password of the device. Default user name is admin and password is 1234. After logging in, follow directions to install applicable plug-ins for viewing video.

3. Live View

The window below will be shown after logging in.

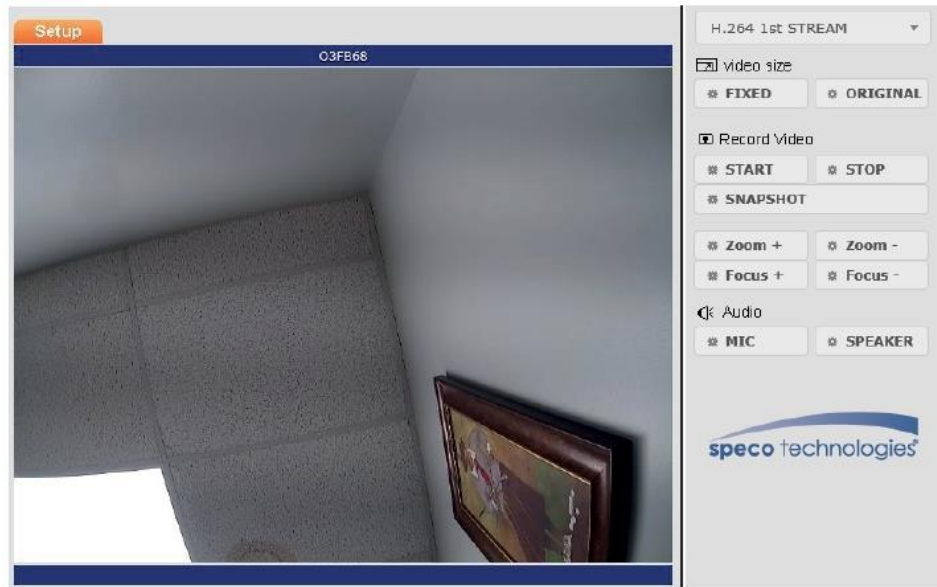

The following table describes the buttons on the live view interface.

Function	Button	Description
Stream	Dropdown menu	Choose which stream to view
Video Size	Fixed	Scales the video to fit in the browser window
Video Size	Original	Shows the video in the original resolution
Record Video	Start	Starts manual recording of video to PC. Files are saved as AVI. Once started, the device will record continuously until stopped.
Record Video	Stop	Stops recording of video
Zoom	Zoom +	Zoom in control for models with motorized lens
Zoom	Zoom -	Zoom out control for models with motorized lens
Focus	Focus + / Focus -	Manual focus adjustment control
Audio	Mic	Enables microphone input for live view on browser
Audio	Speaker	Enables speaker output on camera for live view on browser

4. Camera Configuration

Press the “Setup” button to go to the configuration interface.

Note: Wherever applicable, press the “Save” button to save the settings.


4.1 System

4.1.1 Upgrade

In the “System” interface, click on Upgrade to update the firmware of the device.


Navigate to the directory where the file is located and select it. Click on “Upgrade” at the bottom of the page to start the firmware update.

Make sure to not close the browser window until the update has completed. Firmware files can be downloaded on the [Speco website](#).

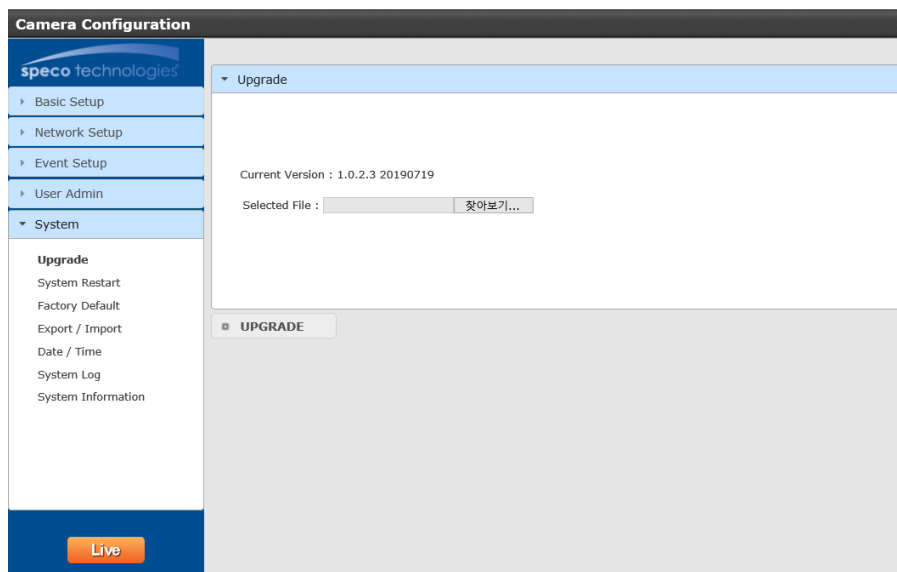


4.1.2 System Restart

The device can be restarted here.

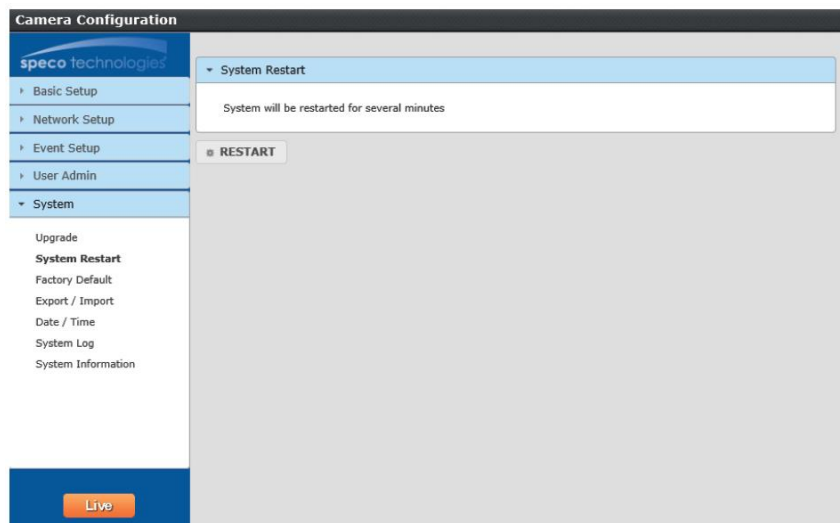

4.1.3 Factory Default


If the device needs to be factory reset for any reason, it can be done here. Be aware that this procedure will erase all settings that were changed and saved in the device and restore them to a factory default state. If restoring settings after a factory reset is desired, make sure to back up the settings using the “Export” function before the factory reset procedure.

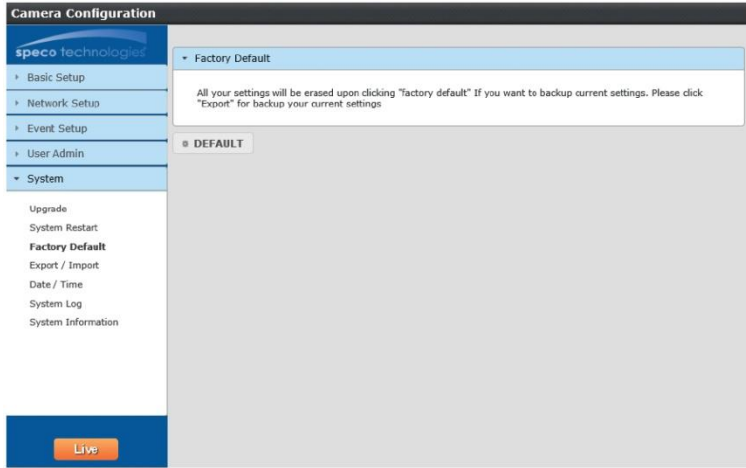

4.1.4 Export / Import


Export

Click the button to download the current system settings as a configuration file on the local PC.

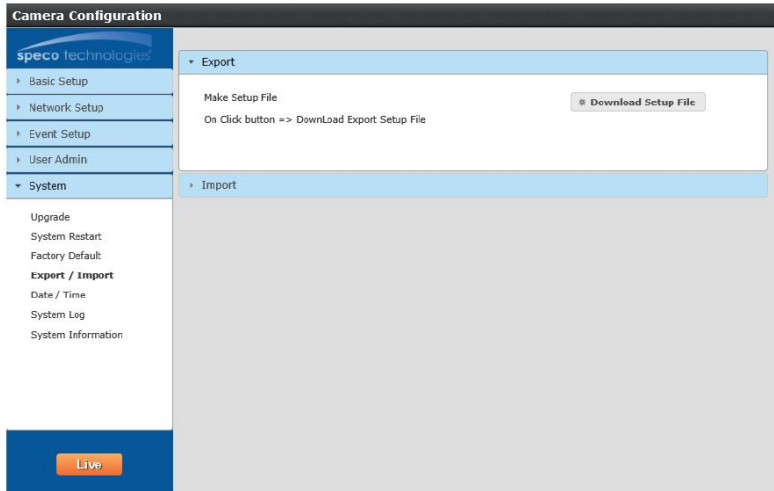

Import

Updates the device with settings that were saved with the Export function. This is useful after a factory reset. Browse to the directory where the configuration file was saved, select it, and click “Upload File”.

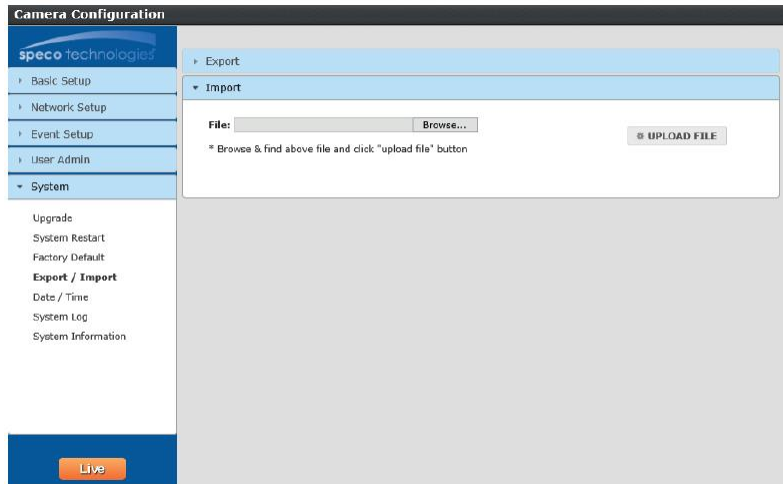


4.1.5 Date / Time

Time Zone

Select the appropriate time zone of the location of the device. The system time will update automatically if the device is connected to the internet.


Setup Time

If the device is not updating the time automatically for some reason, the time can be adjusted manually. Click the checkbox and change the time accordingly.

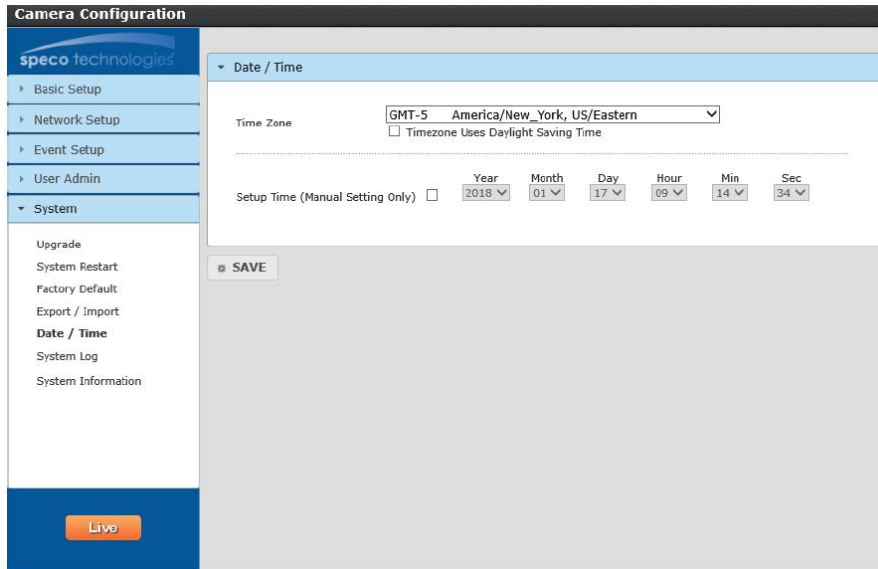

4.1.6 System Log


System log provides information on actions that were performed on the device such as providing the IP address of a PC that logged in to the device along with the date and time. Select the desired category to view and specify the start and end times to display the logs. Then click on “Search Logs” to retrieve the logs.

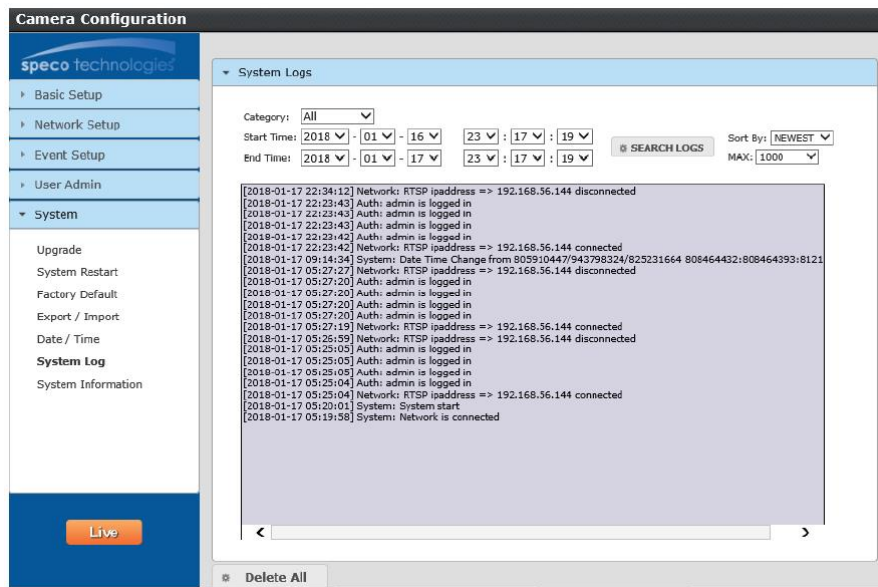

4.1.7 System Information


System Information

Provides information such as the current firmware version of the device and the model number. The device nickname can also be set up here. HTTP API Authentication and WSSE Authentication are used for 3rd party integration purposes and can remain disabled unless specifically needed.

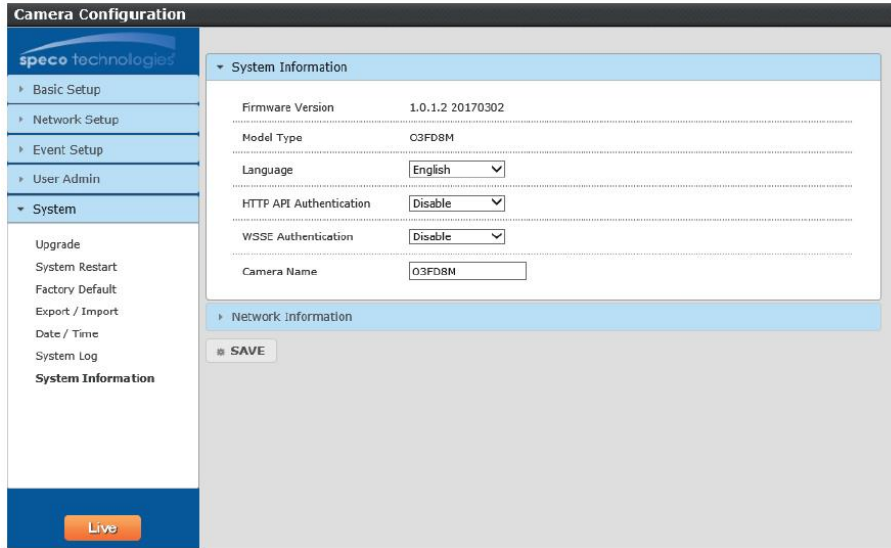

Network Information

Provides network information of the device such as IP address and Mac address.

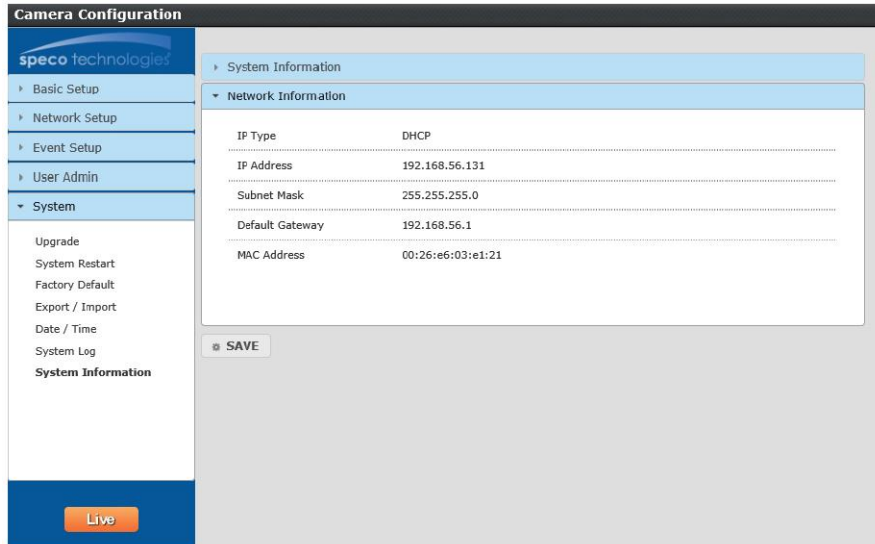

4.2 Basic Setup

Basic Setup includes setup for video, audio, and image settings.

4.2.1 Video Setup

Resolution, frame rate, etc. can be adjusted in this section. Each setting can be adjusted per stream. There are 3 streams in total – one main stream and two sub streams.

The screenshot displays the 'Camera Configuration' web interface for 'speco technologies'. The left sidebar contains navigation options: Basic Setup (selected), Video Setup, Image Setup, and Display. Below these are expandable sections for Network Setup, Event Setup, User Admin, and System, along with a 'Live' button. The main content area is titled 'Main Stream Setting' and includes the following configuration options:

- Codec: H.264
- Resolution: 2048x1536
- Frame rate: 30
- G.O.P: 30
- Bitrate mode: CBR
- Bitrate: A slider set to 'Normal' with a maximum of 6.0 Mbps.
- Profile: High Profile
- Corridor View: OFF

Below the main stream settings are sections for 'Sub Stream 1 Setting' and 'Sub Stream 2 Setting', both currently collapsed. A 'SAVE' button is located at the bottom of the configuration area.

Codec: For the main stream and sub stream 1, this is set to H.264. For sub stream 2, there is an option to choose between H.264 and MJPEG.

Resolution: Set the desired resolution for each stream from the drop down list.

Frame Rate: Set the desired frame rate for each stream from the drop down list. Range is from 1 fps to 30 fps.

G.O.P: Stands for "Group of Pictures". This determines how many frames are processed in between unique I-frames. For example, if the frame rate is set to 30 fps and the GOP value is set to 1, there would be 30 I-frames per second. I-frames contain much more data compared to P-frames or B-frames. The higher the GOP value, the higher the image quality will be. For decoding process considerations, GOP should be set to a value equal to or greater than the frame rate.

Bitrate Mode: Choose between CBR (constant) or VBR (variable). The bit rate used in video encoding has a direct impact on the video quality and the bandwidth used to stream video over the network. As opposed to constant bit rate (CBR), VBR files vary the amount of output data per time segment. VBR allows a higher bit rate (and therefore more storage space) to be allocated to the more complex segments of media files while less space is allocated to less complex segments. The bits available are used more flexibly to encode the video data more accurately, with fewer bits used in less complex scenes and more bits used in complex scenes. CBR is the best option if the available bandwidth must be limited.

Bitrate: Sets the target bitrate. The acceptable minimum bitrate is around 1 Mbps per megapixel. So a 1080p resolution (2MP) should be set to 2Mbps at a minimum.

Profile: Select between Baseline, Main, or High profiles for H.264.

Corridor View: This changes the camera view from a landscape view to a portrait view. This mode is useful for looking down a narrow hallway for example.

4.2.2 Image Setup

Image settings such as brightness, contrast, white balance, etc can be set up here.

- 2MP (O2iBD3 /O2iB68 / O2iB68M/ O2iD8 /O2iD8M /O2B6M /O2iB50M /O2D6M /O2iD9 /O2iB9)

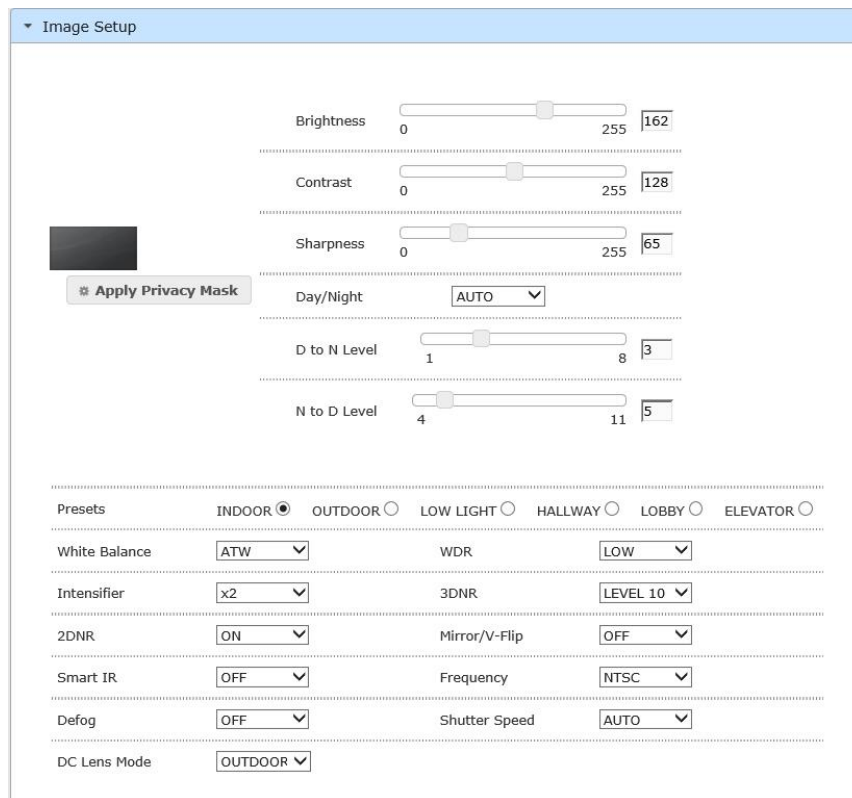


Image Setup

Brightness 0 255 162

Contrast 0 255 128

Sharpness 0 255 65

Apply Privacy Mask

Day/Night AUTO

D to N Level 1 8 3

N to D Level 4 11 5

Presets INDOOR OUTDOOR LOW LIGHT HALLWAY LOBBY ELEVATOR

White Balance ATW WDR LOW

Intensifier x2 3DNR LEVEL 10

2DNR ON Mirror/V-Flip OFF

Smart IR OFF Frequency NTSC

Defog OFF Shutter Speed AUTO

DC Lens Mode OUTDOOR

Privacy Mask: There are 8 zones that can be applied. Right click within the image window and choose which zones to apply under “Show”. Once the zones are enabled, they can be moved around within the image and resized. After adjustment, click “Apply Privacy Mask” to apply the changes.

Brightness: Adjusts the brightness of the image. If set too high, it can have a white-out effect on the image.

Contrast: Adjusts the contrast of the image which is the difference between black and white (color differentiation). If set too high, bright scenes may look too bright.

Sharpness: Enhances edges for a sharper image perception. The higher the value, the less “soft” the image looks. However, if set too high, this introduces artifacts in the video.

Day/Night: Can be set to Auto, Color, or Monochrome. If FIT mode is on, then this mode will be set to auto.

D to N: Sets the threshold at which the image switches from color to monochrome. The higher the value, the more the camera tries to stay in color as ambient light level is reduced.

N to D: Sets the threshold at which the image switches from monochrome to color.

Presets: Presets adjust the WDR and Intensifier values automatically based the mode that’s chosen. WDR and Intensifier can also be adjusted manually.

White Balance: It adjusts color settings to achieve consistent quality in the white areas and other colors of the image.

Intensifier: Brighter video in low light.

2DNR: Digital noise reduction. A 2D filter removes most graininess from images, moving objects can produce image blur trails.

Smart IR: Eliminate hotspots and underexposure in night-time image.

Defog: improve a cameras image performance in light foggy conditions.

DC Lens Mode: indoor / outdoor.


WDR: WDR(Wide Dynamic Range) enables a user to view the area more clearly even under backlight environment.

3DNR: Cuts off the noise of video. A 3D filter improves on the results of a 2D filter by eliminating motion blur, as well as image noise.

Mirror / V-Flip: Enables normal image to mirrored Image.

Frequency: NTSC / PAL

Shutter Speed: Adjust it according to the lightening conditions. Shutter speed is the value of the sensor exposure time.

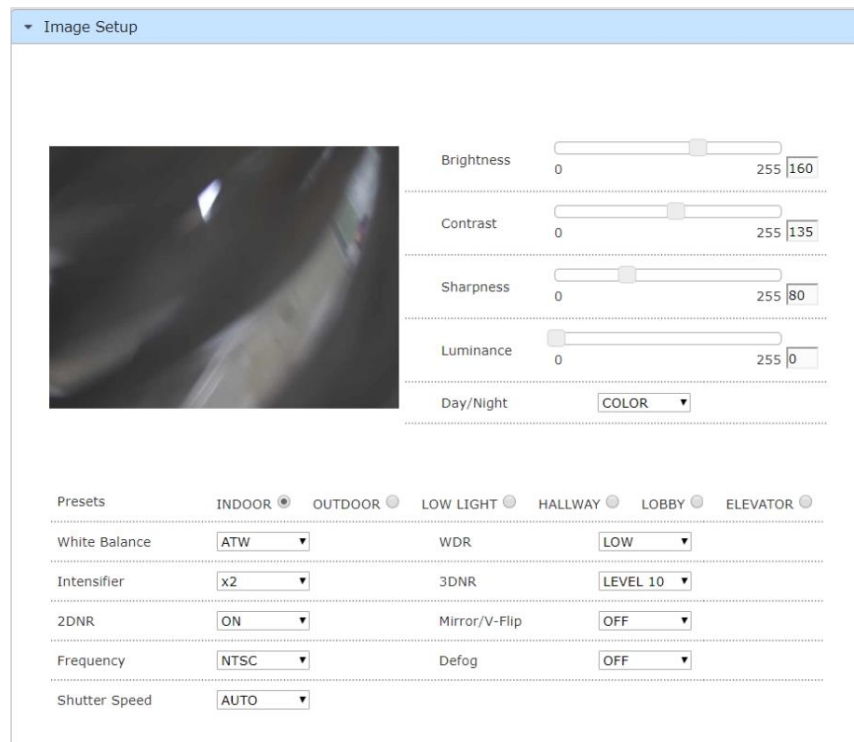

Brightness: Adjusts the brightness of the image. If set too high, it can have a white-out effect on the image.

Contrast: Adjusts the contrast of the image which is the difference between black and white (color differentiation). If set too high, bright scenes may look too bright.

Sharpness: Enhances edges for a sharper image perception. The higher the value, the less “soft” the image looks. However, if set too high, this introduces artifacts in the video.

Luminance: Reference brightness adjustment.

Day/Night: Can be set to Auto, Color, or Monochrome. If FIT mode is on, then this mode will be set to auto.

Presets: Presets adjust the WDR and Intensifier values automatically based the mode that’s chosen. WDR and Intensifier can also be adjusted manually.

White Balance: It adjusts color settings to achieve consistent quality in the white areas and other colors of the image.

Intensifier: Brighter video in low light.

2DNR: Digital noise reduction. A 2D filter removes most graininess from images, moving objects can produce image blur trails.

Frequency: NTSC / PAL

Shutter Speed: Adjust it according to the lightening conditions. Shutter speed is the value of the sensor exposure time.


WDR: WDR(Wide Dynamic Range) enables a user to view the area more clearly even under backlight environment.

3DNR: Cuts off the noise of video. A 3D filter improves on the results of a 2D filter by eliminating motion blur, as well as image noise.

Mirror / V-Flip: Enables normal image to mirrored Image.

Defog: improve a cameras image performance in light foggy conditions.

- 3MP (O3FDP9 /O3FB56M /O3FB68 /O3FD8M)

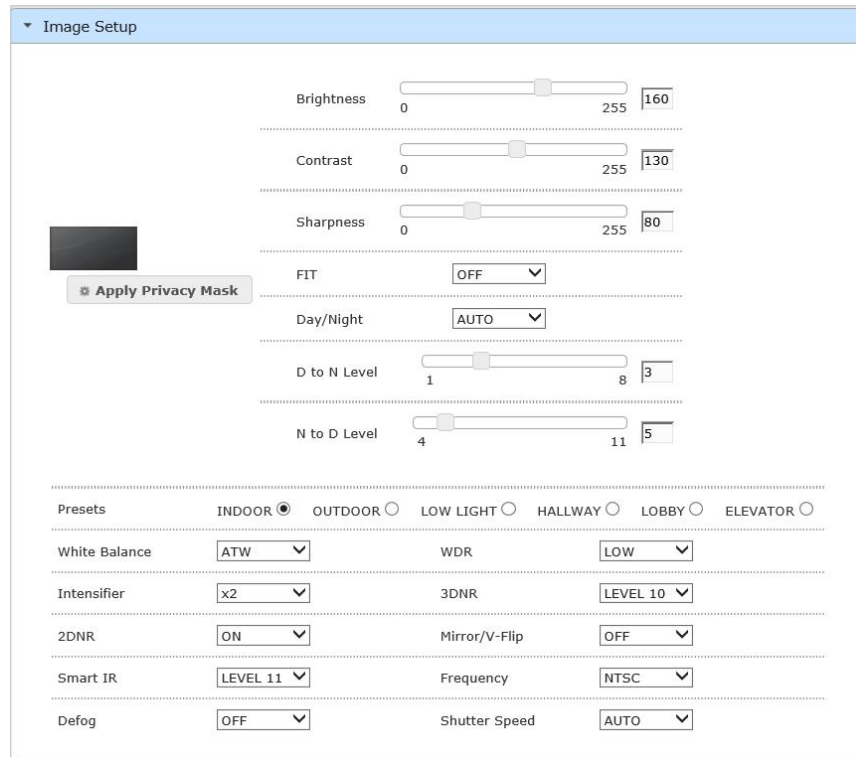

Privacy Mask: There are 8 zones that can be applied. Right click within the image window and choose which zones to apply under “Show”. Once the zones are enabled, they can be moved around within the image and resized. After adjustment, click “Apply Privacy Mask” to apply the changes.

Brightness: Adjusts the brightness of the image. If set too high, it can have a white-out effect on the image.

Contrast: Adjusts the contrast of the image which is the difference between black and white (color differentiation). If set too high, bright scenes may look too bright.

Sharpness: Enhances edges for a sharper image perception. The higher the value, the less “soft” the image looks. However, if set too high, this introduces artifacts in the video.

FIT: FIT stands for Flexible Intensifier® Technology. Using Spec’s low-light technology called Intensifier, the camera stays in color even in low light, to produce a quality color image. As light level drops even further, the camera will adjust itself automatically to provide the mode that will produce the best image according to the scene. The available modes are: color, monochrome without IR, and monochrome with IR.

Day/Night: Can be set to Auto, Color, or Monochrome. If FIT mode is on, then this mode will be set to auto.

D to N: Sets the threshold at which the image switches from color to monochrome. The higher the value, the more the camera tries to stay in color as ambient light level is reduced.

N to D: Sets the threshold at which the image switches from monochrome to color.

Presets: Presets adjust the WDR and Intensifier values automatically based the mode that’s chosen. WDR and Intensifier can also be adjusted manually.

White Balance: It adjusts color settings to achieve consistent quality in the white areas and other colors of the image.

Intensifier: Brighter video in low light.

2DNR: Digital noise reduction. A 2D filter removes most graininess from images, moving objects can produce image blur trails.

Smart IR: Eliminate hotspots and underexposure in night-time image.

Defog: improve a cameras image performance in light foggy conditions.

WDR: WDR(Wide Dynamic Range) enables a user to view the area more clearly even under backlight environment.

3DNR: Cuts off the noise of video. A 3D filter improves on the results of a 2D filter by eliminating motion blur, as well as image noise.

Mirror / V-Flip: Enables normal image to mirrored Image.

Frequency: NTSC / PAL

Shutter Speed: Adjust it according to the lightening conditions. Shutter speed is the value of the sensor exposure time.

4.2.3 Display


Display

Enables an on-screen display on the video stream.

Position: Static places the OSD on a predefined area in the image. Variable allows for a user-specified location.

Size: Size of the font in the OSD.

Content Input: User-specified text. This can be used to display the nickname of the device.

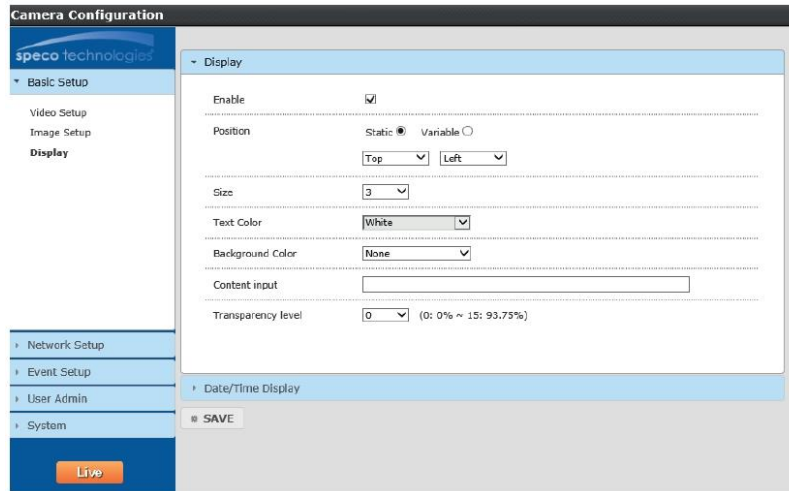


Date/Time Display

Enables an on-screen display of the date/time on the video stream.

Position: Static places the OSD on a predefined area in the image. Variable allows for a user-specified location.


Size: Size of the font in the OSD.

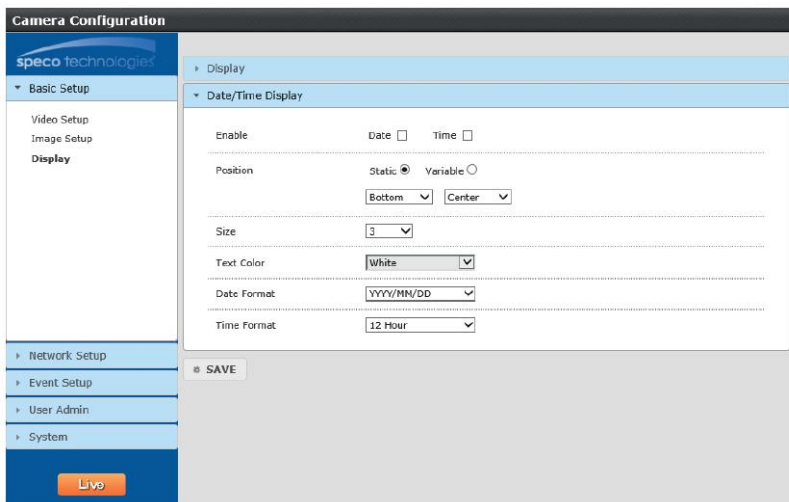

4.3 Network Setup


4.3.1 IP Address Setup

Sets the IP address, subnet mask, and gateway of the local network that the device is connected to. If the local network supports DHCP, the device can be set to DHCP mode and the network will assign an IP address to the device. The device is set to DHCP mode by default.

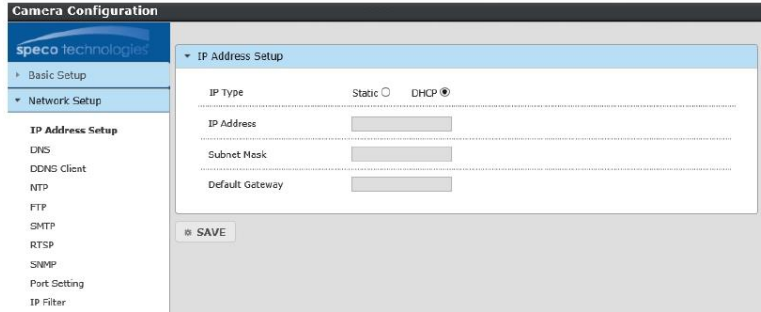


4.3.2 DNS

The DNS server addresses can be set up here. This does not have to be set up when using DHCP.

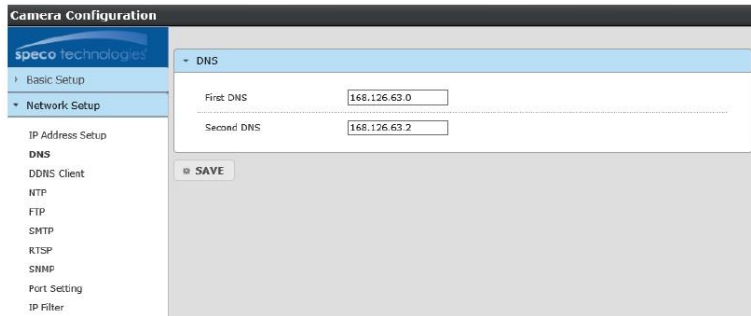

4.3.3 DDNS Client

The device can be connected to Speco's DDNS server so that it can have a host name.

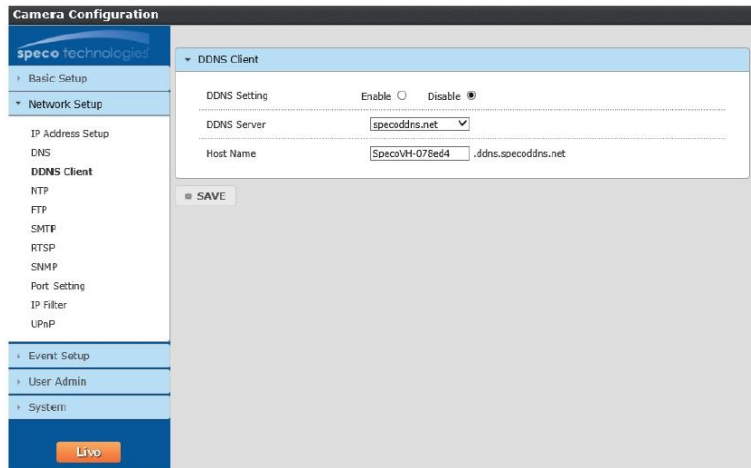


Click “Enable” to enable DDNS mode.

Enter a hostname for the device. The default name that’s provided has the last 6 digits of the Mac address as part of the name. If the name is found to be unique, it will be registered successfully on the DDNS server.


4.3.4 NTP

The device can configure the date and time automatically via an NTP (network time protocol) server if it is connected to the internet. The host name is “pool.ntp.org” by default. Other NTP servers can be entered manually. The Date / Time section under System Setup uses this NTP server to update the time when the time zone is selected.

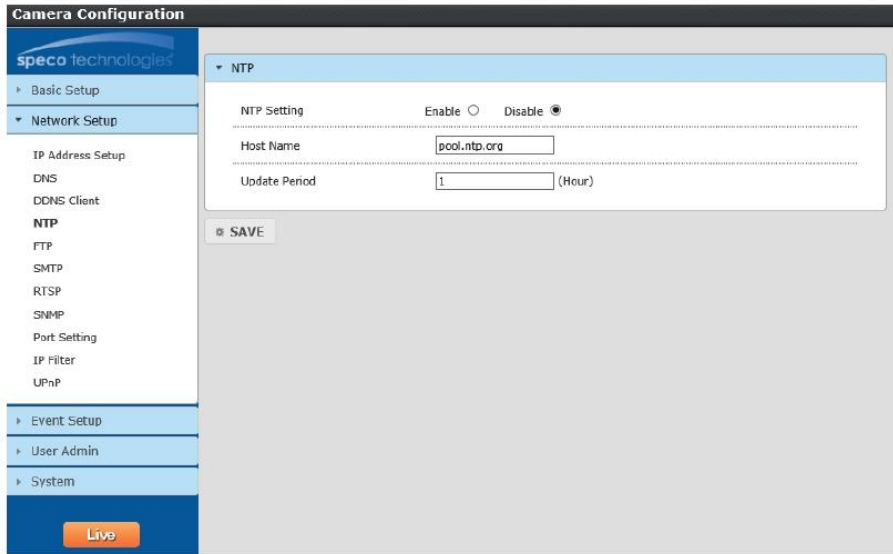

4.3.5 FTP

An FTP server can be used to store images for events. Enter the FTP server address, user ID, account password, and the port of the FTP server. Then enter the file name prefix and the file storage location on the server. For the file name, the date and time will be appended to the prefix.

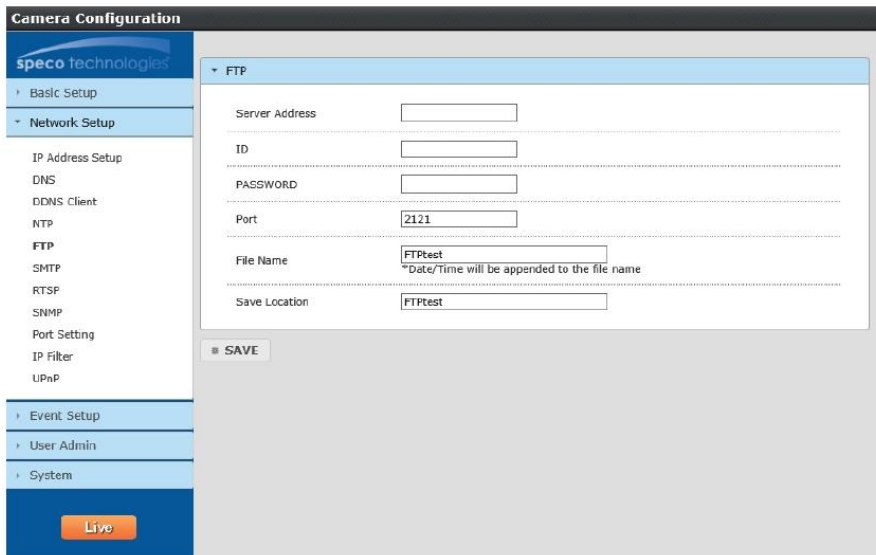

4.3.6 SMTP

Emails can be sent with images when events occur. For the SMTP server setting, enter the information of the outgoing mail server. For common email services such as Gmail or Yahoo Mail, please check the SMTP settings for those services first and then enter them here. For SMTP Account Setting, enter the sender's email address and up to 5 emails addresses for the receiver.

SMTP

SMTP Server Setting

Server Address

ID

PASSWORD

Port

Use SSL-TLS/STARTTLS NO SSL TLS/STARTTLS

Auth Mode Login

SMTP Account Setting

From :

1. To :

2. To :

3. To :

4. To :

5. To :

4.3.7 RTSP

RTSP stands for Real Time Streaming Protocol and is used by various clients to stream the video from the device. Examples of clients are Speco's NVRs and SecureGuard® VMS. Other than changing the RTSP port (default is 554), the other options are advanced and do not need to be changed from the default settings for most applications.

Camera Configuration

speco technologies

Basic Setup

Network Setup

- IP Address Setup
- DNS
- DDNS Client
- NTP
- FTP
- SMTP
- RTSP**
- SNMP
- Port Setting
- IP Filter
- UPnP

Event Setup

User Admin

System

RTSP

RTSP Port

Streaming Type Unicast Multicast

Check Keep-Alive Enable Disable

Check Cycle : Min(1~60)

HTTP Tunnel Port

HTTPS Tunnel Enable Disable

BackChannel Audio Type u-law a-law

4.3.8 SNMP

To get camera status, parameters and alarm information and remotely manage the camera, the SNMP function can be used. Before using SNMP, please install an SNMP management tool and set the parameters of SNMP, such as SNMP port, trap address.

1. Go to the SNMP section.
2. Select the corresponding version (SNMPv1/SNMPv2c or SNMPv3) according to the version of the SNMP software that will be used.
3. Set the values for “Read SNMP Community”, “Write SNMP Community”, “Trap Address”, “Trap Port” and so on. Please make sure the settings are the same as that of the SNMP software.

SNMP V1/V2C

SNMP V3

Enable

SNMP Port

Read

Security Name

Authentication Type

Authentication Password

Encryption Type

Encryption Password

Write

Security Name

Authentication Type

Authentication Password

Encryption Type

Encryption Password

SAVE

4.3.9 Port Setting

Set up the ports that are used to access different camera functions.

Camera Configuration

speco technologies

Basic Setup

Network Setup

IP Address Setup

DNS

DDNS Client

NTP

FTP

SMTP

RTSP

SNMP

Port Setting

IP Filter

UPnP

Event Setup

User Admin

System

Live

Port Setting

AV Stream Port

Event Port

Upgrade Port

HTTP Port


HTTPS Port

SAVE

4.3.10 IP Filter

IP filtering can be used to provide access or deny access to a specific set of IP addresses.


1. Select Enable and the select either “All Accept” or “All Drop”.
2. If All Drops is selected, then nobody can access the device except for a specified list of IP addresses and vice versa for All Accept.
3. Specify the range of IP addresses under “Rule” and click Add to add the IP addresses to the list.
4. Up to 100 IP addresses can be listed.

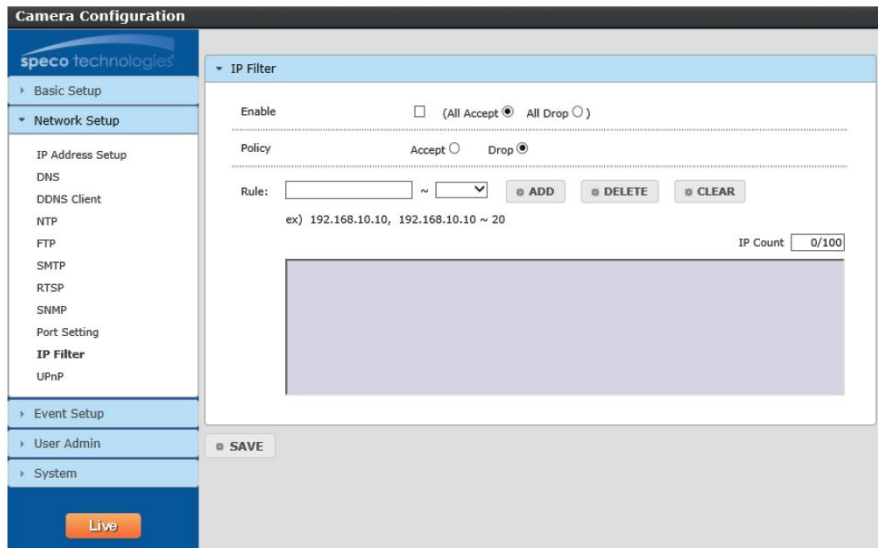

4.3.11 UPnP

If this function is enabled, the device will attempt to automatically open up ports on the local network and can be quickly accessed on the local network.


The UPnP friendly name can be entered.

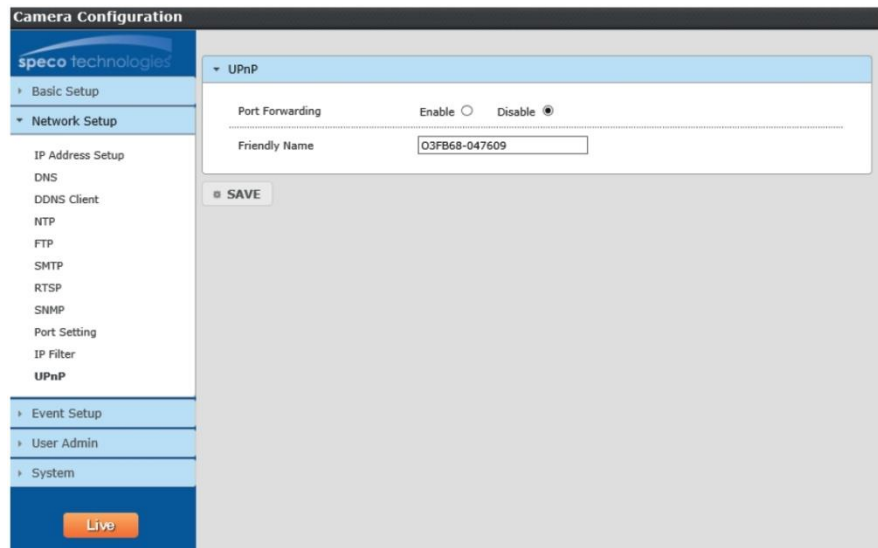

4.4 Event Setup

4.4.1 Motion Detection


Motion detection zone and sensitivity can be set up in this section.

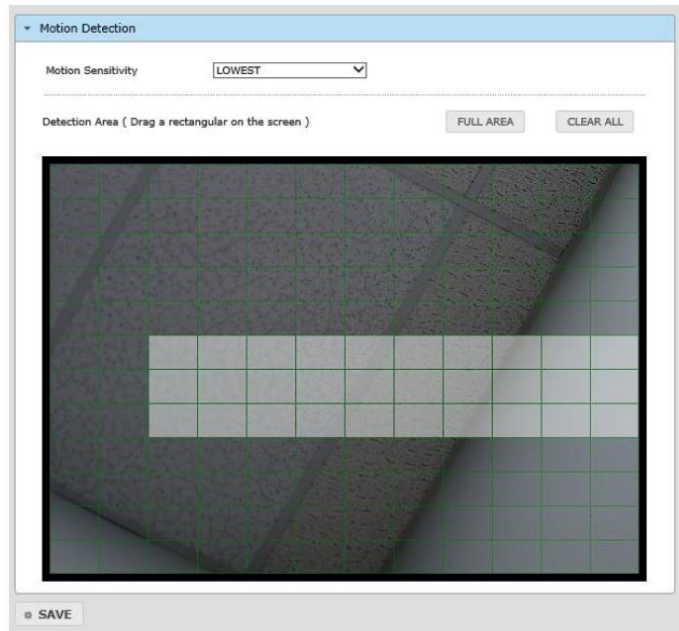

1. Set the sensitivity of motion detection for the zone. Higher sensitivity means that motion alarms will be triggered more easily.
2. Click and drag the desired zone in the window. The defined zone will be highlighted.


4.4.2 Tampering Alarm

The device can detect tampering such as a global scene change and out of focus.

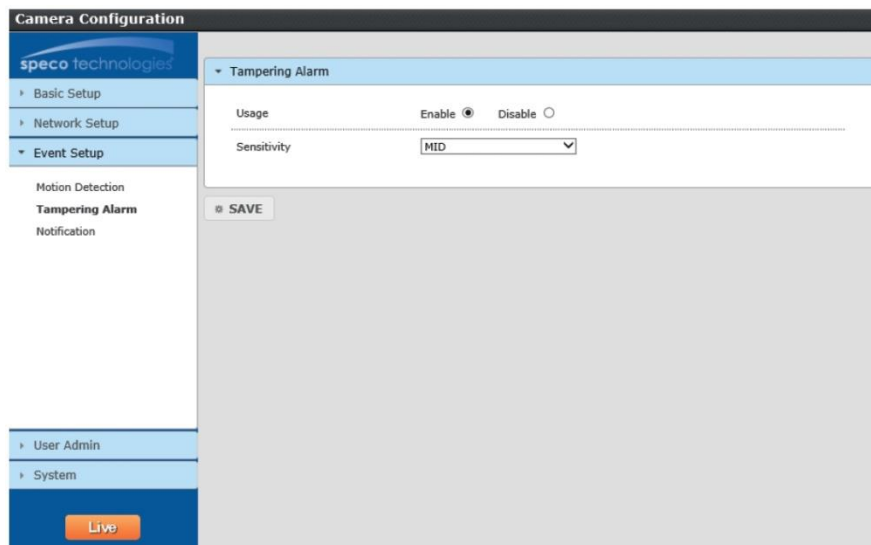

4.4.3 Alarm in Mode


For devices with a sensor input, choose between Normally open or Normally closed.

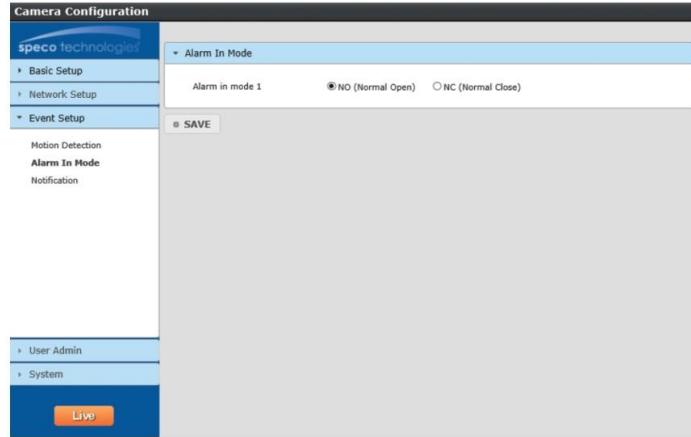


4.4.4 Notification

This section is used to control how notifications are delivered for motion and tampering alarm events.

Email: Choose the event type. Interval time defines how often the email is sent out. Images of the event can be attached to the email if enabled.

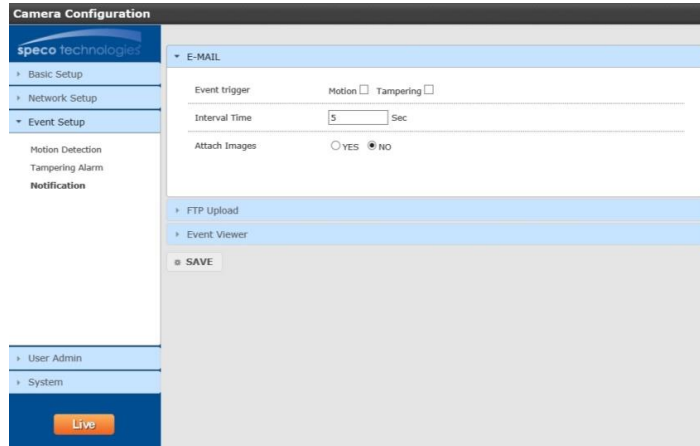

FTP: Choose the event type. Interval time defines how often the alarm image is uploaded to FTP.

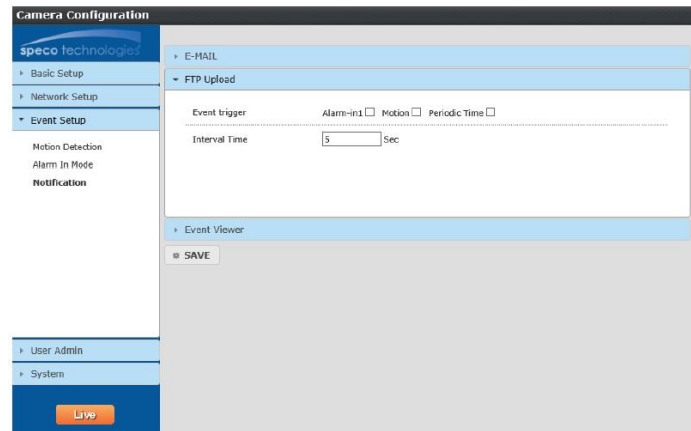

4.5 User Admin

4.5.1 Password Change

Change the password of the admin account.

The screenshot shows the 'Camera Configuration' web interface. On the left, a navigation menu includes 'Basic Setup', 'Network Setup', 'Event Setup', 'User Admin', and 'System'. The 'User Admin' section is expanded, showing 'Password Change' and 'User Account'. The 'Password Change' form contains three input fields: 'Old Password', 'New Password', and 'Confirm New Password'. Below these fields are two buttons: 'CHANGE' and 'RESET'. At the bottom of the page, there is a 'Live' button.

4.5.2 User Account

Add or modify user accounts here.

The screenshot shows the 'Camera Configuration' web interface. The navigation menu is the same as in the previous screenshot. The 'User Account' form is active, featuring three input fields for 'ID', 'PASSWORD', and 'CONFIRM PASSWORD'. Below these fields is an 'ADD/MODIFY' button. A 'User List' table is displayed below the form, containing one entry: 'admin user'. A 'DELETE' button is located to the right of this entry. The 'Live' button is visible at the bottom of the page.

Enter the user ID of the account to be created or modified and enter the new password. To delete an account, click on the account to be deleted and click "Delete".

Appendix

Appendix 1 Troubleshooting

IP Scanner does not show any device.

Make sure that the PC that's running IP Scanner is on the same local network as the devices.


Internet Explorer cannot download ActiveX control

IE browser may be set up to block ActiveX. Follow the steps below.

1. Open IE browser and then click Tools->Internet Options



2. Select Security and then Custom Level.
3. Enable all the options under "ActiveX controls and plug-ins".
4. Click OK to finish setup.

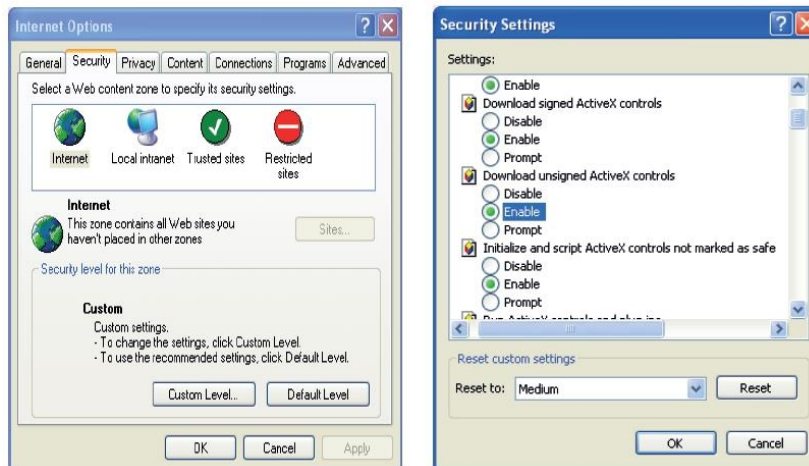

No sound can be heard.

1. Audio input device is not connected. Please connect and try again.
2. Audio function is not enabled at the corresponding channel. Please enable this function.