

PMIC-0100 Microphone Quick Guide

Package Content



Microphone



RCA to 3.5 mm Cable



RCA to Naked Wire Cable



Female Power Connector

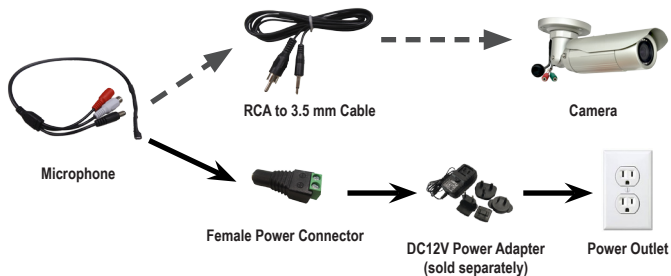


Male Power Jack to Naked Wire Cable



How to Connect the Microphone ?

The manner to connect the microphone to the camera varies depending on the audio input connector of the camera.

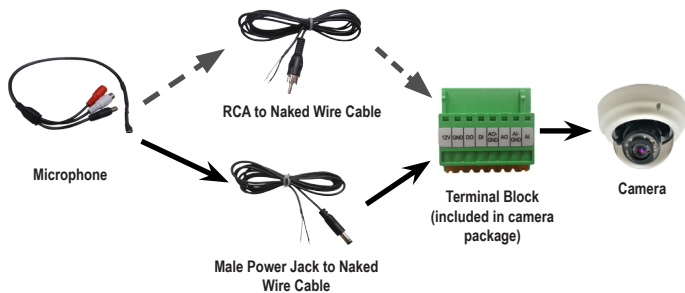
For cameras with 3.5 mm audio input jack





Pin Mapping

Female Power Connector	DC12V Power Adapter
	
Positive (+)	Cable with WHITE stripe
Negative (-)	Cable without stripe

For cameras without 3.5 mm audio jack



Pin Mapping

Wire Color		Terminal Block
RCA to Naked Wire 	White	AI (Audio Input)
	Black	AI GND (Ground)
Male Power Jack to Naked Wire 	White	12V
	Black	GND (Ground)

NOTE:

- The above pictures are for reference only. Terminal blocks and labels vary depending on camera model.
- The bundled extension cables are 2m long. If the cables need to be further extended, it is recommended to use 6124A 0.14/14X1C or 23 AWG standard cable materials. The audio quality may deteriorate depending on the distance and the cables used.