



DITEK Corporation
ONE DITEK CENTER
1720 Starkey Road
Largo, FL 33771

INSTALL INSTRUCTIONS

DTK-120/240CM+

This Surge Protective Device (SPD) is a high performance device, designed to provide protection for sensitive electronic loads connected to service panels, fire panels, or where the SPD is directly connected to the electronic device. Maximum protection will only be achieved if the SPD is properly installed. Please read and follow the installation instructions carefully.

NOTICE: This SPD should be installed and grounded, by a licensed contractor, per the applicable requirements of the NEC and the following instructions.

APPLICATION:

Type 1 SPD - Permanently connected, hard-wired SPDs intended for installation between the secondary of the service transformer and the line side of the main service equipment overcurrent protective device.

Type 2 SPD - Permanently connected, hard wired SPDs intended for installation on the load side of the main service equipment's overcurrent protective device.

For 120/240VAC split circuits with L1-G = 120VAC, L2-G = 120VAC, L1-L2 = 240VAC

INSTRUCTIONS:

Caution: Measure all voltages to insure applied voltage does not exceed the voltage rating of the unit. Improper installation voids the warranty. This unit must be connected in parallel with the equipment to be protected.

Warning: No Serviceable Parts-**Attention:** Aucune pièce remplaçable ou réparable
For Use Only With A Flexible Conduit System Or Direct Connection To Panel

NOTE: When used as a Type 2 SPD, it is suitable for use on a circuit capable of delivering not more than 10,000 rms symmetrical Amperes, when protected by a minimum 20 Ampere circuit breaker rated 120 Volts minimum.

HVAC Disconnect/Breaker Panel Installation:

1. Turn off main power before beginning the installation.
2. Remove the front cover from panel.
3. Remove a 3/4" knockout on the side of the panel box.
4. Unscrew nut from unit.
5. Feed all wires through the knockout hole then through nut. Tighten the nut to secure the unit.
6. Connect the green (Ground) wire to the ground bus.
7. Always have one common ground per system to eliminate a differential in ground potentials.

Ground Resistance Rule: Max ground resistance is 25 ohms, 5 ohms or less is optimum.

This cannot be an assumed value and must be measured to assure proper grounding.

8. Connect the phase (Black) wires to the load side of a 2 pole breaker, making sure the leads are as short as possible (Ground being the shortest).
9. After all connections have been made and no hazards exist, restore power.

120VAC Single Phase Installation:

1. Mount this device using the mounting feet or to disconnect or breaker panel using the installation instructions for Disconnect/Breaker Panel Installation instructions above.
2. Connect the green (Ground) wire to the ground circuit.
3. Always have one common ground per system to eliminate the possibility of a differential in ground potentials.

Ground Resistance Rule: Max ground resistance is 25 ohms, 5 ohms or less is optimum.

This cannot be an assumed value and must be measured to assure proper grounding.

4. Connect both phase (Black) wires to the load side of the 120VAC single phase circuit, making sure the leads are as short as possible (Ground being the shortest).
5. After all connections have been made and no hazards exist, restore power.

NOTE: The LED on the unit must be on, if the LED is off than surge protection is compromised and the unit must be replaced.

This device features an internal protection feature that will disconnect the surge protective components but will maintain power to the load - now unprotected. If this situation is undesirable for the application, follow the manufacturer's instructions for replacing the device.

INSTALLATION




DITEK Corporation
ONE DITEK CENTER
1720 Starkey Road
Largo, FL 33771

INSTALL INSTRUCTIONS


DTK-120/240CM+

Illustrations Page


INSTALLATION

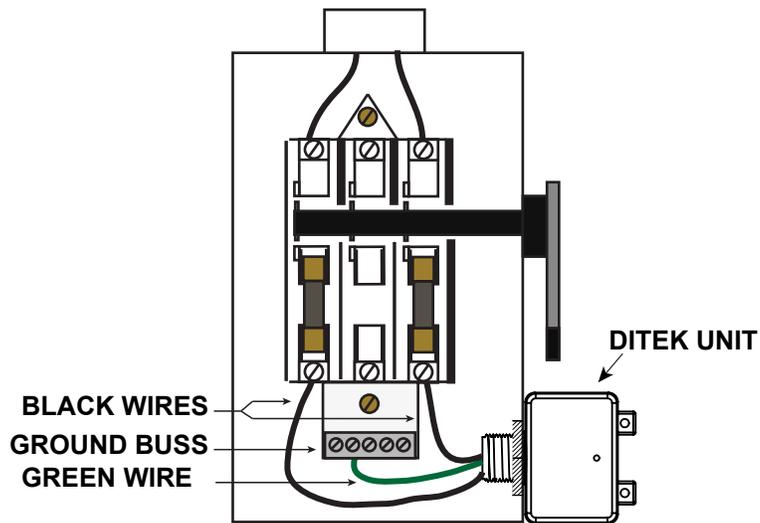

120/240VAC SPLIT PHASE HVAC DISCONNECT PANEL INSTALL (Type 2 SPD)

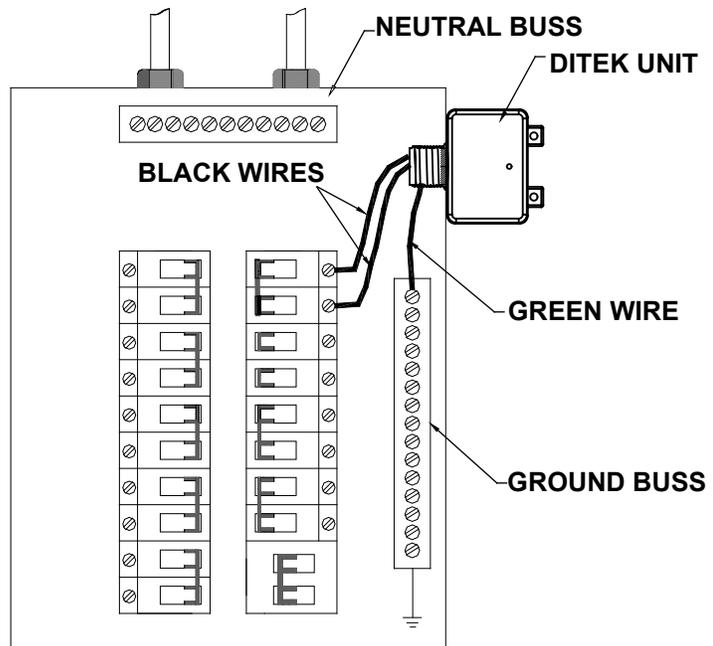

120/240VAC SPLIT PHASE BREAKER PANEL INSTALL (Type 2 SPD)

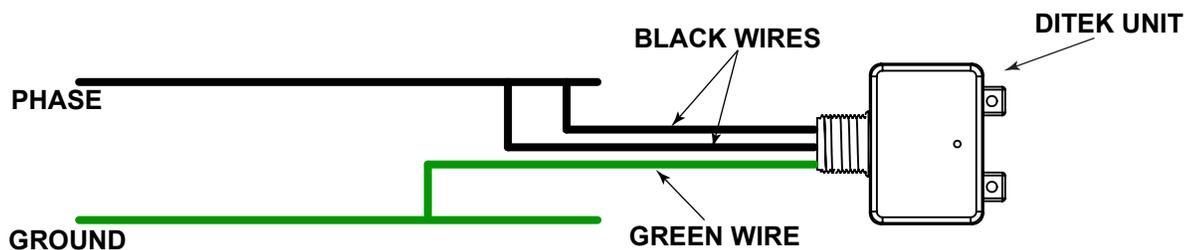

120VAC SINGLE PHASE CIRCUIT (Type 2 SPD)