

MorphoAccess® SIGMA Series

Installation Guide



COPYRIGHT © 2020 IDEMIA

Osny, France

Warning

COPYRIGHT © 2020 IDEMIA. All rights reserved.

Information in this document is subject to change without notice and do not represent a commitment on the part of IDEMIA. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying or recording, for any purpose without the express written permission of IDEMIA.

This legend is applicable to all pages of this document.

This manual makes reference to names and products that are trademarks of their respective owners.

Revision History

The table below contains the history of changes made to the present document.

Version	Date	Reference	Description
01	December 2013	SSE-0000100543-1	Document creation
02	February 2014	2014_0000000606-V1	Minor updates, GPIO wiring update
03	May 2014	2014_0000000606-V2	Precision on installation for UL294 conformity Warning on space reservation in the wall for cable passage Warning on POE module connection SDAC schematic correction Recommendation on proximity of radio product
04	November 2014	2014_0000000606-V3 - Draft	Add UL information
05	February 2015	2014_0000000606-V4	Update wiring information for SDAC motion sensor option (Figure 15: Ground wiring, Figure 39: SDAC wiring)
06	October 2015	2014_0000000606-V5	Authorized User List and banned card list PSE standard clarification
07	November 2015	2014_0000000606-V6	UL294 update Battery life time Default Ethernet configuration
08	January 2017	2014_0000000606-V7	Change default Ethernet configuration to Static IP Update sections Bibliography and Support
09	December 2017	2014_0000000606-V8	Update company name(IDEMIA)
10	November 2018	2014_0000000606-V10	Update with new hardware (connector change)
11	August 2019	2014_0000000606-V11	Update installation section for IP65
12	January 2020	2014_0000000606-V12	Update details about POE option
13	June 2020	2014_0000000606-V13	Update support contacts

Revision History

14	October 2020	2014_0000000606-V14	Disinfection and sanitization recommendations
15	December 2020	2014_0000000606-V15	Documents list update

Table of Content

Warning.....	2
Revision History	3
Section 1 : Introduction	11
<i>MorphoAccess® SIGMA Series Terminal</i>	12
<i>Scope of the document</i>	13
<i>Safety Instructions</i>	14
<i>Wiring Recommendations</i>	15
<i>Caution with battery usage (initial version only)</i>	15
<i>Caution with Power over Ethernet (POE) usage</i>	15
<i>Europe information</i>	15
<i>USA information</i>	16
<i>Canada information</i>	17
<i>UL information</i>	17
<i>RFID information</i>	18
<i>Disposal of waste equipment by users</i>	18
<i>Recommendations for terminal implementation</i>	19
Section 2 : General Description	22
<i>Box opening</i>	23
<i>Components of the initial package (initial version)</i>	24
<i>Components of the initial package (Revision 2)</i>	25
<i>Terminal's front view description</i>	26
<i>Terminal's rear view description (initial version)</i>	27
<i>Terminal's rear view description (Revision 2)</i>	28
<i>MorphoAccess® SIGMA Series Technical Characteristics</i>	29
Section 3 : Installation Procedure	31
<i>Before proceeding to the installation</i>	32
<i>Installation</i>	33
<i>Required tools (not supplied)</i>	33
<i>Equipment from the initial package to use</i>	33
<i>Step by step procedure</i>	34
Section 4 : Electrical Interface	39
<i>Wiring overview</i>	40
<i>Power Supply</i>	43
<i>External Power supply</i>	43
<i>POE (Power Over Ethernet)</i>	44

Output Relay	45
Nominal characteristics of relay	45
Example of connection for electrical door locks.....	46
Tamper Switch	47
Operating principle for the switch	47
Nominal characteristics of switch block.....	47
Wiegand input wiring	48
Wiegand output wiring.....	50
The controller supports neither LED1 nor LED2 signals	51
The controller supports only LED1 signal	51
The controller supports LED1 and LED2 signals	52
Serial port wiring.....	53
DataClock Input.....	53
DataClock Output.....	55
RS485	56
RS422	57
GPIO wiring	58
Single Door Access Control (SDAC) implementation	60
Ethernet connection.....	61
Default Ethernet configuration	61
Recommendations for RJ45 wiring	62
External USB connection	63
Wi-Fi™ / 3G dongle installation	64
Micro SD connection	65
Battery (initial version only).....	66
Section 5 : User Interface.....	67
Modes for controlling access rights	68
Introduction.....	68
Identification mode.....	68
Authentication (verification) mode.....	68
Multi-factor mode.....	69
Proxy mode	69
External database mode (also called polling mode).....	69
Configuring the terminal.....	71
MorphoAccess® 500 or J Series legacy mode.....	71
Bioscrypt 4G Series legacy mode	71
MorphoAccess® SIGMA Series native mode.....	72
Anti-tamper / anti-pulling switches	73
Section 6 : Accessories, Software Licenses and PC Applications	74

<i>Compatible Accessories, Licenses and Software</i>	75
<i>Compatible PC applications</i>	76
Section 7 : Recommendations	77
<i>Notice</i>	78
<i>General precautions</i>	78
<i>Areas containing combustibles</i>	78
<i>Specific precautions for terminals equipped with a contactless smartcard reader</i>	78
<i>Ethernet connection</i>	78
<i>Date / Time synchronization</i>	78
<i>Cleaning precautions</i>	79
<i>Disinfection and sanitization recommendations</i>	79
<i>Legacy mode</i>	79
<i>Micro SD card</i>	81
<i>Lighting conditions for face detection</i>	82
<i>Main principles</i>	84
<i>Most useful areas for biometric data</i>	85
<i>Position of finger</i>	86
<i>Finger height</i>	86
<i>Finger angle</i>	86
<i>Finger inclination</i>	87
<i>Finger rotation</i>	87
<i>Troubleshooting</i>	88
<i>How to get the latest versions of documents</i>	90
<i>Documents concerning the MorphoAccess® terminal</i>	91
<i>Troubleshooting</i>	93
<i>The terminal IP address is unknown or it is not possible to connect to the terminal</i>	93
<i>The sensor is switched off</i>	93
<i>The terminal returns erratic responses to Ping commands</i>	93
<i>Technical Support and Hotline</i>	94
<i>North America</i>	94
<i>South America</i>	94
<i>Asia, Pacific:</i>	94
<i>Europe, Middle-East, Africa:</i>	94
<i>Web site</i>	94

Table of Content

Annex 1 : Finger Placement Recommendations	83
Annex 2 : Bibliography.....	89
Annex 3 : Support	92

Table of Figures

Figure 1: Implementation Recommendations	20
Figure 2: Box Opening	23
Figure 3: Box Content (initial version)	24
Figure 4: Box Content (Revision 2).....	25
Figure 5: MorphoAccess® SIGMA Series terminal front view.....	26
Figure 6: MorphoAccess® SIGMA Series terminal rear view (initial version)	27
Figure 7: MorphoAccess® SIGMA Series terminal rear view (Revision 2)	28
Figure 8: Removing wall frame and screw	32
Figure 9: Face camera viewing angle	34
Figure 10: Drilling template	35
Figure 11: Wall plate preparation for water tightness	36
Figure 12: Wall plate fixing (initial version)	36
Figure 13: Wall plate fixing (Revision 2).....	37
Figure 14: Cabling preparation	37
Figure 15: Ground wiring	40
Figure 16: Cabling layout (initial version)	41
Figure 17: Cabling layout (Revision 2).....	42
Figure 18: Power supply wiring (initial version).....	43
Figure 19: Power supply wiring (Revision 2).....	43
Figure 20: Output relay wiring (initial version).....	45
Figure 21: Output relay wiring (Revision 2)	45
Figure 22: Example of electric latch connection.....	46
Figure 23: Tamper switch wiring (initial version).....	47
Figure 24: Tamper switch wiring (Revision 2).....	47
Figure 25: Wiegand input wiring (initial version).....	48
Figure 26: Wiegand input wiring (Revision 2).....	49
Figure 27: Wiegand output wiring (initial version)	50
Figure 28: Wiegand output wiring (Revision 2)	51
Figure 29: Serial port wiring – DataClock (initial version).....	53
Figure 30: Serial port wiring – DataClock (Revision 2).....	54
Figure 31: Serial port wiring – DataClock (initial version).....	55
Figure 32: Serial port wiring – DataClock (Revision 2).....	55
Figure 33: Serial port wiring – RS485 (initial version).....	56
Figure 34: Serial port wiring – RS485 (Revision 2)	56
Figure 35: Serial port wiring – RS422 (initial version).....	57
Figure 36: Serial port wiring – RS422 (Revision 2)	57
Figure 37: GPIO wiring (initial version)	58
Figure 38: GPIO wiring (Revision 2)	59
Figure 39: SDAC wiring (initial version).....	60
Figure 40: SDAC wiring (Revision 2)	60
Figure 41: Direct Point to Point Ethernet Connection	62

Table of Figures

Figure 42: RJ45 wiring	62
Figure 43: External USB connection.....	63
Figure 44: Wi-Fi™ / 3G dongle installation	64



Section 1 : Introduction

MorphoAccess® SIGMA Series Terminal

Congratulations for choosing a MorphoAccess® SIGMA Series Automatic Fingerprint Recognition Terminal.

MorphoAccess® SIGMA Series provides an innovative and effective solution for access control applications using Fingerprint Verification or/and Identification.

Among a range of alternative biometric technologies, the use of finger imaging has significant advantages: each finger constitutes an unalterable physical signature, developed before birth and preserved until death. Unlike DNA, a finger image is unique to each individual - even identical twins.

MorphoAccess® SIGMA Series integrates Morpho image processing and feature matching algorithms. This technology is based on lessons learned during 25 years of experience in the field of biometric identification and the creation of literally millions of individual fingerprint identification records.

We believe you will find the MorphoAccess® SIGMA Series fast, accurate, easy to use and suitable for physical access control.

The MorphoAccess® SIGMA Series offers the following advantages:

- high quality optical sensor (IQS quality sensor),
- supports multiple input/output interfaces used in the physical access control industry,
- Local Area Network interface for easy interaction with other host systems ; LAN and WLAN possibilities (Wi-Fi™ and 3G as an option),
- compact size for easy installation and integration into your available office space,
- intuitive man machine interface with touch panel and display, that is easy to use in both setup and operational modes,
- open architecture, with dedicated applications implemented via MorphoAccess® SIGMA Series Software Development Kit.

To ensure the most effective use of your MorphoAccess® SIGMA Series terminal, we recommend that you read this Installation Guide completely.

Scope of the document

This guide deals with the installation of MorphoAccess® SIGMA Series.

This guide addresses 2 version of the product referred as Initial Version and Revision 2 (new connector, no removable battery).

The MorphoAccess® SIGMA Series is made up of following list of products:

		Biometrics	Contactless smartcard reader			Water Resistant	Regulatory Model Number (for Revision 2 only) *
			iCLASS®	MIFARE® DESFire®	Prox®		
MA SIGMA Series	MA SIGMA	✓				✓	MPH-AC003C
	MA SIGMA iClass	✓	✓			✓	MPH-AC003B
	MA SIGMA Multi	✓		✓		✓	MPH-AC003B
	MA SIGMA Prox	✓			✓	✓	MPH-AC003A

(*) The Regulatory Model Number is the main product identifier in the regulatory documentation and test reports associated to the product.

NOTE:

MA means MorphoAccess®

Safety Instructions

 means Direct Current (DC)

The installation of this product should be made by a qualified service Person and should comply with all local regulations.

It is strongly recommended to use a class II power supply at 12V-24V and 1A. min (at 12V) in conformity with Safety Electrical Low Voltage (SELV). The power supply cable length should not exceed 10 meters.

This system must be installed in accordance with the National Electrical Code (NFPA 70), and the local authority having jurisdiction.

This product is intended to be installed with a power supply complying with IEC60950-1, in accordance with the NEC Class 2 requirements; or supplied by a listed IEC60950-1 external Power Unit marked Class 2, Limited Power source, or LPS and rated 12VDC, 1A minimum or 24VDC, 0.5A minimum.

For UL 294 compliance, the units shall be powered by a UL Listed class 2, UL 294 power limited output from a power supply or control panel.

In case of building-to-building connection it is recommended to connect 0V to ground. Ground cable must be connected with the terminal block Power Ground.

Note that all connections of the MorphoAccess® SIGMA Series terminal described hereafter are of SELV (Safety Electrical Low Voltage) type.

For UL294 installation, length of communication (RS422-RS485/Wiegand) and I/Os (GPI/GPO) cables must not exceed 30 meters (98.4 feet).


Wiring Recommendations

IDEMIA recommends using a gauge AWG20 for 12V power supply when POE supply is not used.

The voltage specified is the one measured on the product block connector: 12V-24V (-15% / +10%)

For information, this table shows the maximum drop voltage observed on the terminal MorphoAccess® SIGMA Series:

Gauge AWG	Diameter (mm)	Maximum drop voltage @ 1m (V)	Maximum drop voltage @ 5m (V)	Maximum drop voltage @ 10m (V)
20	0.81	0.03	0.17	0.33
22	0.64	0.05	0.26	0.53
24	0.51	0.08	0.42	0.84

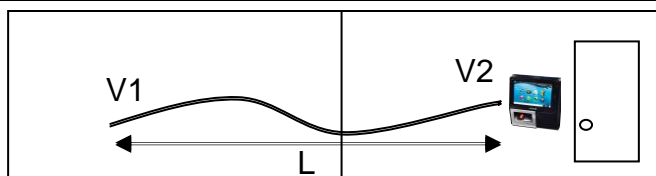

Drop voltage = loss of power due to wire resistance and its length: $V2 = V1 - \text{Drop voltage}$

Caution with battery usage (initial version only)

CAUTION:
RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS



Battery must be an UL certified reference.

Caution with Power over Ethernet (POE) usage



After use, the temperature of the POE module (optional) may be high: after power cut off, wait 5mn before working on connectors area.

Europe information

IDEMIA hereby declares that the MorphoAccess® SIGMA Series terminal has been tested and found compliant with following listed standards:

- EMC Directive 2014/30/EU.
- RED Directive 2014/53/EU.
- ROHS Directive 2011/65/EU.

Products with wireless features (EMF)

This product meets the provisions of the EU's Council recommendation 1999/519/EC on the limitation of the exposure of the general public to electromagnetic fields (0 Hz to 300 GHz).

USA information



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Responsible Party:

IDEMIA,
2, place Samuel de Champlain
92400 Courbevoie – France

NOTE: *This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:*

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded cables must be used with this unit to ensure compliance with category B FCC restrictions.

Canada information

WARNING TO USERS IN THE CANADA / ATTENTION POUR LES UTILISATEURS AU CANADA

This device complies with Industry Canada license-exempt RSS standard(s), and with ICES 003 standard for version(s) without RFID reader. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

UL information

This product has been evaluated by UL regarding “UL 294 Access Control System Units ; Six Edition ; Dated May 10, 2013” and “UL 294B Power Over Ethernet (POE) Power Sources for Access Control Equipment” First Edition Dated May 10, 2013” on the following functionality

Biometric Access granted/ Access Denied
Pin Code Access granted/ Access Denied
Actuation of the onboard Relay 1/2 (Based on Valid Access Credential) Prox™, MIFARE™, iCLASS™
GPIO Output was verified
GPIO Input was verified.
RS422/RS485; Wiegand and Ethernet communication were verified with a supplemental computer employing the vendor’s proprietary software MBTB. UL version 2.0.4.0. For UL Installations only wiegand is to be used.

UL 294 Performance levels:

Access Control Line Security Level	Destructive Attack Level	Endurance Level	Stand-by Power Level	Conditions
Level I	Level I	Level IV	Level I	NA

Please note that the following functions have not been evaluated by UL LLC

USB ports and its functionality
LOGS ; 3G (Cellular) Key functionality
Video/ Facial Recognition/Audio functions
FIPS 201 Personal identification verification features of this unit
NFC on this product (Near Field Technology)
The following Communication: Wi-Fi was not verified by UL.

RFID information

Frequency band for RFID 13.56MHz : 13.553–13.567 MHz

Associated RF power: 2.8dBμA/m at 10m

Frequency band for RFID 125kHz : 119kHz – 135kHz

Associated RF power: -21.1 dBμA/m at 10m

Disposal of waste equipment by users



This symbol means do not dispose of your product with your other household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment.

Recommendations for terminal implementation

Every installation is unique. Sometimes the issues are well defined and can be handled in a standard fashion; sometimes the issues are very specific and may not be immediately recognizable.

IDEMIA recommends following these steps for a successful installation:

- **Plan the installation** - Choose the type of hardware required, decide if a network is required, and decide on the location and number of required terminals.
- **Unpack all items** - Unpack all items and check against the packing list.
- **Install network hardware components** - Install the cabling and components needed to run the system.
- **Install software** - Install the software needed to set up the terminals.
- **Pre-configure device** - Connect the terminals to the Ethernet, supply power to the terminals, and pre-configure the terminals.
- **Mount devices** - Mount the terminals in their final locations
- **Power distribution and device hook up** - Connect the terminals wiring via the back panel.
- **Power-up procedure** - Check the power connections, verify if battery is attached and then start the system safely. First Boot Assistant screen is displayed, where you can perform **fundamental** configuration.

To secure properly an access, IDEMIA recommends installing the MorphoAccess® SIGMA Series terminal as a part of the typical Access Control environment, described in the figure below.

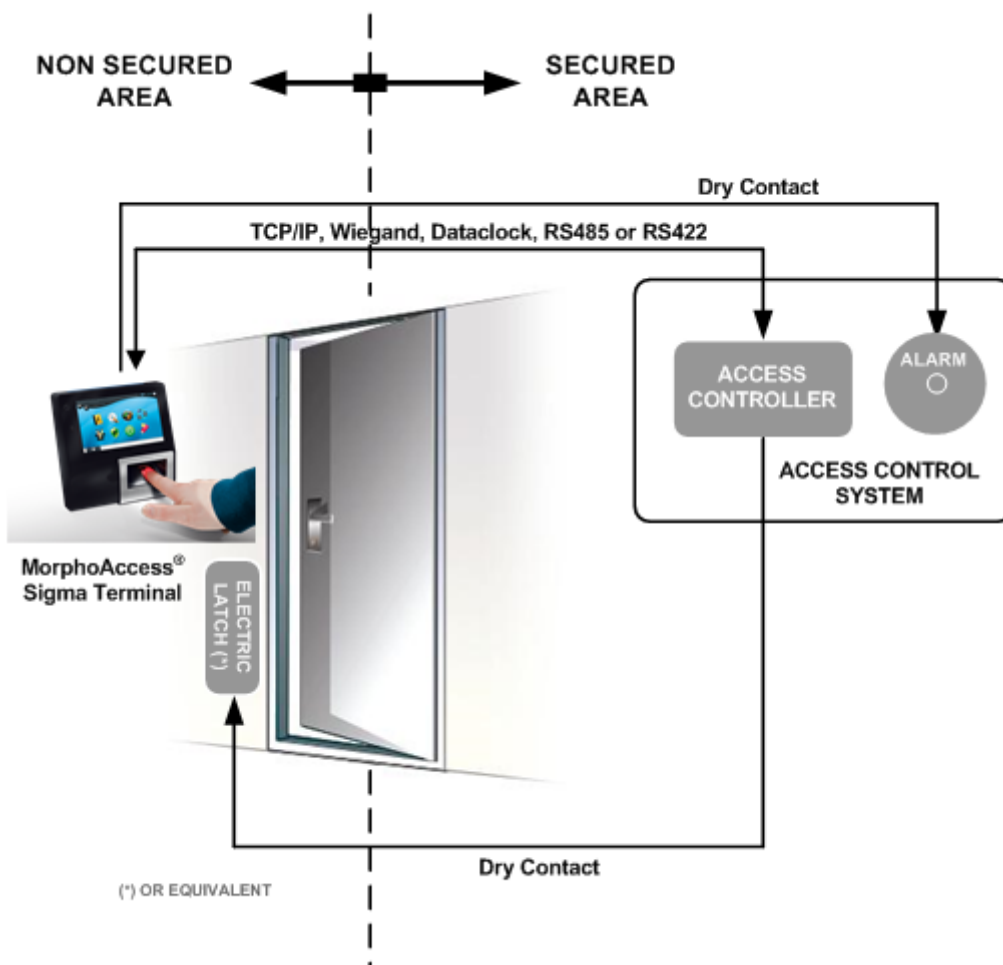


Figure 1: Implementation Recommendations

This environment comprises:

The MorphoAccess® SIGMA Series terminal itself

Its role is to perform one-to-many biometric identification or one-to-one biometric verification, i.e. to identify the individual who is presenting his finger on the terminal sensor by comparing his biometric data with the references previously stored in the terminal database (in the form of biometric templates) or to verify his identity using the reference stored in a contactless card presented to the terminal.

An Access Controller (3rd party product)

The Controller is the element which controls the access rights of the individuals to the secured area. For that reason, it must be located in the secured area.

The individuals who are authorized to access the secured area have their User ID listed in a so-called "Authorized User List" (in contrast with a banned card list).

The MorphoAccess® SIGMA Series terminal and the Controller are communicating according to one of the TCP/IP, Wiegand, Dataclock or RS485 protocols:

- The MorphoAccess® SIGMA Series terminal sends User ID to the Controller
- The Controller sends its decision to the MorphoAccess® SIGMA Series terminal (which displays access granted or access denied depending on the answer)
- The MorphoAccess® SIGMA Series terminal sends an alarm signal to the Controller as soon as a malicious operation is detected (terminal pulled out from the wall or opened for maintenance operations); refer the paragraph dealing with anti-pulling and anti-tamper switches for more explanations.

The Controller is part of the global Access Control System of the secured area, which for instance can administrate the Authorized User List of the Controller and receive diaries of the decisions taken by the Controller.

An Alarm (3rd party product)

This element is connected to the MorphoAccess® SIGMA Series terminal through a dry contact.

The MorphoAccess® SIGMA Series terminal sends the command to activate the Alarm as soon as a malicious operation (terminal pulled out from the wall or having its bottom cover opened out of maintenance operations) is detected; refer the paragraph dealing with anti-pulling and anti-tamper switches for more explanations.

A Door Electric Latch or equivalent (3rd party product)

This element once activated opens the access. The Controller is the one which sends the command to activate the latch if access is granted (i.e. if the individual's User ID is listed in the Controller Authorized User List). Connection between these two elements is done through a dry contact.



Section 2 : General Description

Box opening

At the box opening, components shall be extracted from the protection casing as depicted in the pictures below.

Extract the wall plate (which is not screwed to the terminal) and keep it separate until the installation of the terminal is completed. The screwing of the product to the wall plate is the last stage of the installation.

The protection accessory provided is optional: it is recommended for outside installation (to protect biometric module against water)



Figure 2: Box Opening

Components of the initial package (initial version)

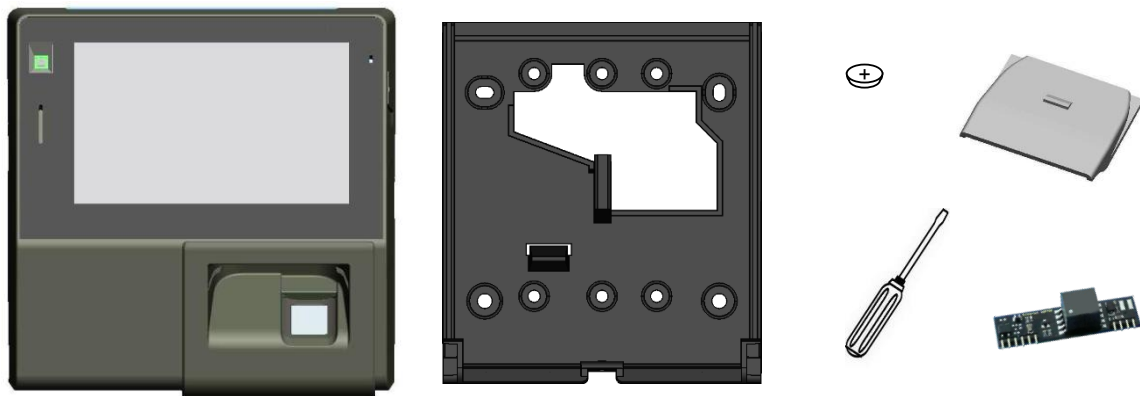


Figure 3: Box Content (initial version)

1. One (1) Terminal's body
2. One (1) Wall frame
3. One (1) Battery
4. One (1) Protection accessory (for WR products only, which usage is optional)
5. One Screw driver
6. One POE module

Components of the initial package (Revision 2)

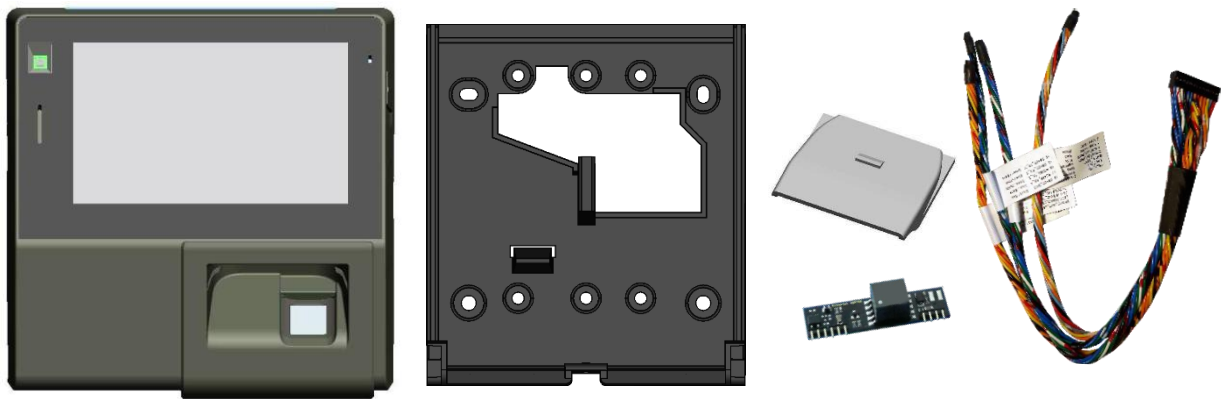


Figure 4: Box Content (Revision 2)

1. One (1) Terminal's body
2. One (1) Wall frame
3. One (1) Protection accessory (for WR products only, which usage is optional)
4. One POE module
5. One Connection cable

Terminal's front view description

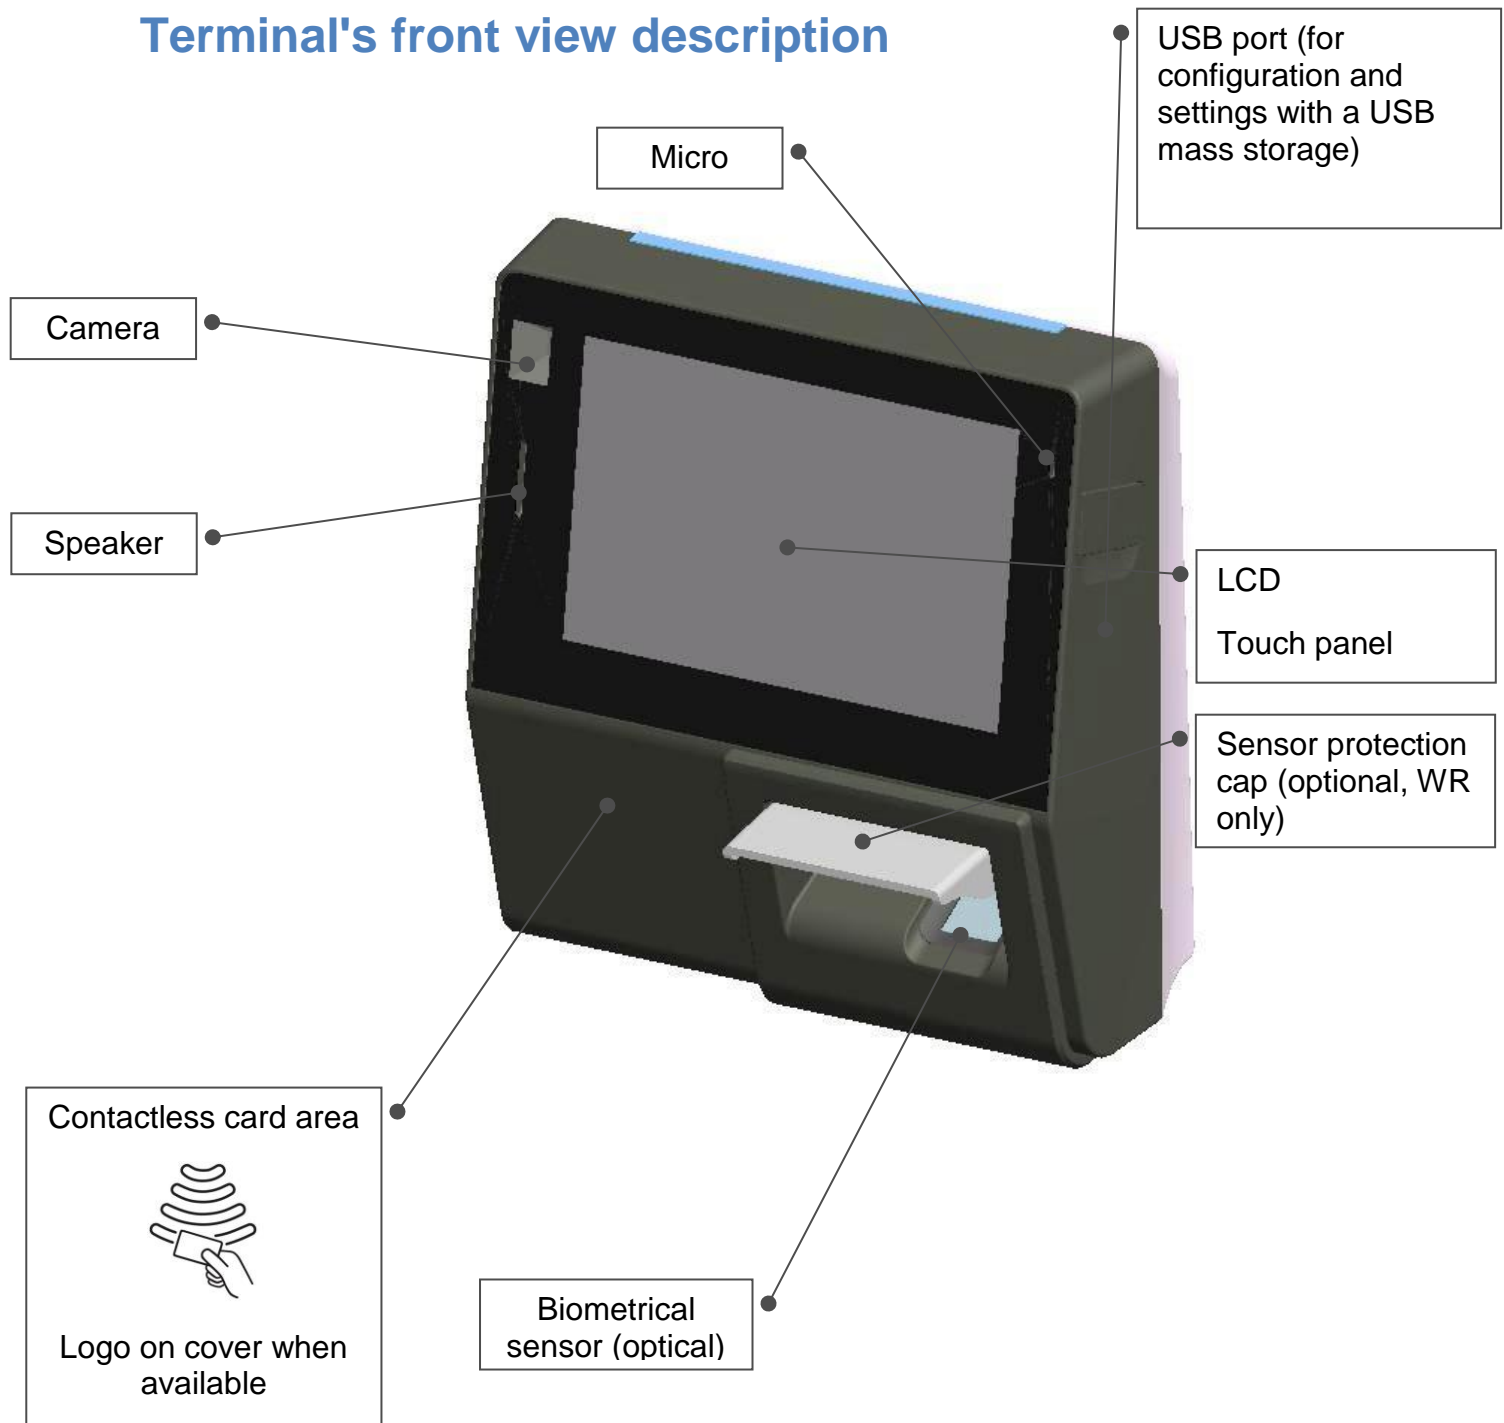


Figure 5: MorphoAccess® SIGMA Series terminal front view

Terminal's rear view description (initial version)

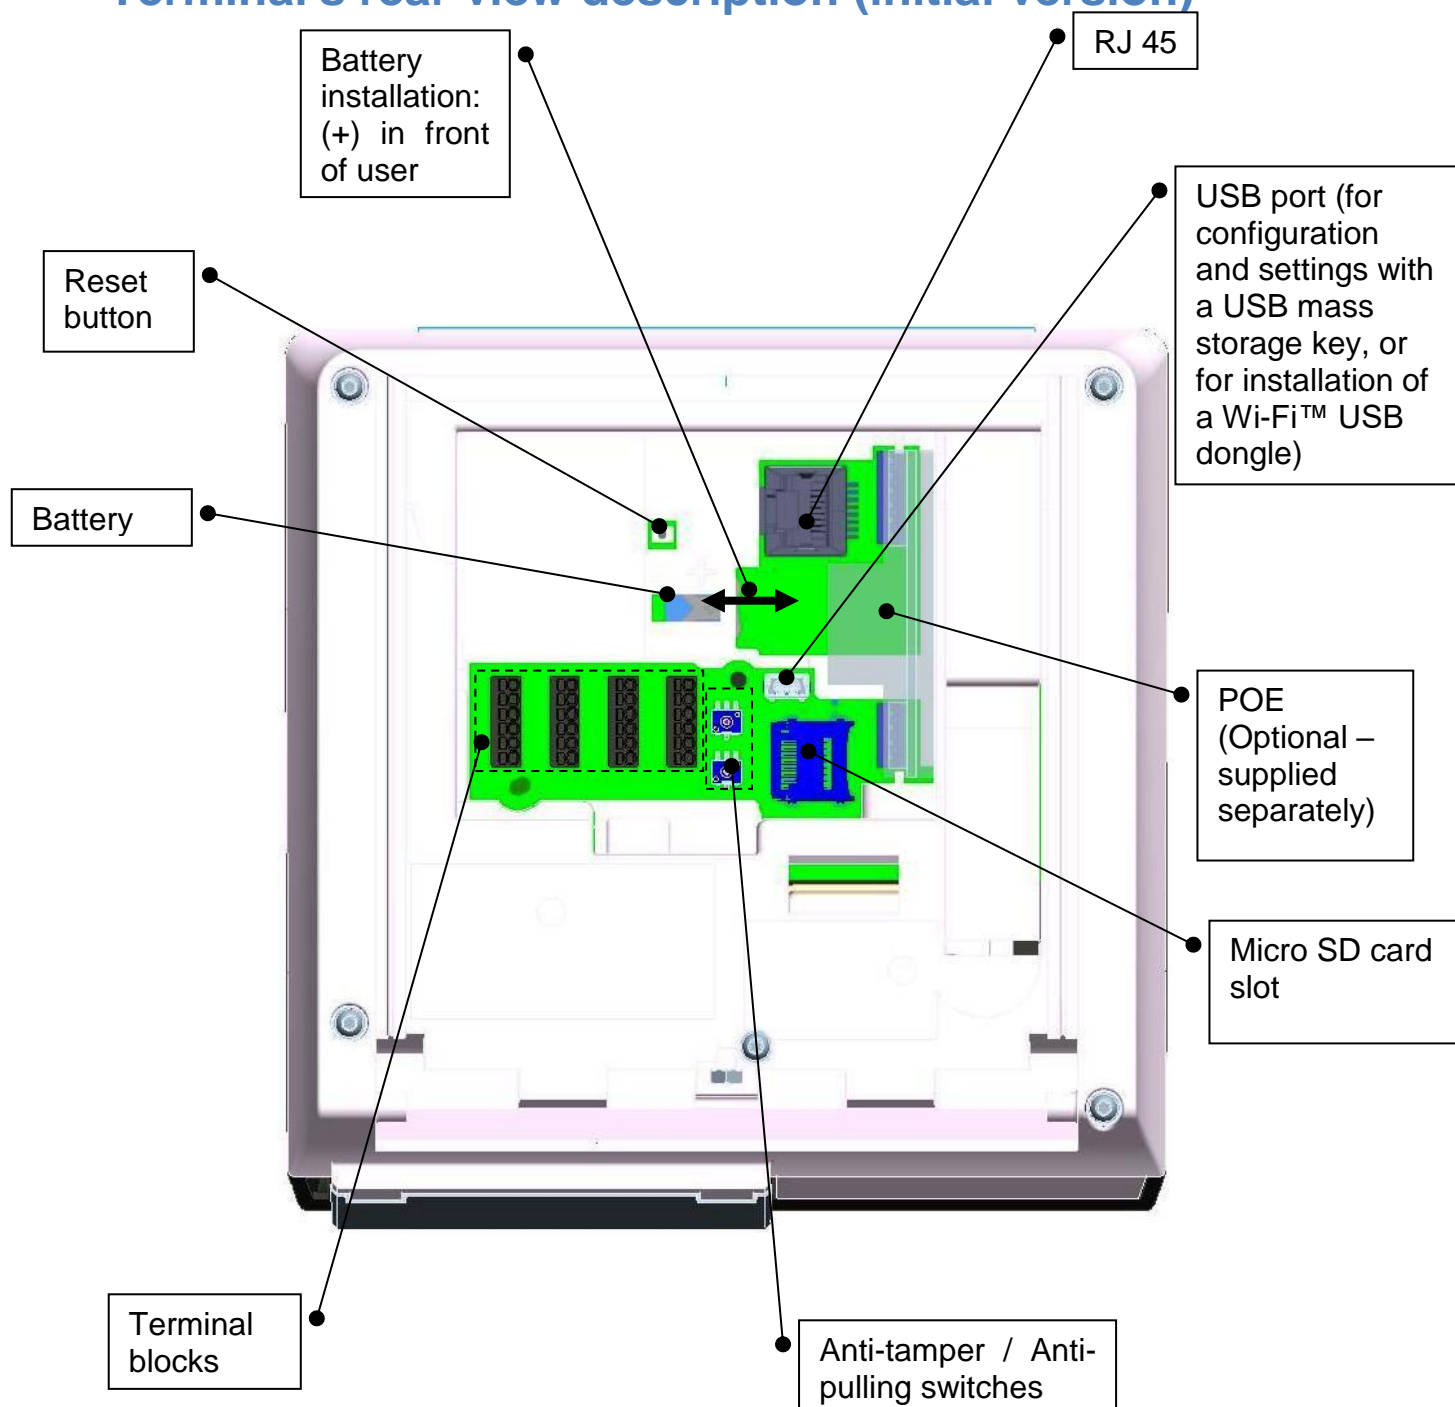


Figure 6: MorphoAccess® SIGMA Series terminal rear view (initial version)

Terminal's rear view description (Revision 2)

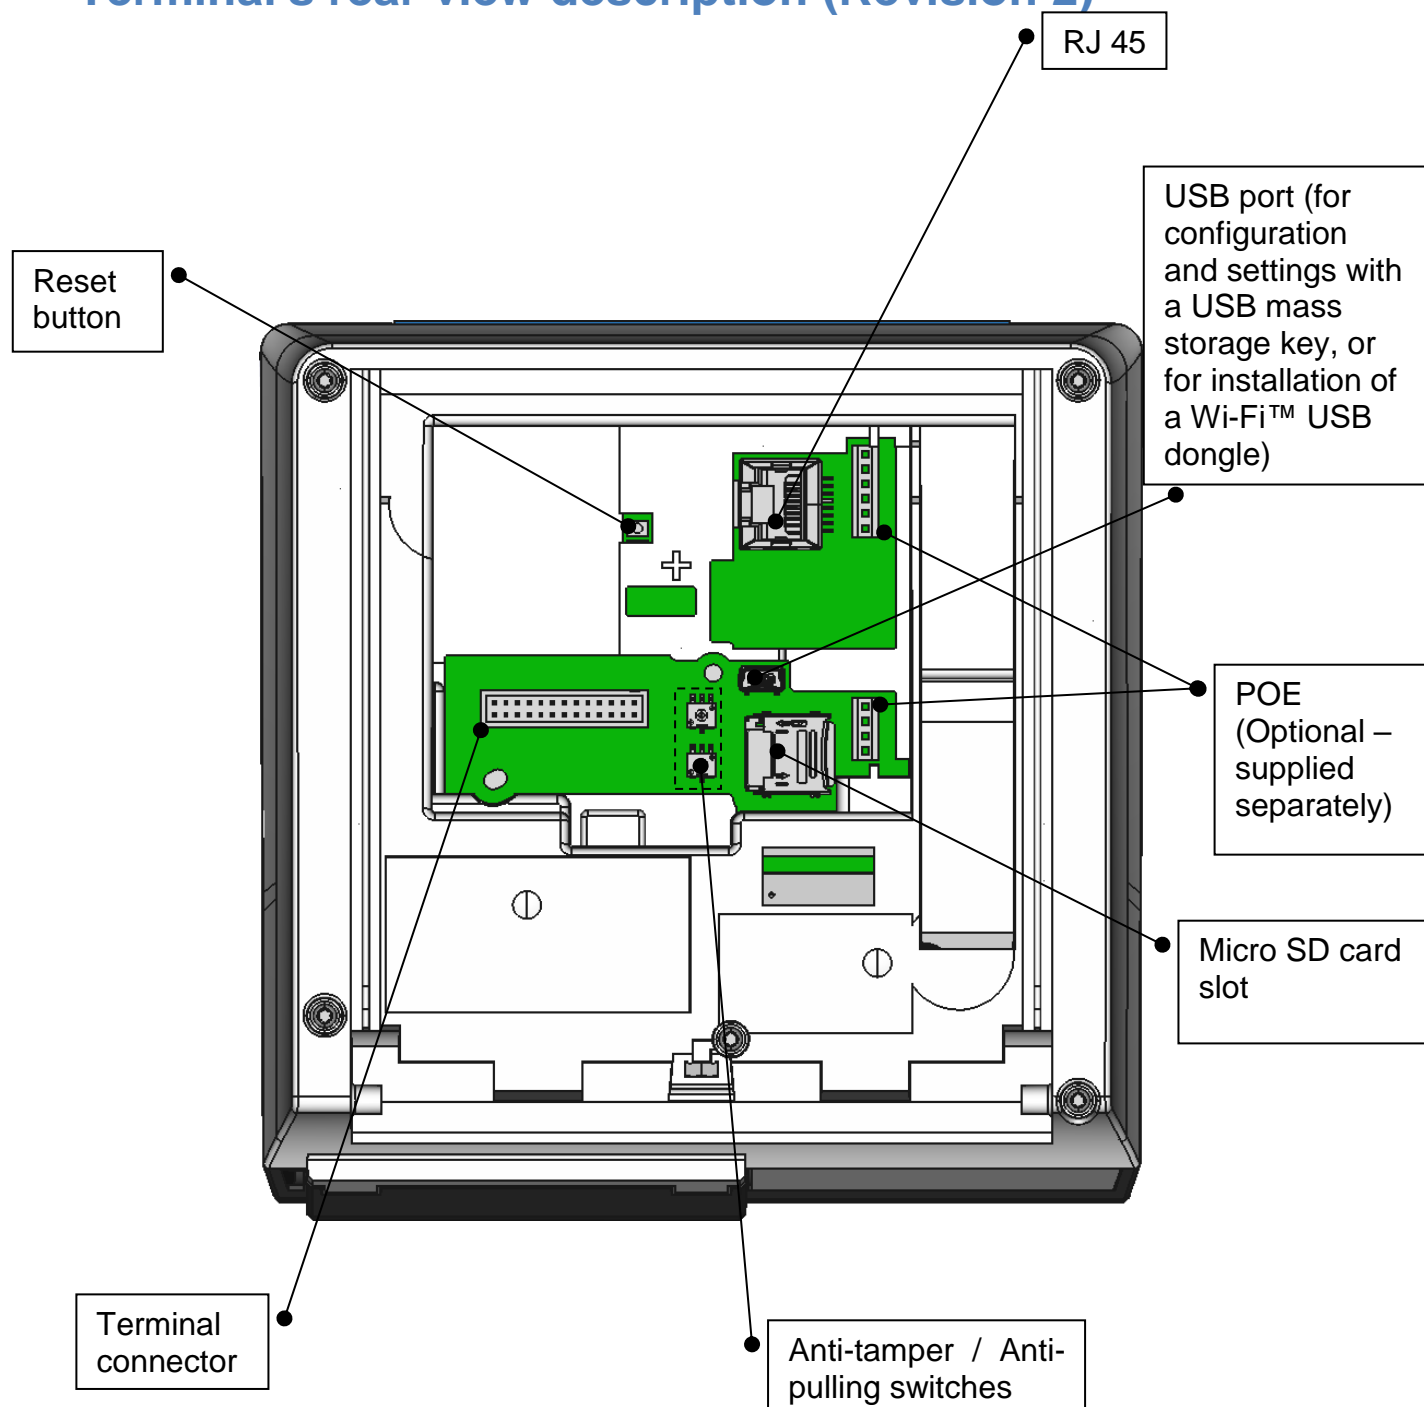


Figure 7: MorphoAccess® SIGMA Series terminal rear view (Revision 2)

MorphoAccess® SIGMA Series Technical Characteristics

Item	Description
Access control modes	Identification (search for fingerprint in a local database)
	Authentication with contactless smartcard, with or without fingerprint check (only if terminal is equipped with a contactless smartcard reader)
	Multi-factor: identification or authentication (only if terminal is equipped with a contactless smartcard reader)
	Proxy: the access control check is fully driven by a remote system
Man Machine Interface	5" WVGA color Touch-screen
	VGA camera for face image capture and videophone
	Loudspeaker & Microphone
Biometrics	Morpho Compact Biometric Module inside: 500dpi, 256 gray levels optical sensor. FBI PIV IQS quality sensor.
	False Acceptance Rate (FAR) adjustable from 1% down to 10-7%
	Database capacity: 3,000 users (standard) and up to 100 000 users (with specific license and Micro SD card in the terminal).
Log capacity	100 000 records (standard) and up to 1 000 000 (with specific license and Micro SD card in the terminal)
LAN/WLAN connection	For terminal configuration and data transfer: Ethernet 10/100 Base T (MDI, MDI-X) Or Wi-Fi™ Wireless LAN (option), WEP, WPA (PSK) and WPA2 (PSK) encryption available Either TCP, SSL or TLS protocol
RFID cards (depending on product version)	MIFARE® 1k, 4k MIFARE® PLUS S (SL1, SL3) 2k, 4k
	DESFire® 2k, 4k, 8k
	HID iCLASS® 16kb, 32kb
	HID Prox

Item	Description
Serial port	The serial port supports WIEGAND, DATACLOCK (ISO2), RS422 and RS485 protocols
Output relay switches	Access granted: 1 switch (normally “open”)
USB host port	External port for terminal configuration through a USB mass storage key Internal port to connect an external Wi-Fi™ USB dongle using an adapter cable.
Input signals	LED1/LED2 to activate the access granted relay
Power supply	12 to 24 V DC power supply (1A min @12V) Or RJ45 connector with optional Power Over Ethernet component For UL compliance, the POE (Power Sourcing Equipment) shall be UL 294B Listed as a Limited Power Source Unit. The PSE shall be rated at a minimum of Limited Power Source Rated: 41-57VDC, 1 AMP.
Security of the terminal	Anti-tamper-pulling switches. Tamper-pulling detection: one relay switch ("open" in default state).
Size and weight	W x H x D: 150.5mm x 152.5mm x 57.5mm (5,92" x 6,00" x 2,26") Weight : ~580g
Environmental conditions	Operating temperature -20 °C to + 60 °C (14°F to 131°F)
	Operating humidity 10 % < RH < 80 % (non condensing)
	Storage temperature -25 °C to + 70 °C (-13°F to 158°F)
	Storage humidity 5% < RH < 95 %
	IP65 rated for WR models (once wall-mounted and silicone applied). For UL 294 compliance, the products are rated for indoor use. IP65 was not verified by UL.
	The terminal should be installed in controlled lighting conditions. Avoid direct exposure to sunlight or to UV lights.
Certifications	CE, IEC60950-1, FCC Part 15, RSS210, Issue8 : 2010, RoHS, REACH, WEEE, UL 294 , UL 294B



Section 3 : Installation Procedure

Before proceeding to the installation

- Make sure that you have all the components described in “Components of the initial package” section at your disposal.
- Remove the wall plate. Keep this element at hand.
- Remove the screw at the bottom of the product. Keep this element at hand.

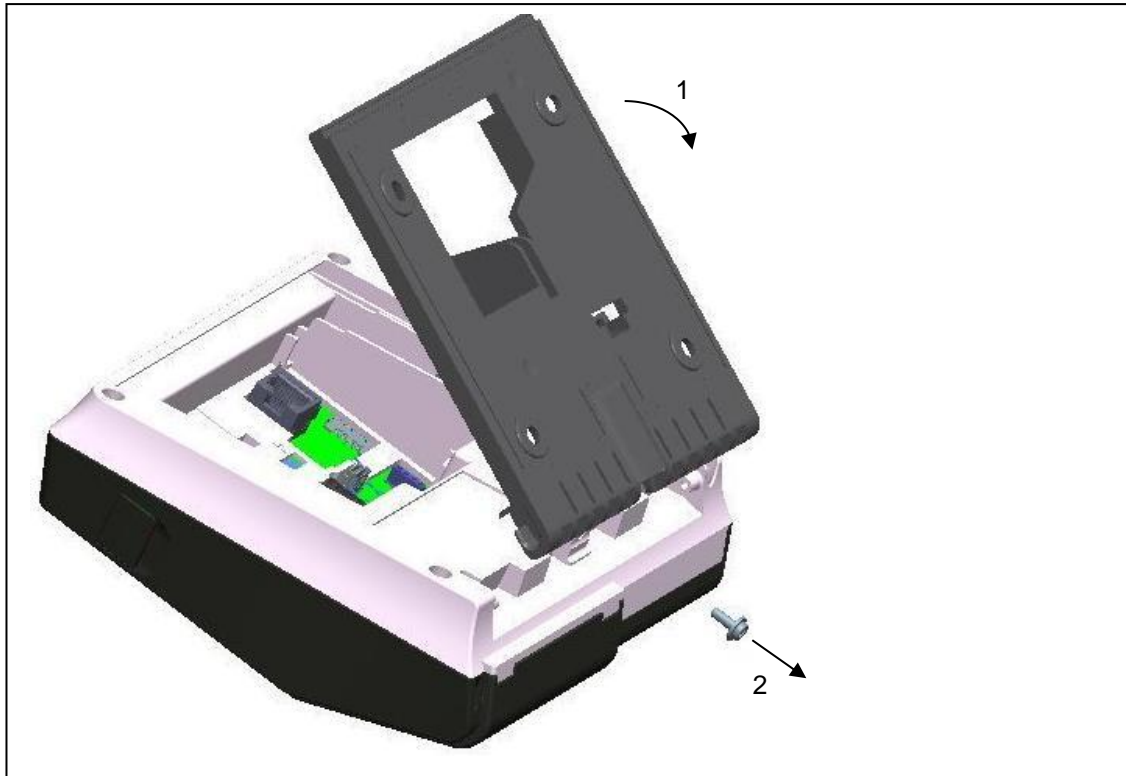


Figure 8: Removing wall frame and screw

It is then possible to fix the terminal on the wall.

The recommended height for fixing of the terminal is 1.40m (camera height).



For an optimal use the terminal must be installed in an area where the lighting conditions are controlled. Avoid direct exposure of the sensor to the sun light and ensure good ambient lighting for face detection if used.

Installation

Required tools (not supplied)

- Four (4) raw plugs + four (4) ø 3.5mm max and length 30mm screws.
 - One (1) screwdriver adapted to screws above.
 - One (1) Drill (with a drill bit diameter adapted to raw plugs above).
 - One (1) hole saw ø 67mm (depending on installation case).
 - One (1) Flat tip screwdriver (0.4x2.0) for block connector cable removal (initial version).
 - A (1) Torx T10 screwdriver
-
- Deadbolt/door strike
 - Snubber diode required to protect regulated DC power supply from inductive kickback (1N4007 diode or equivalent recommended)
 - Separate power supply for the deadbolt/door strike based on supplier's recommendations.
 - External relay (if required)
 - Networking cable

For UL-294 compliance, an earthed screen in the wire or around all wires to/from product is only required when the wires share space/compartment/tube with high voltage cables.

Equipment from the initial package to use

- One (1) Terminal's body.
- One (1) wall plate.

Step by step procedure

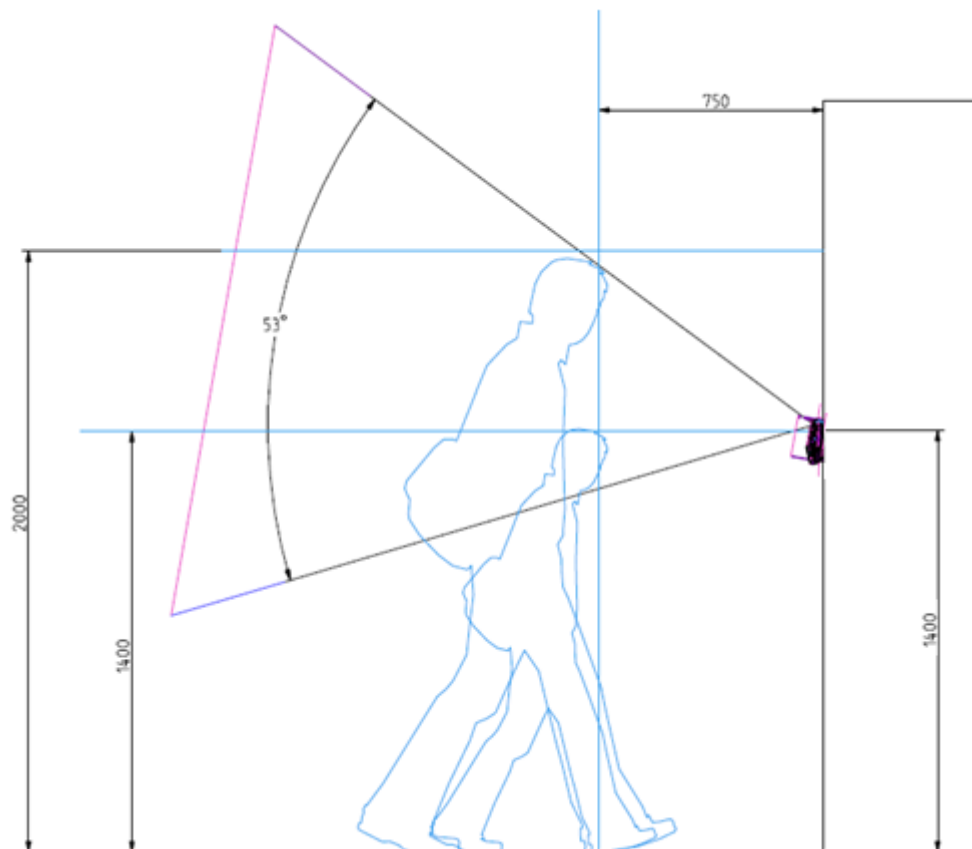


Figure 9: Face camera viewing angle

The recommended height for fixing of the terminal is 1.40m (camera height).



For an optimal use the terminal must be installed in an area where the lighting conditions are controlled. Avoid direct exposure of the sensor to the sun light and ensure good ambient lighting for face detection if used. For face detection, the user has to face the product.



Power supply from electrical source shall be switched off before starting the installation.



The strength of the attachment depends on the solidity of the wall on which the terminal is mounted.



To ensure water tightness, the wall plate has to be sealed with a silicone bead (refer to corresponding picture for process).

Drilling the mounting holes

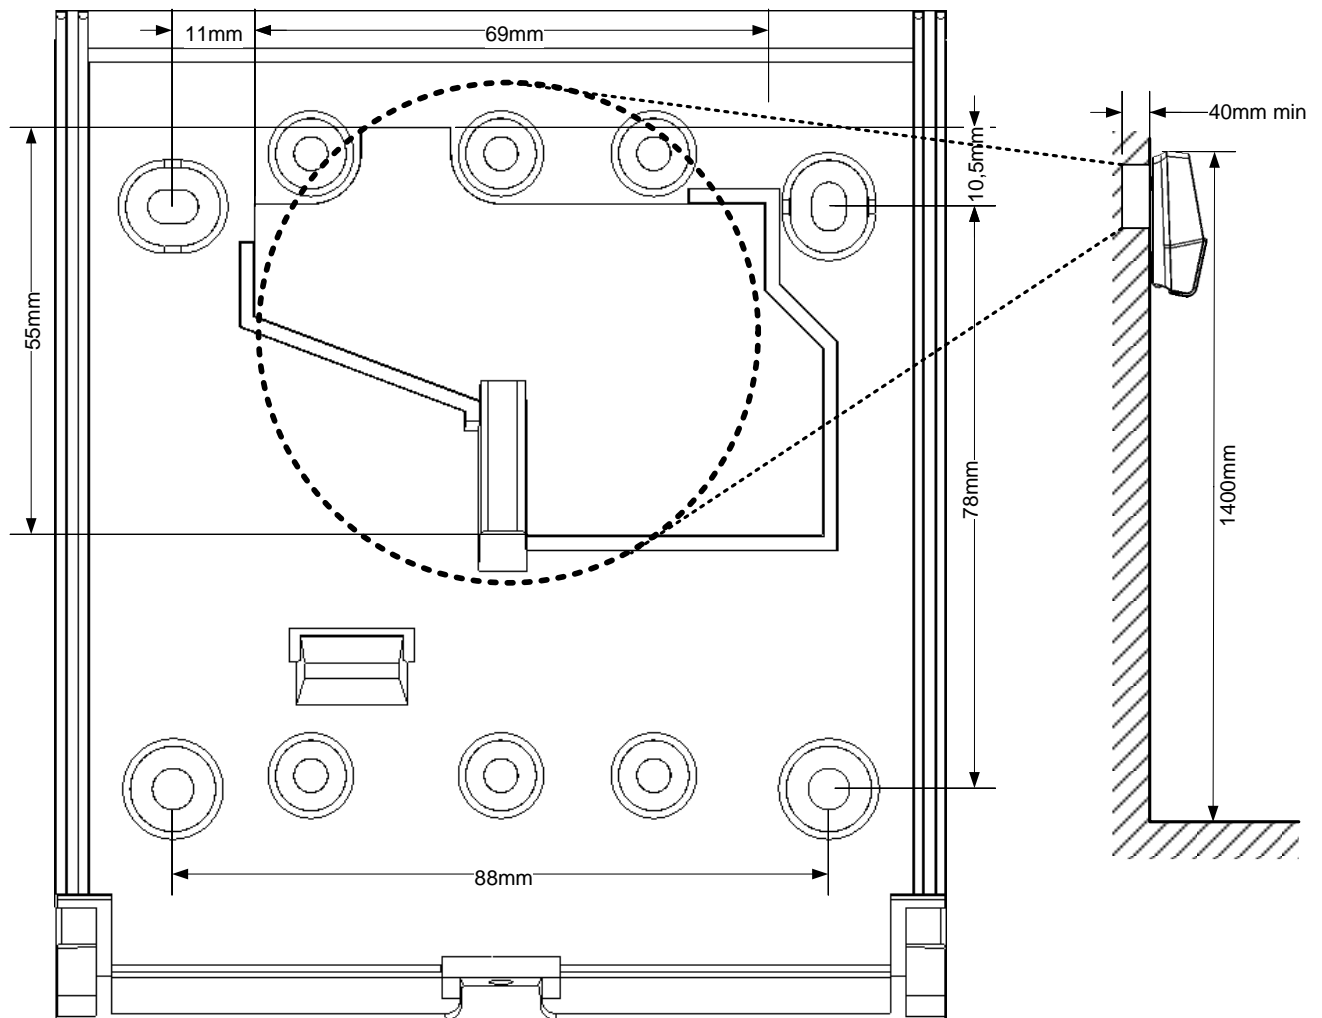


Figure 10: Drilling template

If not present, drill in the wall a hole with a diameter of 67mm (see Figure 10: Drilling template). This template can be found in the Quick Installation Guide).

Confirm the presence inside the hole of all the cables needed for the electrical installation (see Electrical Interface)

Drill in the wall 4 holes with a diameter adapted to screws and fit them with the raw plugs (see Figure 10: Drilling template).

Preparing wall plate

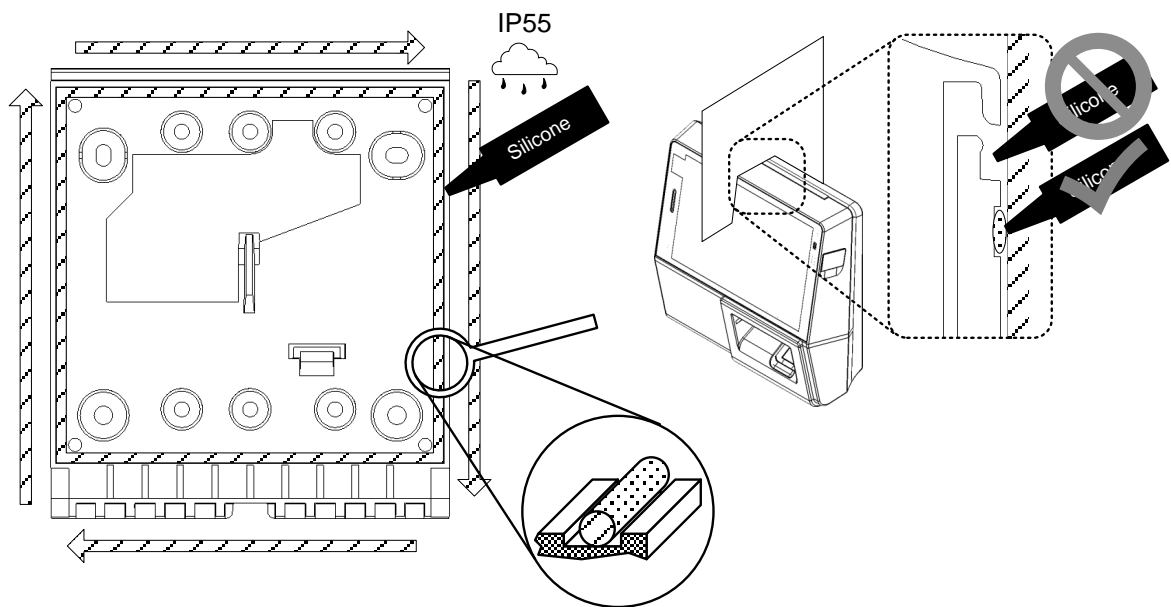


Figure 11: Wall plate preparation for water tightness

Create a silicone bead all along the notch. The silicone bead shall be reduced to avoid overflow on the upper part of the wall plate (risk to prevent product mounting).

Fixing



Be sure that a sufficient space is reserved in the wall for the passage of cables, in particular for Ethernet.

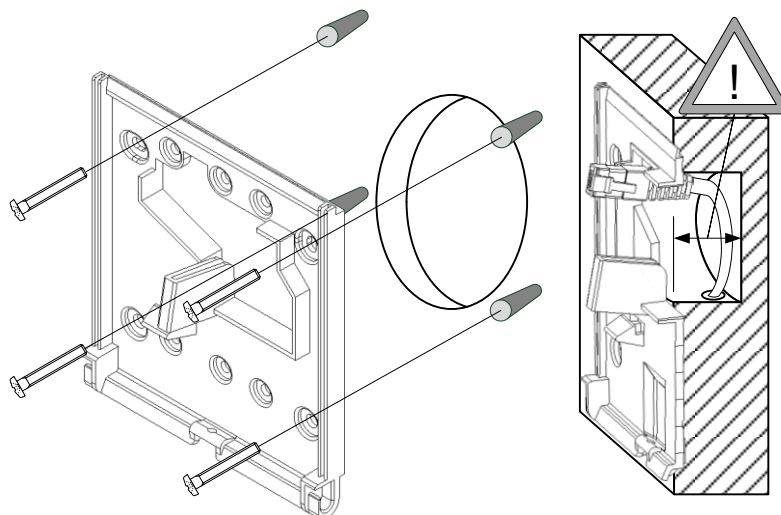


Figure 12: Wall plate fixing (initial version)

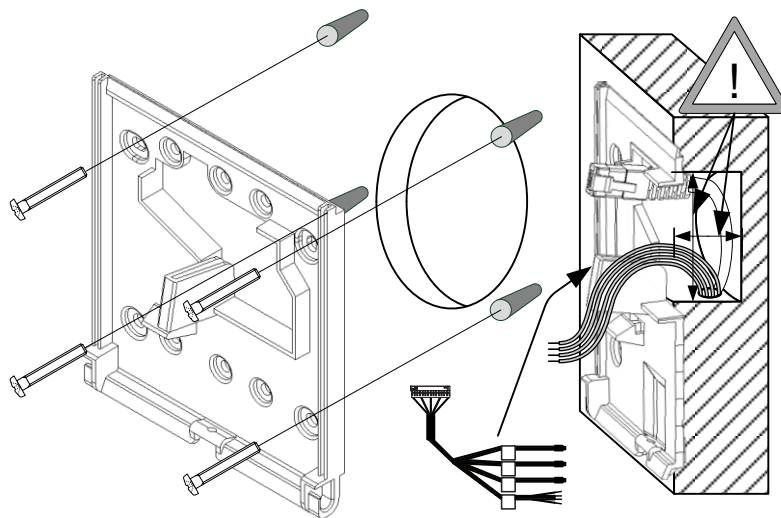


Figure 13: Wall plate fixing (Revision 2)

Place the wall plate against the wall, opposite the four holes pierced in the wall : see Figure 12: Wall plate fixing (initial version) or Figure 11: Wall plate fixing (Revision 2).

Cabling

Cable for wiring shall be AWG 20 to 24, length shall be 12 cm to 15 cm (stripped on 6mm).

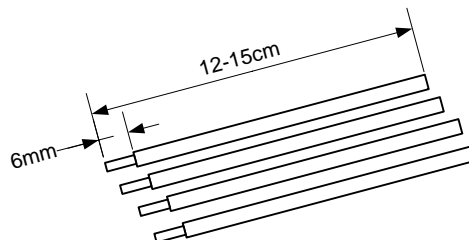


Figure 14: Cabling preparation

For initial version, prefer rigid cable to flexible cable (easier to connect)

Connection details:

Characteristics	min	max
Conductor cross section solid or stranded	0.2 mm ²	0.5 mm ²
Conductor cross section stranded, with ferrule without plastic sleeve	0.25 mm ²	0.5 mm ²
Conductor cross section AWG/kcmil	24	20


Closing

For initial version, don't forget to insert battery before closing product, but power has to be set up just after closing it. If product has to be stored, don't forget to remove the battery.

Lock the product with the lower screw.

IP65 installation upgrade

It is possible to upgrade installation from IP55 to IP65 following the description below.

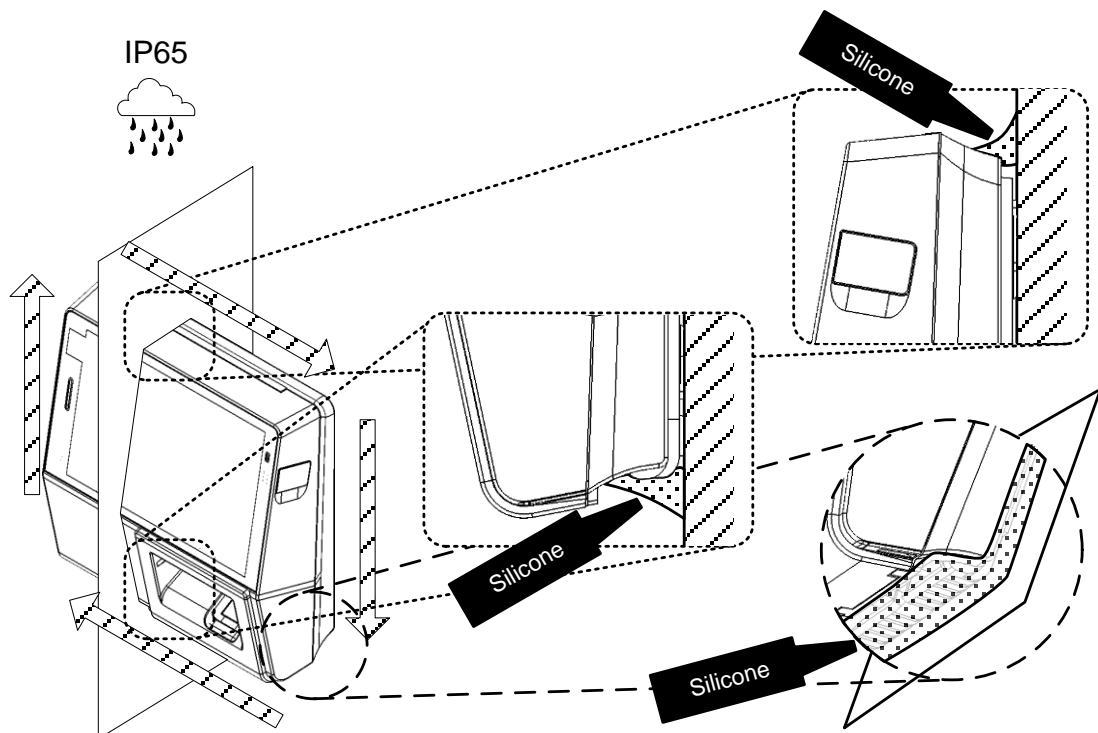



Section 4 : Electrical Interface

Wiring overview



Before proceeding, make sure that the person in charge of installation and connections is properly connected to earth, in order to prevent Electrostatic Discharges (ESD).

In case of more than two digital signals use, digital grounds shall all be wired together outside the product.

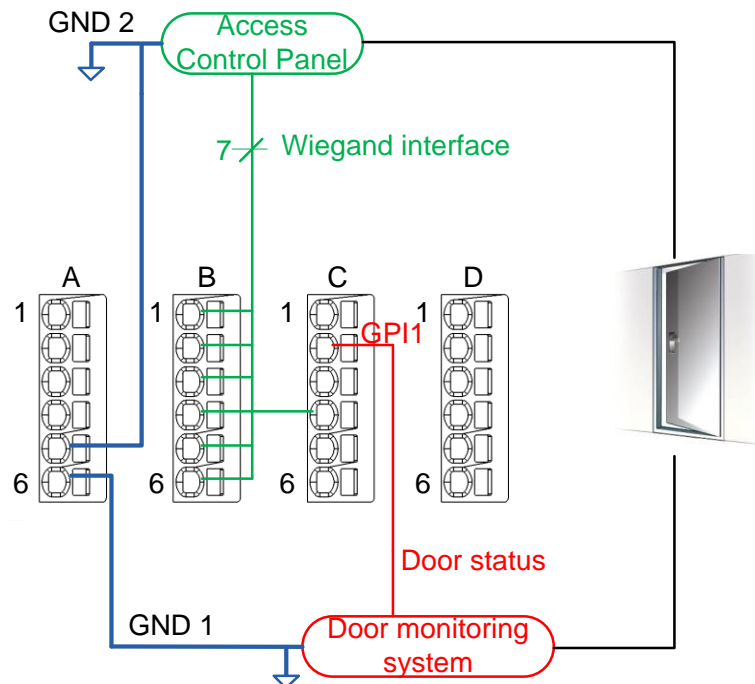


Figure 15: Ground wiring

Note that all connections of the MorphoAccess® SIGMA Series terminal described hereafter are of SELV (Safety Electrical Low Voltage) type.

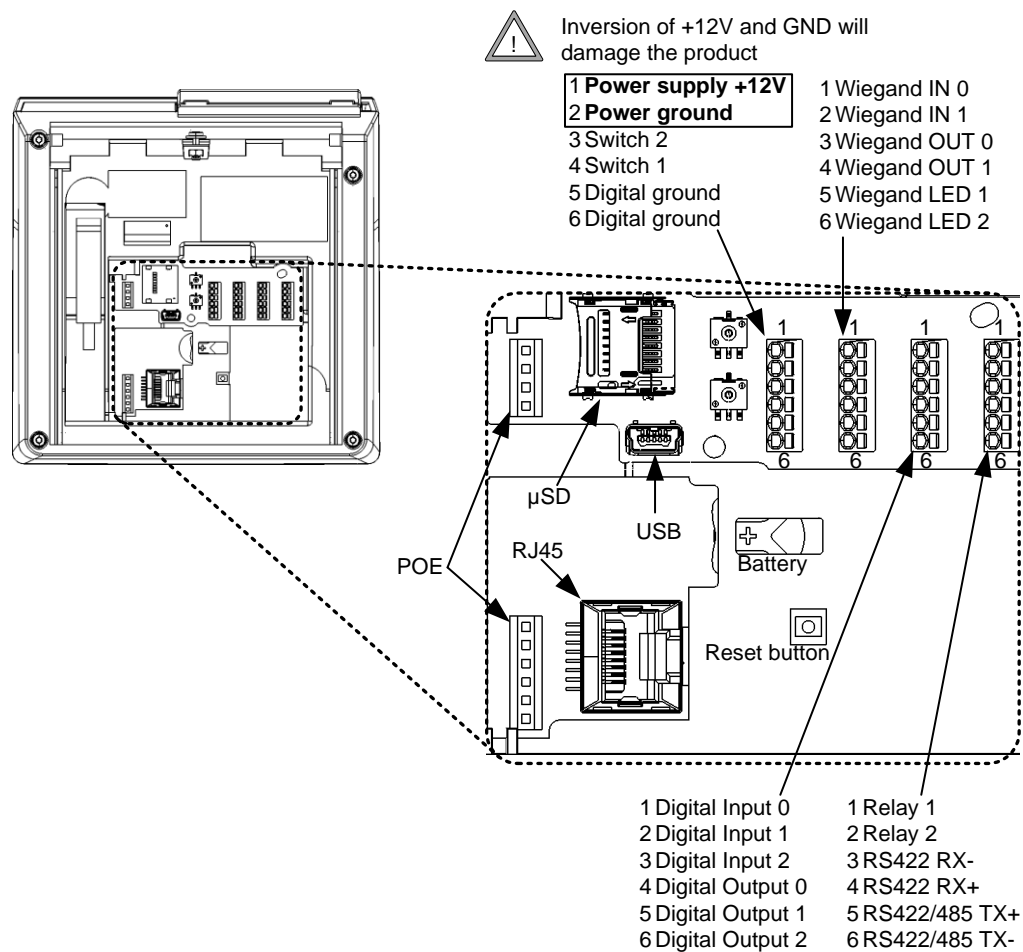


Figure 16: Cabling layout (initial version)

To connect wire to block connector, insert cable in the round hole of the connector.

To remove wire, insert a flat screw driver (0.4x2.0max) in the rectangular hole of the connector and pull the corresponding wire.

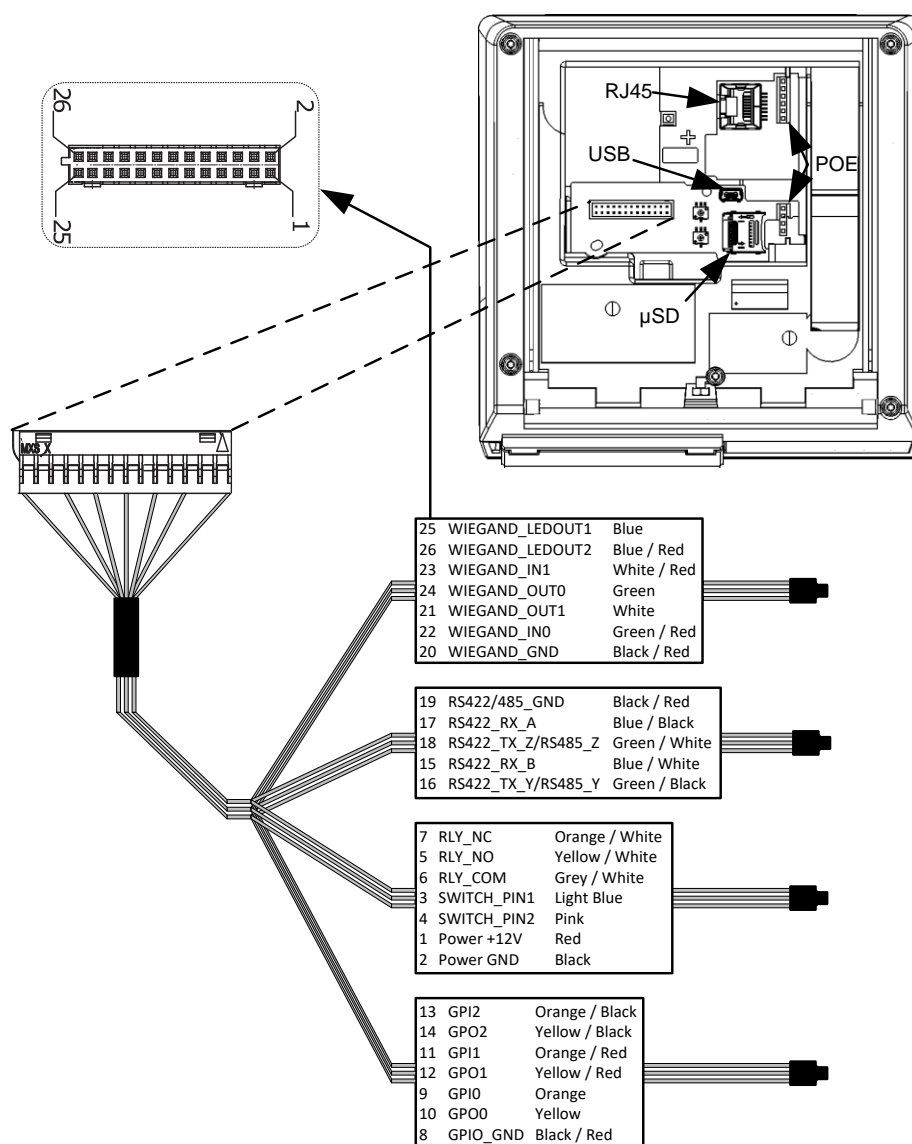


Figure 17: Cabling layout (Revision 2)

Power Supply

POE and external power supply are not used at the same time: if both power supplies are used, priority is given to external power supply. If external power supply is shut down, switch to POE without reboot is not guarantee.

External Power supply

- Must comply with CEE/IEC EN60950 standard.
- 12V to 24V (regulated) 1 Amp min at 12V.
 For UL294, power supply must be UL 294 Listed class 2 power limited output.
- Could be provided by a 12 Volts Wiegand power supply, which complies with the Security Industry Association's Wiegand standard March 1995.



Inversion of +12V and GND will damage the product (initial version)

Initial version

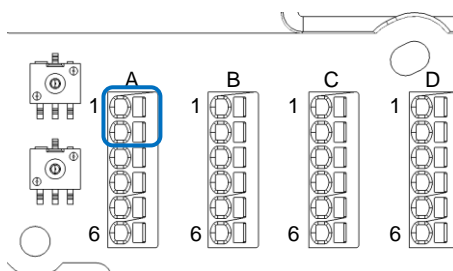


Figure 18: Power supply wiring (initial version)

A	1	Power Supply 12V	In	Positive 12 Volts, power supply
	2	Power ground	In	Ground power supply

Revision 2

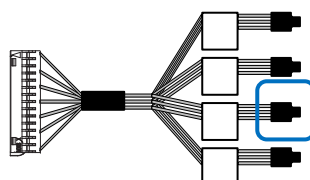




Figure 19: Power supply wiring (Revision 2)

1	Red	Power Supply 12V	In	Positive 12 Volts, power supply
2	Black	Power ground	In	Ground power supply

POE (Power Over Ethernet)

MorphoAccess® SIGMA Series terminal's power supply can also be provided by the Ethernet using RJ45 connection (terminal is compatible with Power Supply Equipment compliants with IEEE802.3af). This mode is only available when the optional POE module (provided in the package) is installed in the product.

Only POE module delivered by IDEMIA (kit reference 293656945) may be installed in the terminal.

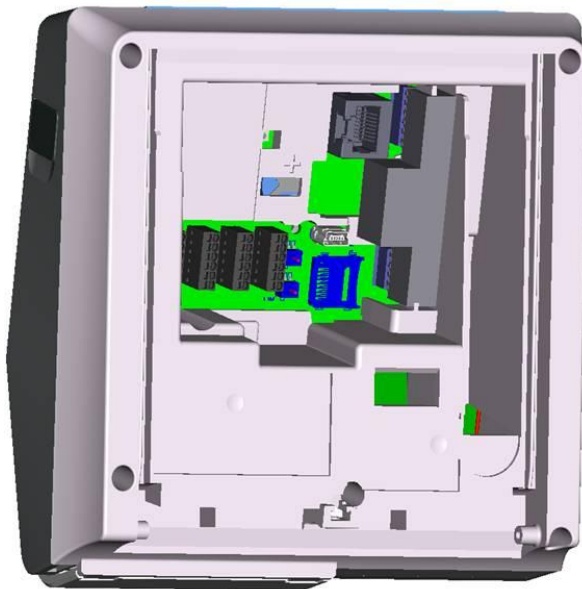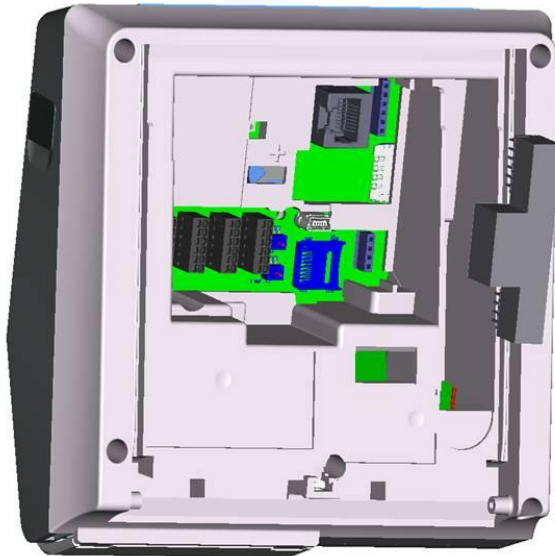

The POE module shall be installed on wall-mounted product. Verify it is well connected before power up.

For UL 294 compliance, Power Source Equipment (PSE) needs to be listed only to:

- UL 294B Power Over Ethernet (PoE) Power Sources for Access Control Systems and Equipment

Output Relay

Initial version

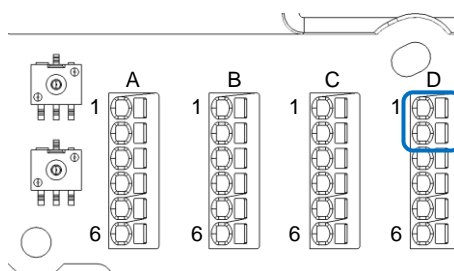


Figure 20: Output relay wiring (initial version)

D	1	Relay 1		Contact relay (normally open)
	2	Relay 2		Contact relay strip

Revision 2

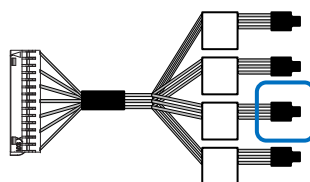


Figure 21: Output relay wiring (Revision 2)

5	Yellow / White	Relay NO		Contact relay (normally open)
6	Grey / White	Relay COM		Contact relay common
7	Orange / White	Relay NC		Contact relay (normally closed)

Nominal characteristics of relay

Load characteristics:

- 2 A max @ 30 VDC (according to the safety extra low voltage requirements independently of the power supply),
- Resistive load or inductive load; see warning information hereafter for inductive load.



Inductive load management requires a parallel diode for a better contact lifetime.

Example of connection for electrical door locks

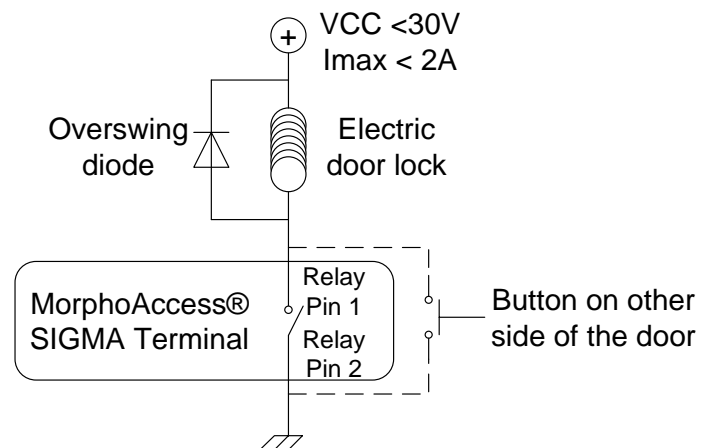


Figure 22: Example of electric latch connection

Tamper Switch

Initial version

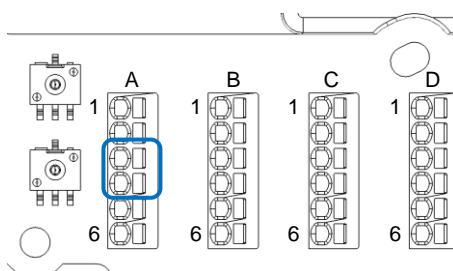



Figure 23: Tamper switch wiring (initial version)

A	3	Switch 1		Tamper switch contact
	4	Switch 2		Strip on tamper switch

Revision 2

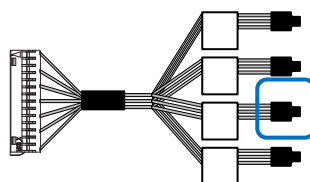



Figure 24: Tamper switch wiring (Revision 2)

3	Light blue	Switch 1		Tamper switch contact
4	Pink	Switch 2		Strip on tamper switch

Operating principle for the switch

- Product installed on the wall plate: switch enabled (contact closed).
- Product opened (rear connectors accessible): switch disabled (contact open).

Nominal characteristics of switch block

100 mA at 30 VDC max (Resistive load) according to the safety extra low voltage standard.



This MorphoAccess® SIGMA Series terminal is part of security system; it is customer's responsibility to connect the tamper switch (contact) to physical access controller, in order to prevent the access to the connector blocks.

Wiegand input wiring

Initial version

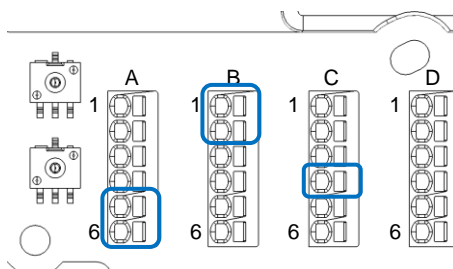


Figure 25: Wiegand input wiring (initial version)

A	5	Digital ground		Ground for Wiegand (connect pin 5 or 6)
	6	Digital ground		Ground for Wiegand (connect pin 5 or 6)
B	1	D0_IN	In	Wiegand IN D0 (Output type required: Open drain or 5V+/- 5%)
	2	D1_IN	In	Wiegand IN D1 (Output type required: Open drain or 5V+/- 5%)
C	4	LED	Out	Wiegand LED OUT 1 (typical = 5V) (option) :



If pull-up's to 12V have been added on D0_IN and D1_IN inputs for MA5XX product, these resistors must be removed to avoid any damage.

Revision 2

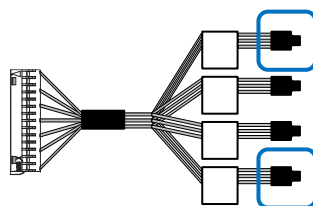


Figure 26: Wiegand input wiring (Revision 2)

20	Black / Red	Digital ground		Ground for Wiegand
22	Green / Red	WIEGAND_IN0	In	Wiegand IN D0 (Output type required: Open drain or 5V+/-5%)
23	White / Red	WIEGAND_IN1	In	Wiegand IN D1 (Output type required: Open drain or 5V+/-5%)
10	Yellow	LED	Out	Wiegand LED OUT 1 (typical = 5V) (option) :



If pull-up's to 12V have been added on D0_IN and D1_IN inputs for MA5XX product, these resistors must be removed to avoid any damage.

Wiegand output wiring

The following figure shows how to cable the wires of the serial port of the terminal for the Wiegand protocol

Initial version

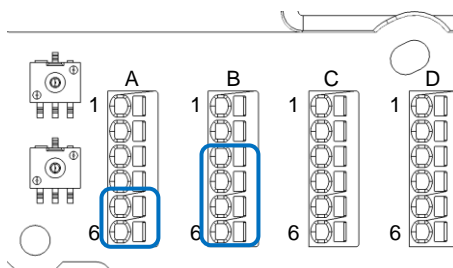


Figure 27: Wiegand output wiring (initial version)

A	5	Digital ground		Ground for Wiegand (connect pin 5 or 6)
	6	Digital ground		Ground for Wiegand (connect pin 5 or 6)
B	3	D0_OUT	Out	Wiegand OUT D0 (5V TTL)
	4	D1_OUT	Out	Wiegand OUT D1 (5V TTL)
	5	LED1	In	Wiegand LED IN 1 (option) : panel feedback (Output type required: Open drain or 5V+/- 5%)
	6	LED2	In	Wiegand LED IN 2 (option) : panel feedback (Output type required: Open drain or 5V+/- 5%)

Revision 2

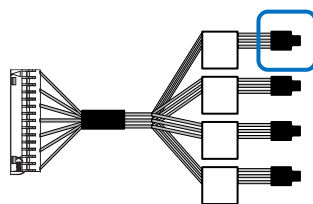


Figure 28: Wiegand output wiring (Revision 2)

20	Black / Red	Digital ground		Ground for Wiegand
24	Green	D0_OUT	Out	Wiegand OUT D0 (5V TTL)
21	White	D1_OUT	Out	Wiegand OUT D1 (5V TTL)
25	Blue	LED1	In	Wiegand LED IN 1 (option) : panel feedback (Output type required: Open drain or 5V+/-5%)
26	Blue / Red	LED2	In	Wiegand LED IN 2 (option) : panel feedback (Output type required: Open drain or 5V+/-5%)

The use of LED1 and LED2 wires is described in the paragraphs below.

The controller supports neither LED1 nor LED2 signals

When the access controller has no relay contact to provide an answer to the MorphoAccess® terminal, then the decision to emit either the “access granted” signal or the “access denied” signal is taken by another way. It is either the MorphoAccess® terminal itself that decide, or it waits for the access controller answer through the local area network (TCP), or on the serial port in (RS422).

It is strongly recommended to disable the LED IN feature, to avoid any interference on MorphoAccess terminal behavior.

The controller supports only LED1 signal

When the access controller has only one relay contact which is dedicated to the “access granted” answer, this one must be connected between the LED1 and GND wires. The LED1 wire is set to the low level by closing the contact between the LED1 and the GND wires, and it means “access granted”.

The MorphoAccess® terminal uses the timeout of the wait for a low level on the on LED1 wire or LED2 wire as “access denied” answer.

To minimize at most the waiting time of the user, the MorphoAccess® SIGMA Series terminal timeout value, must be adjusted to a value a little bit higher than the maximal value of the controller response time.

Warning: if the LED2 wire is connected, it must be constantly maintained in the high state.

The controller supports LED1 and LED2 signals

When the controller supports one relay contact for each of the possible answers then:

- The « access granted » contact must be connected between the LED1 and the GND wires of the terminal
- The « access denied » contact must be connected between the LED2 and the GND wires of the terminal.

The MorphoAccess® terminal considers that:

- The answer of the controller is "access granted", when the controller puts the LED1 wire to the low state (by closing a contact between the LED1 and the GND wires), **and leaves the LED2 wire to the high state.**
- The answer of the controller is "access denied", when the controller puts the LED2 wire to the low state (by closing a contact between the LED2 and the GND wires), **whatever is the state of the LED1 wire.**

The MorphoAccess® terminal also considers that the answer of the controller is "access denied" in case of time-out while expecting for a closure between LED1 and GND wires, or between LED2 and GND wires.

Serial port wiring

DataClock Input

Initial version

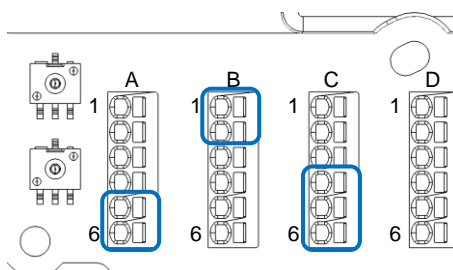


Figure 29: Serial port wiring – DataClock (initial version)

A	5	Digital ground		Ground for Wiegand (connect pin 5 or 6)
	6	Digital ground		Ground for Wiegand (connect pin 5 or 6)
B	1	D0_IN	In	Data (Output type required: Open drain or 5V+/-5%)
	2	D1_IN	In	Clock (Output type required: Open drain or 5V+/-5%)
C	4	Digital Output 0	Out	Card present signal (if configured, only one selectable for Morpho Legacy)
	5	Digital Output 1	Out	Card present signal (if configured)
	6	Digital Output 2	Out	Card present signal (if configured)

Revision 2

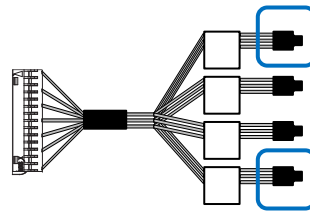


Figure 30: Serial port wiring – DataClock (Revision 2)

20	Black / Red	Digital ground		Ground for Wiegand
22	Green / Red	D0_IN	In	Data (Output type required: Open drain or 5V+/-5%)
23	White / Red	D1_IN	In	Clock (Output type required: Open drain or 5V+/-5%)
10	Yellow	Digital Output 0	Out	Card present signal (if configured, only one selectable for Morpho Legacy)
12	Yellow / Red	Digital Output 1	Out	Card present signal (if configured)
14	Yellow / Black	Digital Output 2	Out	Card present signal (if configured)

DataClock Output

Initial version

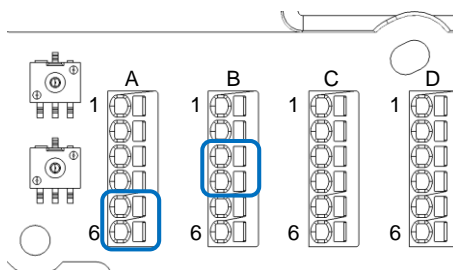


Figure 31: Serial port wiring – DataClock (initial version)

A	5	Digital ground		Ground for Wiegand (connect pin 5 or 6)
	6	Digital ground		Ground for Wiegand (connect pin 5 or 6)
B	3	D0_OUT	Out	Data (5V TTL)
	4	D1_OUT	Out	Clock (5V TTL)

Revision 2

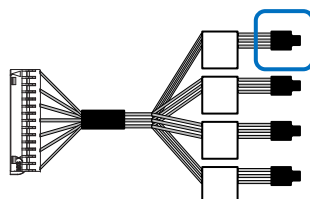


Figure 32: Serial port wiring – DataClock (Revision 2)

20	Black / Red	Digital ground		Ground for Wiegand
24	Green	D0_OUT	Out	Data (5V TTL)
21	White	D1_OUT	Out	Clock (5V TTL)

RS485

Initial version

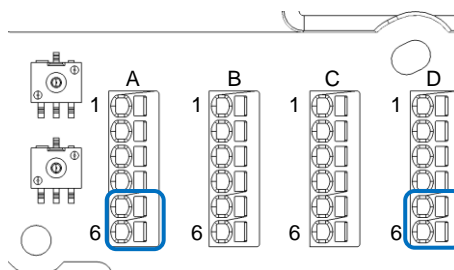


Figure 33: Serial port wiring – RS485 (initial version)

A	5	Digital ground		Ground (connect pin 5 or 6)
	6	Digital ground		Ground (connect pin 5 or 6)
D	5	RS485 TX / RX +	Out	RS485 non inverting signal
	6	RS485 TX / RX -	Out	RS485 inverting signal

Revision 2

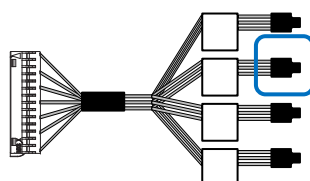


Figure 34: Serial port wiring – RS485 (Revision 2)

19	Black / Red	Digital ground		Ground
16	Green / Black	RS485 TX / RX +	Out	RS485 non inverting signal
18	Green / White	RS485 TX / RX -	Out	RS485 inverting signal

RS485 implementation is limited to half-duplex communication. So only Tx+, Tx- and ground reference signals are necessary.

Depending on the RS485 network, an impedance adaptation may be required.

For farthest terminal, a 120-Ohms resistor termination may be added outside the terminal between TX+ and TX-.

RS422

Initial version

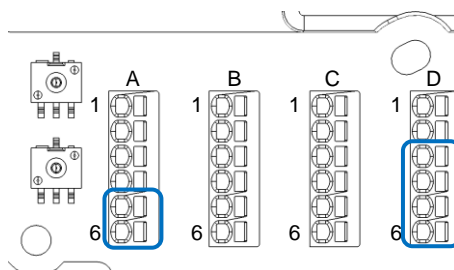


Figure 35: Serial port wiring – RS422 (initial version)

A	5	Digital ground		Ground (connect pin 5 or 6)
	6	Digital ground		Ground(connect pin 5 or 6)
D	3	RS422 RX-	In	RS422 inverting Receive
	4	RS422 RX+	In	RS422 non inverting Receive
	5	RS422TX+	Out	RS422 non inverting Transmit
	6	RS422TX-	Out	RS422 inverting Transmit

Revision 2

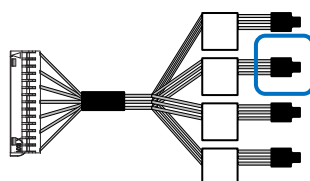


Figure 36: Serial port wiring – RS422 (Revision 2)

19	Black / Red	Digital ground		Ground
17	Blue / Black	RS422 RX+	In	RS422 inverting Receive
15	Blue / White	RS422 RX-	In	RS422 non inverting Receive
16	Green / Black	RS422TX+	Out	RS422 non inverting Transmit
18	Green / White	RS422TX-	Out	RS422 inverting Transmit

RS422 interface is a full duplex communication.

GPIO wiring

Initial version

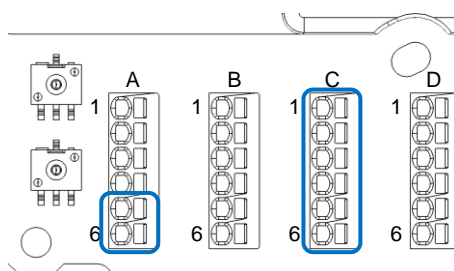


Figure 37: GPIO wiring (initial version)

A	5	Digital ground		Ground (connect pin 5 or 6)
	6	Digital ground		Ground (connect pin 5 or 6)
C	1	Digital Input 0	In	Digital Input (1.8V to 5V)
	2	Digital Input 1	In	Digital Input (1.8V to 5 V)
	3	Digital Input 2	In	Digital Input (1.8V to 5 V)
	4	Digital Output 0	Out	Digital Output (5V – 5mA max)
	5	Digital Output 1	Out	Digital Output (5V – 5mA max)
	6	Digital Output 2	Out	Digital Output (5V – 5mA max)

Revision 2

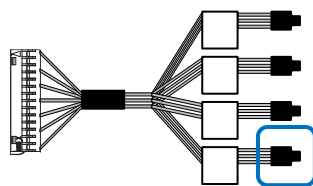


Figure 38: GPIO wiring (Revision 2)

8	Black / Red	Digital ground		Ground
9	Orange	Digital Input 0	In	Digital Input (1.8V to 5V)
11	Orange / Red	Digital Input 1	In	Digital Input (1.8V to 5 V)
13	Orange / Black	Digital Input 2	In	Digital Input (1.8V to 5 V)
10	Yellow	Digital Output 0	Out	Digital Output (5V – 5mA max)
12	Yellow / Red	Digital Output 1	Out	Digital Output (5V – 5mA max)
14	Yellow / Black	Digital Output 2	Out	Digital Output (5V – 5mA max)

Single Door Access Control (SDAC) implementation

Initial version

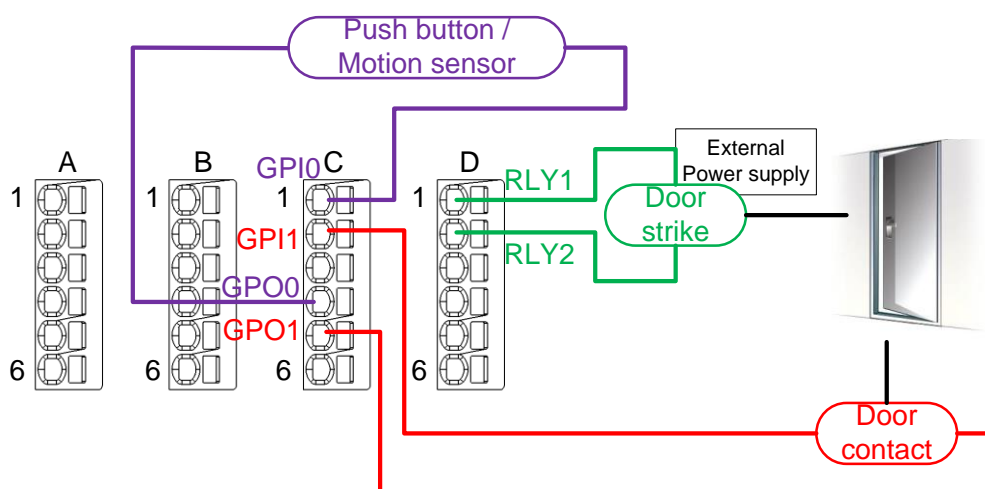


Figure 39: SDAC wiring (initial version)

Revision 2

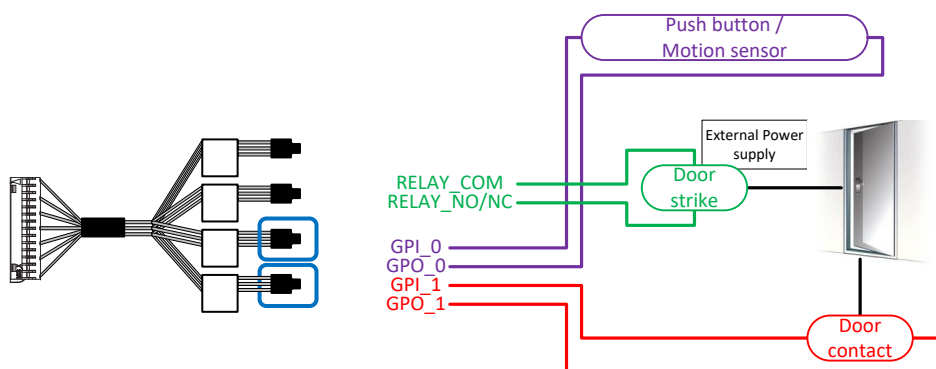


Figure 40: SDAC wiring (Revision 2)



If door contact is not used, GPI1 and GPO1 shall be connected together

Ethernet connection

Ethernet interface can be used to power the MorphoAccess® SIGMA Series terminal through POE (terminal is compatible with Power Supply Equipment compliants with IEEE802.3af). According to the POE standard two modes are available: power on data pins and power on dedicated pins.

Use either one of these modes depending on POE implementation on your local Ethernet network.



Wi-Fi™ or 3G dongle cannot be used with POE power supply



Ethernet cable shall be shielded

Default Ethernet configuration

By default, MorphoAccess® SIGMA Series terminal is configured in Static mode.

IP address Mode	Parameter	Factory value
Static	Terminal IP address	192.168.1.10
	Gateway IP address	192.168.1.254
	Sub network mask	255.255.254.0
	Host name	MAsigma

Connecting MorphoAccess® SIGMA Series terminal with default Ethernet configuration

Administrator must change the default Ethernet configuration before deploying terminal on site. This can be achieved by several ways as mention below.

- Terminal LCD Menu > Communication Menu > Network Interface > Ethernet
- MBTB > Quick Configuration > Communication Configuration > IPv4 Address Settings
- MBTB > USB Script > Set IP configuration
- Webserver > Terminal Settings > Communication > IPv4 Network

Prior to connecting through MBTB or Webserver, please check if Terminal is accessible from Host system/PC or not. To access terminal which is having default network parameter, the administrator may need to modify the network parameters of the Host PC.

Please refer to following example to connect terminal which is having default network parameter.



Figure 41: Direct Point to Point Ethernet Connection

1. Connect terminal directly to PC with Point to Point Ethernet connection.
2. Change the Host PC IP address to 192.168.1.11 (or any IP address within 192.168.x.x range excluding 192.168.1.10)
3. Connect terminal with its default IP address i.e. 192.168.1.10 either from MBTB or Webserver.
4. Change the Terminal network parameter from MBTB or Webserver.

NOTE: For connecting terminal directly to a PC (Point to Point connection) by an Ethernet cable, the Ethernet port of the PC must support the Auto-MDIX feature, otherwise a crossover Ethernet cable is mandatory. If no crossover Ethernet cable is available, then a dedicated switch can be used for the connection.

Recommendations for RJ45 wiring

Pin	1	2	3	4	5	6	7	8
Signals	Data pair 1	Data pair 1	Data pair 2	NC/POE pin dedicated (+)	NC/POE pin dedicated (+)	Data pair 2	Ground/ pin dedicated (-)	NC/POE pin dedicated (-)
EIA / TIA T568B Colors	White orange	Orange	White green	Blue	White blue	Green	White brown	Brown
EIA / TIA T568A Colors	White green	White green	White green	White green	White green	White green	White green	White green
Corel L120 Colors	Grey	White	Pink	Orange	Yellow	Blue	Purple	Brown

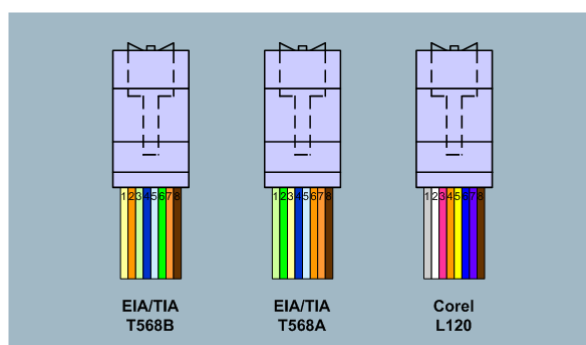


Figure 42: RJ45 wiring

RJ45 plug pinout is compliant with 10/100 base T, IEEE802.3 Specification. Product is compliant also with MDI or MDI-X.

External USB connection

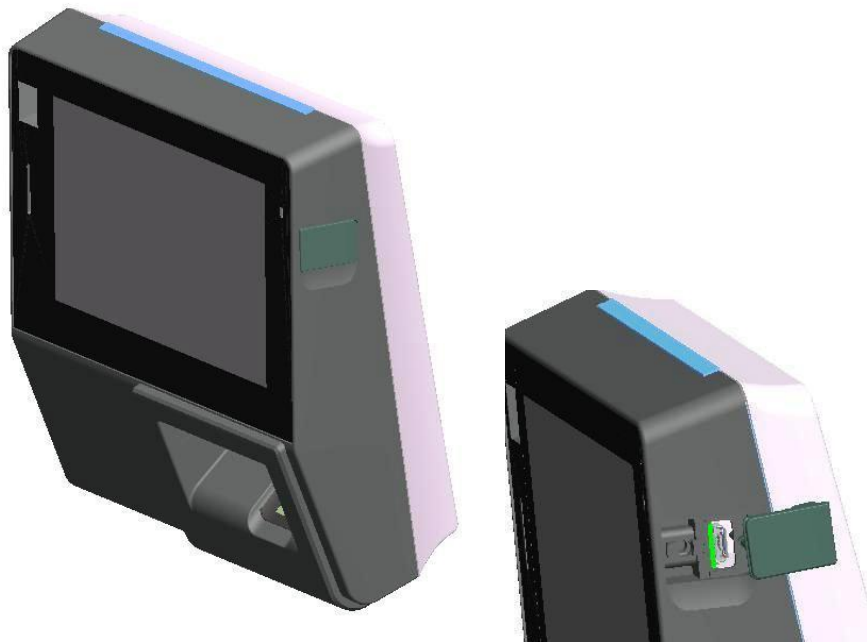


Figure 43: External USB connection

The external Micro USB can be used for administration only to connect a mass storage USB key (with a standard Micro USB-type A / USB-type A female adapter).

This cable can be found in Morpho catalogue with ref 293658551.

Please refer to the dministration Guide for more information.



USB connection is limited to USB key connection (power consumption shall not exceed 200mA)

Wi-Fi™ / 3G dongle installation

Wi-Fi™ / 3G dongle shall be installed outside the product (separate area shall be reserved in the wall) and connected to the internal USB Mini B using Morpho cable provided in the kit.

Wi-Fi™ / 3G dongle shall not be exposed to temperature exceeding 50°C (don't forget thermal dissipation)

Wi-Fi™ and 3G features shall be available only if the product is powered from an external AC/DC 12V to 24V power supply (no enough power from the POE output for Wi-Fi™ or 3G)

Only Wi-Fi™ or 3G USB dongle delivered by IDEMIA (kit reference 293658530 for Wi-Fi™ or 293658548 for 3G) may be installed with the terminal for WLAN (Wireless Local Area Network) operation.

Cable has to be plugged on the upward USB connector, as on the following image:

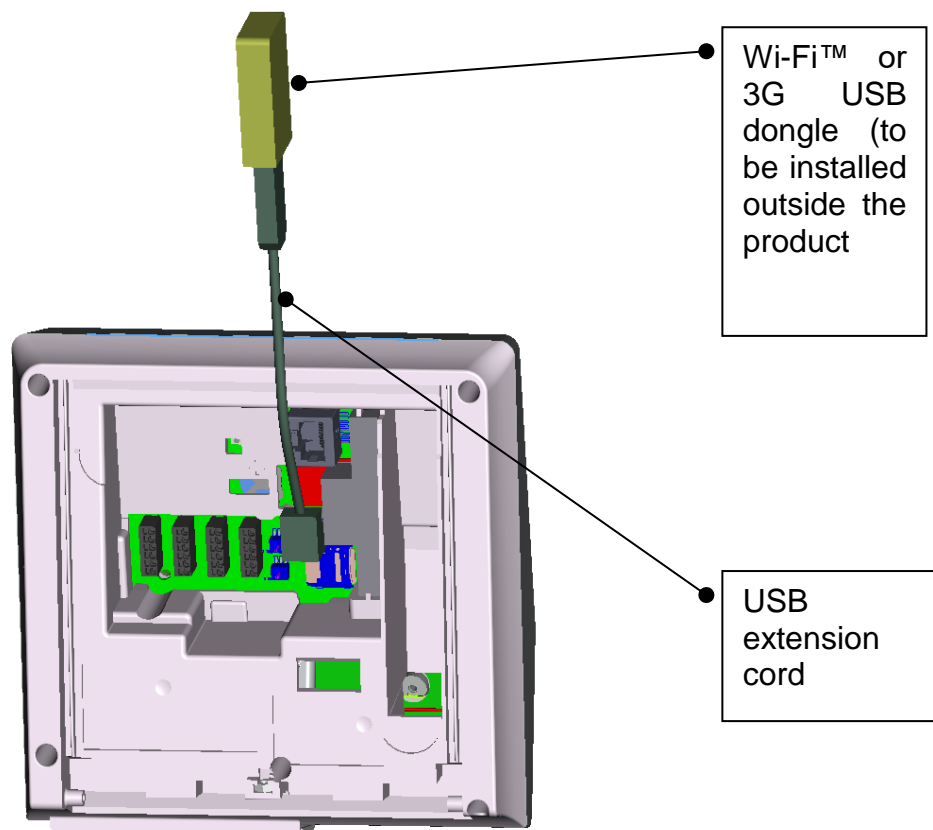


Figure 44: Wi-Fi™ / 3G dongle installation

Micro SD connection

Micro SD card shall be used for the following features:

- Database extension (license is necessary)
- Logs extension (license is necessary)
- Picture logs (photo taking or face detection)
- Dynamic messages



Micro SD card class shall be 10, lower class may reduce performances.

Micro SD card size shall be from 1GB to 32GB.



Micro SD card shall never be used on a Windows PC (it may damage the content of the card and make it inoperative). The product will format it with the right format.



Use Brand Name Micro SD card. No name card may reduce performances or have shorter life time.

Battery (initial version only)

The battery shall be inserted in the dedicated area in order to keep date and time when power is accidentally cut off.

Battery model is CR1225 (3V).



Battery lifetime is limited when power is off: at least 350 hours at 25°C. Don't forget to change battery after long power cut or after several short power cut.



Section 5 : User Interface

Modes for controlling access rights

Introduction

The MorphoAccess® SIGMA Series terminal offers several methods for controlling access rights: it needs to be configured in one of the following four modes:

- Identification mode,
- Authentication mode (requires a contactless smartcard reader in the terminal),
- Multi-factor mode (requires a contactless smartcard reader in the terminal),
- Proxy mode

Refer to the Administration Guide for more information on Access Control.

Identification mode

The Identification process of the MorphoAccess® SIGMA Series terminal proceeds by comparison of the biometric data of the finger placed on the biometric sensor, with all the biometric data stored in the database.

It means that the biometric data of the allowed users must be stored in the internal database before they can request the access on the terminal. This biometric data is acquired either directly on the terminal (using the embedded), or on an enrolment system using the same type of biometric sensor.

The access control by identification process is started when a finger is detected on the biometric sensor

When the user requests the access, his identity is unknown, and it is the terminal that searches for his identity. The terminal grants the access if a match is found (the user is identified); otherwise the access is denied (the user remains unknown).

For further information, please see the "Identification mode" section in the Administration Guide.

Authentication (verification) mode

Unlike the "identification" mode, the user identity must be known in order to execute the authentication process.

Indeed, authentication is an identity verification process: the user provides his identity and the terminal checks it with the relevant process.

This mode doesn't compare the user's data to the data of several users: it compares the data provided by the user with the reference data provided by the same user during enrollment phase. The data can be on a card presented to the terminal or in a database and ID is provided by the user.

Access is authorized if the terminal finds a correspondence.

For further information, please see the "Authentication mode" section in the Administration Guide.

Multi-factor mode

In this mode, the "identification" and "authentication" modes are available simultaneously; the user decides which control method will be used:

- by placing his finger on the sensor, thereby triggering the identification process,
- by placing his contactless card on the reader, thereby triggering the authentication process,

This is the default mode for terminals fitted with a contactless smartcard reader.

For further information, please see the "Multi-factors method" section in theMorphoAccess® SIGMA Series Administration Guide.

Proxy mode

The Proxy mode is an operating mode where the access control main application is located in a distant system. This is not a standalone mode like Identification and Authentication modes.

It means that the terminal becomes a slave of the host system application. The access control application is running on the host system and uses MorphoAccess® SIGMA Series terminal high level functions:

- Identification function
- Authentication function
- Read data on a contactless card
- Access control result signal command

The MorphoAccess® SIGMA Series terminal is driven through an Ethernet (or Wi-Fi™) link using TCP, SSL or TLS protocol.

The MorphoAccess® SIGMA Series terminal acts as a server: it is either waiting for a command or executing a command.

The commands allowed by the MorphoAccess® SIGMA Series terminal are described in the Host System and remote Message Interfaces document.

For further details about SSL or TLS on the MorphoAccess® SIGMA Series terminal, please refer to the Administration Guide.

External database mode (also called polling mode)

When external database mode is activated, the MorphoAccess® SIGMA Series terminal does not verify user template in its local database. This mode is useful when the user templates are stored in external database.

When authentication is initiated on the terminal, the terminal will poll the user ID to external controller. On polling out the ID, the corresponding template (if exists) is fetched from the external database and is authenticated against user's biometric on the terminal. Once the template request is posted to the external database, the terminal shall wait for the finger template from the external database to start authentication. Further process shall be same as authentication.

Polling Process using buffer:

- The user's input ID will be queued in the terminal's queue, which is polled by external application.
- External application waits for the User ID by polling the buffer. After getting an ID, it will search the template in database and send template to terminal for further authentication.
- The user is authenticated by the external device and granted access accordingly.

MorphoAccess® SIGMA Series terminal also has distant commands to retrieve polling buffer status and polling buffer data. Refer to the Host System and remote Message Interfaces document.

How to Activate?

External database mode can be activated through Webserver > Complete Configuration, by setting "ucc.enable_external_database" parameter to 1. Only an admin user can activate polling mode. You can refer to the Host System and Remote Message Interfaces document to know how to set this parameter.

NOTE: When terminal is in L1 legacy mode, then polling mode can be configured using SecureAdmin application.

Configuring the terminal

MorphoAccess® SIGMA Series terminals are standalone biometric systems which offers advance features for access control. MorphoAccess® SIGMA Series terminals are equipped with a facility to support the MorphoAccess® and Bioscrypt legacy systems.

When MorphoAccess® SIGMA Series terminal is set in any of the legacy modes, it supports the database structures and configurations of the selected legacy system. When the terminal is booted for the first time, user can select any of the following modes:

MorphoAccess® 500 or J Series legacy mode

MorphoAccess® SIGMA Series terminal can be operated in MorphoAccess® 500 or J series mode (also referred as Legacy Morpho). In this mode, the terminal will support configurations and operations of MorphoAccess® 500 series terminals. Terminal can authenticate users enrolled in the MorphoAccess® 500 series terminal, using biometric check as well as contactless card. New users can also be enrolled in MorphoAccess® 500 series mode.

Access Path

First Boot Assistant > Protocol Configuration > Legacy Morpho

Once the product is configured in Legacy Morpho mode, the following methods can be used to configure the terminal:

- through the Ethernet interface (remote management)
- through a Wi-Fi™ connection (license and dongle required)

Configuration procedures are described inside the Administration Guide document in “Terminal Configuration And Administration” section.

Bioscrypt 4G Series legacy mode

MorphoAccess® SIGMA Series can be operated in Bioscrypt 4G mode (also referred as Legacy L1). In this mode, the terminal will support limited operations and configurations that are done using Secure Admin application. The terminal in L1 mode is able to authenticate the users enrolled on 4G terminals and contactless cards. However it is not possible to enroll users in legacy L1 mode on MorphoAccess® SIGMA Series terminal.

In case, users are enrolled in MA5G mode, the user data cannot be exported when terminal is in L1 mode.

Access Path

First Boot Assistant > Protocol Configuration > Legacy L1

Once the product is configured in Legacy L1 mode, the following methods can be used to configure the terminal:

- through the Ethernet interface (remote management)
- through a Wi-Fi™ connection (license and dongle required)

Configuration procedures are described inside the Administration Guide document in “Terminal Configuration And Administration” section.

MorphoAccess® SIGMA Series native mode

MorphoAccess® SIGMA Series terminal is by default in native mode, that is named MA5G. It will support the new features and configurations only in the native mode. The terminal can be configured using an internet browser connected to the embedded Webserver application.

Access Path

First Boot Assistant > Protocol Configuration > MA5G

NOTE :

- *When terminal mode is switched from MA5G to any of the legacy modes, the entire configuration (excepted communication links) and all databases are erased*
- *The terminal is rebooted on mode change and factory settings are applicable.*

Once the product is configured in native mode, the following methods can be used to configure the terminal:

- through the Ethernet interface (remote management)
- through a Wi-Fi™ connection (license and dongle required)

Configuration procedures are described inside the Administration Guide document in “Terminal Configuration And Administration” section.

Anti-tamper / anti-pulling switches

Please refer also to “Tamper Switch” section.

These switches are activated as soon as there is enough pressure applied on the terminal against the wall. They are deactivated as soon as this pressure is not big enough, e.g. when the terminal is pulled out of the wall.

When the switches are deactivated, the MorphoAccess® SIGMA Series terminal acts as required by the related configuration key (see Administration / Parameters Guide for key configuration description):

- Ignore the event (default): useful during normal maintenance operations.
- Send an alarm message to the Central Access Controller, through the usual channel of the access control result messages (Wiegand, DataClock, RS485, Ethernet or Wi-Fi™). An alarm switch (relay contact) is directly available on block terminal «tamper switch pins». Please refer to “Wiring overview” and to “Tamper Switch” sections.
For UL 294 compliance, the product was not evaluated to UL burglar alarm standards.
- Generate an audible alarm signal with the speaker and an alert message on the screen.



Section 6 : Accessories, Software Licenses and PC Applications

Compatible Accessories, Licenses and Software

The following items can be ordered directly to IDEMIA or to an official distributor, so as to enjoy all the features of your MorphoAccess® SIGMA Series terminal:

- **Power supply units,**
- **Power Over Ethernet module:** enabling POE capabilities on the product,
- **Contactless smartcards:** MIFARE® 1k, 4k; DESFire® 2k, 4k, 8k,
- **MA WI-FI PACK:** containing a Wi-Fi™ USB dongle and a Wi-Fi™ license to activate Wi-Fi™ capability on your terminal,
- **MA 3G PACK:** containing a 3G USB dongle and a 3G license to activate 3G network communication on your terminal,
- **User database size licenses (MA_10K_USERS, MA_50K_USERS, MA_100K_USERS):** enabling database size upgrade from 5,000 to 10,000, 50,000 or 100,000 users capacity (max 3 fingers per record) at creation of the database. Requires Micro SD card in the terminal.
- **Log size licenses (MA_250K_LOGS, MA_500K_LOGS, MA_1M_LOGS):** enabling logs size upgrade from 100,000 to 250,000, 500,000 or 1,000,000. Requires Micro SD card in the terminal.
- **MA_PAC license:** enabling physical access control mode (default license in products for access control features: Single Door Access Control, Wiegand output, Clock & data output, IP output, Serial output).
- **MA_TA license:** enabling time and attendance mode.

Compatible PC applications

MorphoAccess® SIGMA Series terminals are fully compatible with:

- MorphoManager (version 13.1.9 or higher),
- Morpho Integrator's Kit (MIK) software development kit (version 6 or later).
- MorphoBioToolBox (version 4.1.2 or later)

Note : Morpho Sigma series is noted as a standalone unit for the UL 294 standard.

Using Legacy Morpho mode, MorphoAccess® SIGMA Series is also compatible with:

- MEMS (version 7.3.1 or later),
- MIK (version 5.4 or later),

The limitations in Morpho Legacy mode are described in the Application Notes – Morpho Legacy Mode Limitations.

Using Legacy L1 mode, MorphoAccess® SIGMA Series is also compatible with:

- SecureAdmin (version v4.1.20.0.1.0.0 or later),

The limitations in L1 Legacy mode are described in the Application Notes – L1 Legacy Mode Limitations.



Section 7 : Recommendations

Notice

The manufacturer cannot be held responsible in case of non-compliance with the following recommendations or incorrect use of the terminal.

General precautions

- Do not attempt to repair your terminal yourself. The manufacturer cannot be held responsible for any damage/accident that may result from attempts to repair components. Any work carried out by non-authorized personnel will invalidate your warranty.
- Do not expose your terminal to extreme temperatures.
- Use your terminal with original accessories. Attempts to integrate unapproved accessories to the terminal will void your warranty.
- Due to electrostatic discharge, and depending on the environment, synthetic carpet should be avoided in areas where the terminal has been installed.

Areas containing combustibles

It is strongly recommended that you do not install your terminal in the vicinity of gas stations, petroleum processing facilities or any other facility containing flammable or combustible gasses or materials.

Specific precautions for terminals equipped with a contactless smartcard reader

It is recommended to install terminals equipped with a contactless smartcard reader at a certain distance (> 30cm) from metallic elements such as iron fixations or lift gates or radio product (such as contactless smartcard reader). Performances in terms of contactless badge reading distance will decrease when metallic elements are closer.

Ethernet connection

It is recommended to use a category 5 shielding cable (120 Ohms). It is also strongly recommended to insert a repeater unit every 90m.

Extreme care must be taken while connecting Ethernet wire to the terminal block board since low quality connection may strongly impact Ethernet signal sensibility.

It is recommended to connect Rx+ and Rx- with the same twisted-pair wire (and to do the same with Tx+/Tx- and the other twisted-pair wire).

Date / Time synchronization

If you want to use the terminal for application requiring high time precision, we recommend synchronizing regularly your terminal time with an external clock (using NTP).

The terminal clock has a +/-10 ppm typical time deviation at +25°C (roughly less than +/- 1 sec per day).

At lower and higher temperature, deviation may be more important.

If date / time is not synchronized, don't forget to change battery after long power cut or after several short power cut.

Cleaning precautions

The use of a dry cloth is recommended to clean the terminal, especially the biometric sensor.

Disinfection and sanitization recommendations

- 1- Moisten a non-abrasive wipe (such as Economizer® Wipers or 3M Scotch-Brite® High Performance Cloth) with the following disinfectants:
 - Windex® Multi-Surface Disinfectant or another similar product containing L-Lactic acid.
 - Hydrogen peroxide (< 3%)
- 2- Wipe the device's surface and leave the surface wet with disinfectant for at least 5 minutes

Important notice:

The following practices permanently damage and/or negatively impact the performances of the device:

- Do not use bleach or disinfectants containing aggressive substances such as chlorine, soda, alcohol, quaternary ammonium etc
- Do not spray directly on the biometric sensor or the casing of the terminal
- Do not use abrasive cloths or wipes (e.g., paper towels)

Legacy mode

When terminal mode is switched from MA5G to any of the legacy modes, the entire configuration (except communication links) and all databases are erased.

The terminal is rebooted on mode change and factory settings are applicable.

Firmware legacy limitations are described in the MorphoAccess® SIGMA Series Release Note.

Note: UL has only evaluated the MA Sigma Series family products

Hardware legacy differences are described below:

Power supply

	4G	MA500 family	MA SIGMA family
DC power supply	12V – 24V (-15% / +10%)	12V (-15% / +30%)	12V – 24V (-15% / +10%)
DC power supply connection	DC Jack connector	Terminal block	Terminal block
Power supply by POE	Terminal are compatible with Power Supply Equipment compliants with IEEE802.3af		
POE power supply connection	Block connector and RJ45 connector	Block connector and RJ45 connector	Only RJ45 connector

Ethernet communication

4G	MA500 family	MA SIGMA family
Block connector and RJ45 connector	Block connector and RJ45 connector	Only RJ45 connector

RS485/RS422 communication

4G	MA500 family	MA SIGMA family
Half duplex (slave mode only)	Half duplex Full duplex (slave and master mode)	Half duplex Full duplex (slave and master mode)

GPI/GPO

	4G	MA500 family	MA SIGMA family
GPI	3 GPI	No	3 GPI
GPO	3 GPO (3 TTLOUT_H and 3 TTLOUT_L)	No	3 GPO (≈ 3 TTLOUT_H only)
GPO current limitation	5mA@5V for 4G	-	5mA@5V

RELAY

	4G	MA500 family	MA SIGMA family
Relay pins available*	NO / NC / COM	NO / NC / COM	NO / NC / COMM (no NC on initial version)
Driver capability	170mA	2 A @30V DC (Resistive load)	2 A @30V DC (Resistive load)

*: NO: Normally open
 NC: Normally closed
 COM: Common

RS232 communication

4G	MA500 family	MA SIGMA family
Available	Not available	Not available

Anti-theft/ Tamper switches

	4G	MA500 family	MA SIGMA family
Anti-theft switch	No	Yes	Yes
Tamper switch	Yes	Yes	Yes
Warning to a host if the product isn't supplied	No	Yes	Yes

Micro SD card

If Micro SD card is necessary for the features enabled, the following recommendations shall be applied.

- Micro SD card class shall be 10, lower class may reduce performances.
- Micro SD card size shall be from 1GB to 32GB.
- Micro SD card shall never be used on a Windows PC (it may damage the content of the card and make it inoperative). The product will format it with the right format.
- Use Brand Name Micro SD card. No name card may reduce performances or have shorter life time.

Lighting conditions for face detection

In order to get good performance of the face detection, the following recommendations shall be respected:

- The user shall not be against the light.
- The light in front of the user shall be at least 500 Lux.
- The background of the user shall be as neutral as possible (avoid images which could be mixed up with face).



Annex 1 : Finger Placement Recommendations

Main principles

Acquisition needs to be done with extreme care, in order to:

- get the best image quality
- increase recognition performance
- reduce recognition time

Then, it is highly recommended to:

- Maximize the contact between the fingerprint and the sensor
- Exert firm, but not excessive, finger pressure on the surface of the sensor
- Do not press too hard
- Do not slide nor roll the finger across the sensor
- Do not move the finger during acquisition
- Wait for the extinction of sensor backlight before removing the finger

Most useful areas for biometric data

Fingerprint central area must be aligned with sensor center


Area containing
the maximum
information



Position of finger


Finger height

Align center of 1st phalanx with sensor center

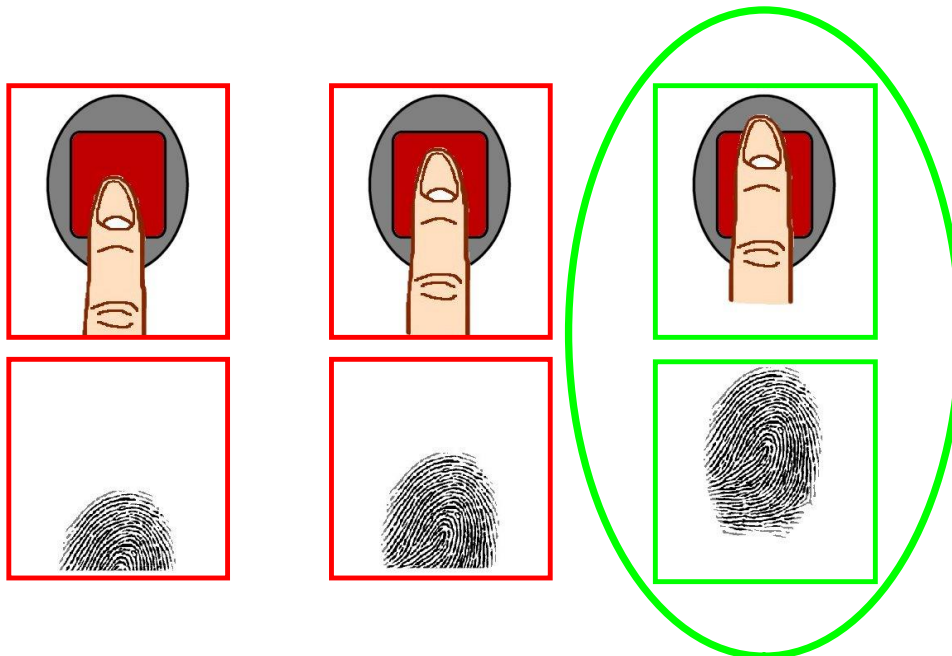


Finger angle

The finger must be parallel to sensor sides

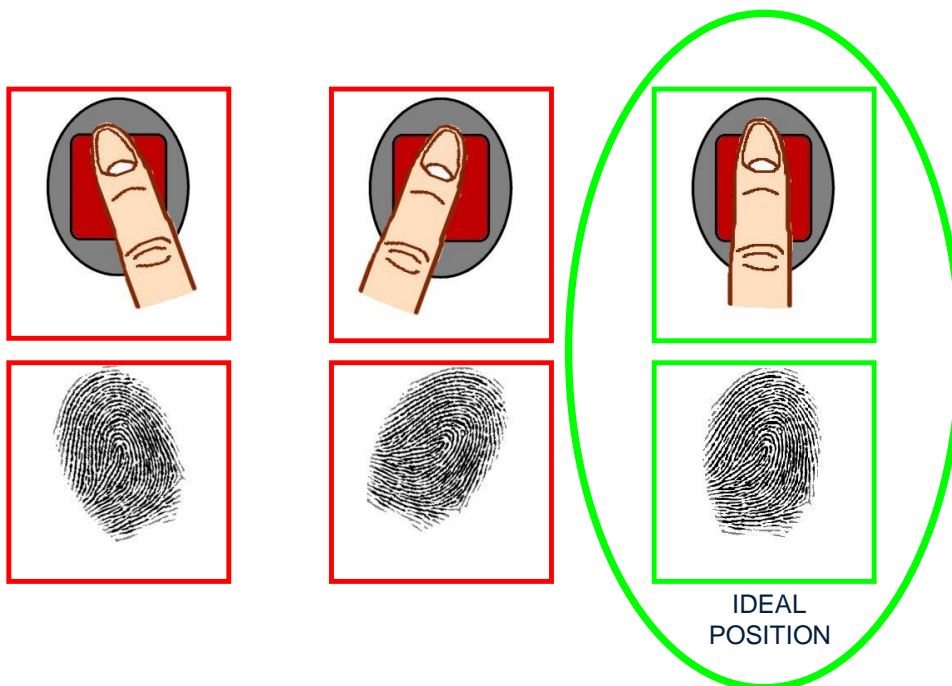


Finger inclination

Finger must be parallel to the sensor surface

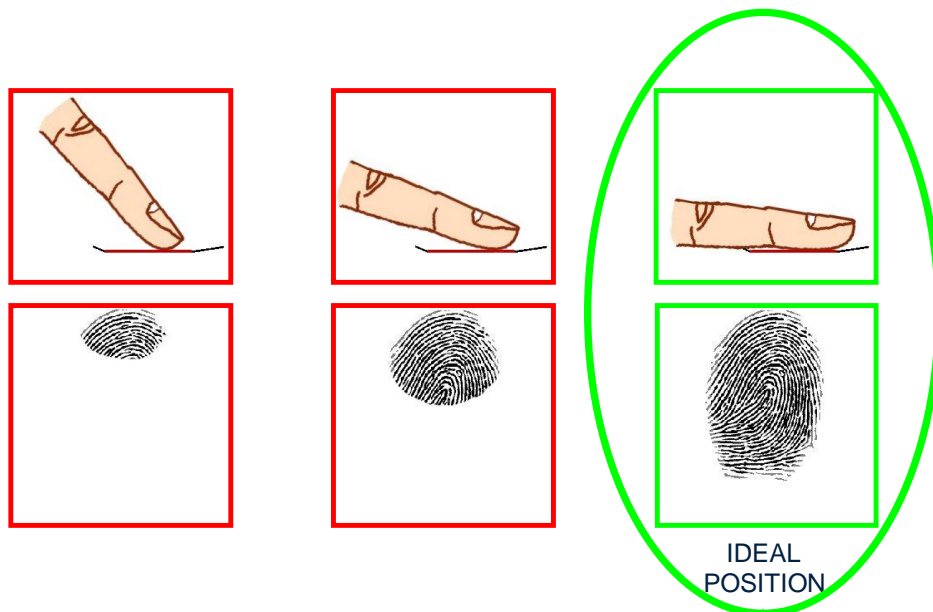

Finger rotation

Finger must be parallel to the sensor surface

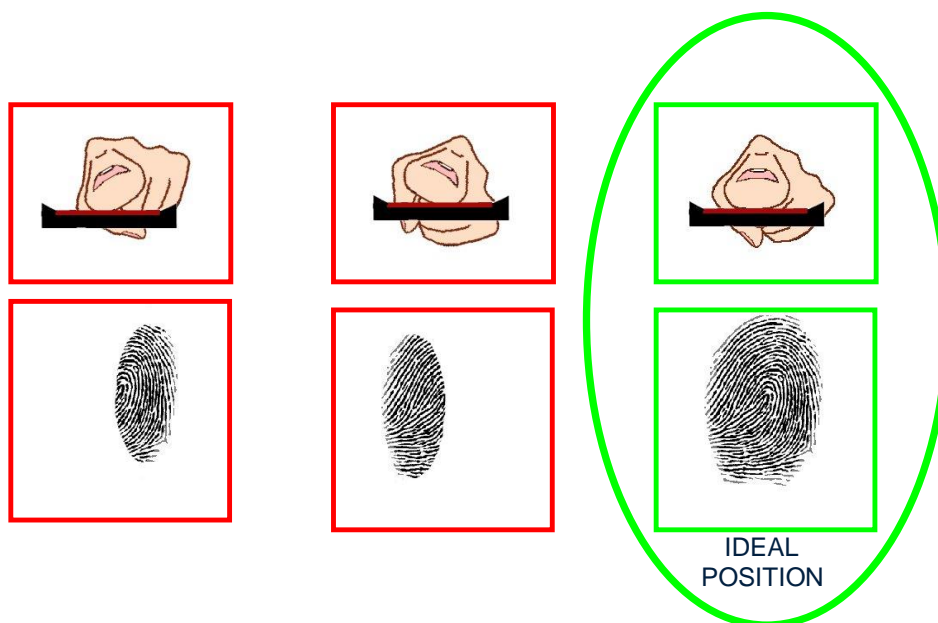

Troubleshooting

When finger biometric data acquisition is difficult, please follow the recommendations listed below:

- The finger is cold
 - Solution : warm up the finger
- The finger is wet
 - Solution : wipe the finger
- The finger is dry
 - Solution : warm up the finger and/or add a little bit of humidity
- The finger is dirty
 - Solution: wash hands
- Remove bandages or adhesive tapes from the fingerprint area, and from the 2nd phalanx of the finger
- Do not press or tense finger to avoid blood vessels constriction



Annex 2 : Bibliography

How to get the latest versions of documents

The last version of the documents can be downloaded from our web site at the address below:

www.biometric-terminals.com

(Login and password required).

To request a login, please contact your sales representative.

Documents concerning the MorphoAccess® terminal

Documents about installing the terminal

Quick Installation Guide,

This document describes the main steps for wall mounting.

Installation Guide,

This document describes the terminals physical mounting procedure, electrical interfaces and connection procedures.

Recommendations for Secure Installation,

This document describes all actions to secure your installation (physical installation, network, secure protocols etc.).

Documents about administrating / using the terminal

Quick User Guide,

This document is the main guide that is used for learning the main steps for initializing the terminal operations.

Administration Guide,

This document describes the different functions available on the terminal and the procedures for configuring the terminal.

Parameters Guide,

This document contains the full description of all the terminal configuration parameters.

Documents for the developer

Contactless Card Specification,

This document describes the contactless cards supported by the terminal and the format of the data on the contactless card.

Host System and Remote Message Interfaces,

This document describes the commands, the protocols, and the format of the data supported by the terminal.

Distant Commands Guide,

This document describes thrift commands supported by the terminal.

Release notes

For each firmware version, a release note is published describing the new features, the supported products, the potential known issues, the upgrade / downgrade limitations, the recommendations, the potential restrictions...



Annex 3 : Support

Troubleshooting

The terminal IP address is unknown or it is not possible to connect to the terminal

Use terminal interface to configure a valid set of network parameters in your terminal.

The sensor is switched off

Check that the database contains at least one record.

Check that the identification mode is enabled.

The terminal returns erratic responses to Ping commands

Check the subnet mask.

Ask the network administrator for the correct value.

Check that each device connected to the network has a different IP address.

Technical Support and Hotline

North America

Mail: support.bioterminals.us@idemia.com

Tel: +1 888 940 7477

South America

Mail: support.bioterminals.us@idemia.com

Tel: +1 714 575 2973

Asia, Pacific:

Mail: support.bioterminals.in@idemia.com

Tel: +91 1800 120 203 020

Europe, Middle-East, Africa:

Mail: support.bioterminals@idemia.com

Tel: +33 1 30 20 30 40

(9H00am to 5H30pm French Time, Monday to Friday)

Web site

For the latest firmware, software, document releases, and news, please check our website www.biometric-terminals.com (To get your login and password please contact your sales representative).

COPYRIGHT © 2020 IDEMIA



Head office:

IDEMIA

2, place Samuel de Champlain

92400 Courbevoie - France

www.idemia.com