



Model 174

Safety Information

Important Information

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service or maintain it. The following special messages may appear throughout this bulletin or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of either symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury. The safety alert symbol shall not be used with this signal word.

Please Note

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by ASCO Power Technologies for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

Introduction

The **ASCO Model 174** Series are four-wire modules designed for use on signaling line circuits (SLC). The device has 0 ohms of resistance and offers line to ground surge protection.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E, NOM-029-STPS or CSA Z462.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors and covers before turning on power to this equipment.
- This equipment must be effectively grounded per all applicable codes. Use an equipment-grounding conductor to connect this equipment to the power system ground.
- Confirm that the Surge Protective Device voltage rating on the module or nameplate label is not less than the operating voltage.
- This equipment must be installed inside an enclosure and located so, as to prevent accidental contact with terminals during maintenance or servicing.
- Do not place this product in service on any line capable of supplying more than 1 Amp continuously.

Failure to follow these instructions will result in death or serious injury.



WARNING: This product can expose you to chemicals including DINP, which is known to the State of California to cause cancer, and DIDP which is known to the State of California to cause birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- These protectors are intended for indoor use on communication loop circuits which have been isolated from the Public Switch Telephone Network.
- Do not expose the communication loop to contact with the electric light or power conductors.
- Install the protectors as per the applicable requirements of the National Electric Code, ANSI/NFPA 70.
- DO NOT daisy chain grounds. Ground connections are not for shield termination. Install ground in accordance with all applicable codes.

Failure to follow these instructions will result in death or serious injury.

NOTICE
<p>LOSS OF SURGE SUPPRESSION</p> <ul style="list-style-type: none"> • Make certain that Surge Protective Device is disconnected from the circuit it is protecting before conducting high potential insulation testing. <p>Failure to follow these instructions can result in equipment damage.</p>


Installation

1. Turn off all power supplying this equipment before working on or inside equipment.
2. Mount base #PCB1B (accessory) in desired location, preferably as close to load equipment as possible and in close proximity to a building approved grounding point using (2) #4 screws. PCB1B may also be DIN rail mounted using optional DIN clip accessory #PCDIN.

Refer to Drawing 1 for steps 3-5:


3. Attach field side pairs (26-10 AWG) to positions 3/5 and 7/9. Torque wires to 7 in-lbs [0.8 N-m].
4. Attach electronics side pairs (26-10 AWG) to positions 2/4 and 6/8. Torque wires to 7 in-lbs [0.8 N-m].
5. Attach ground wire (10 AWG) to positions 1 or 10 on base. Torque wire to 7 in-lbs [0.8 N-m].
6. Insert 174 module into keyed PCB1B base. See Drawing 2.
7. Replace the barrier, cover/door and/or trim to the equipment.
8. Equipment may be re-energized after all the above steps are complete.

Drawing 1: PCB1B Accessory Terminal Assignments
(Dimensions: in. / mm.)

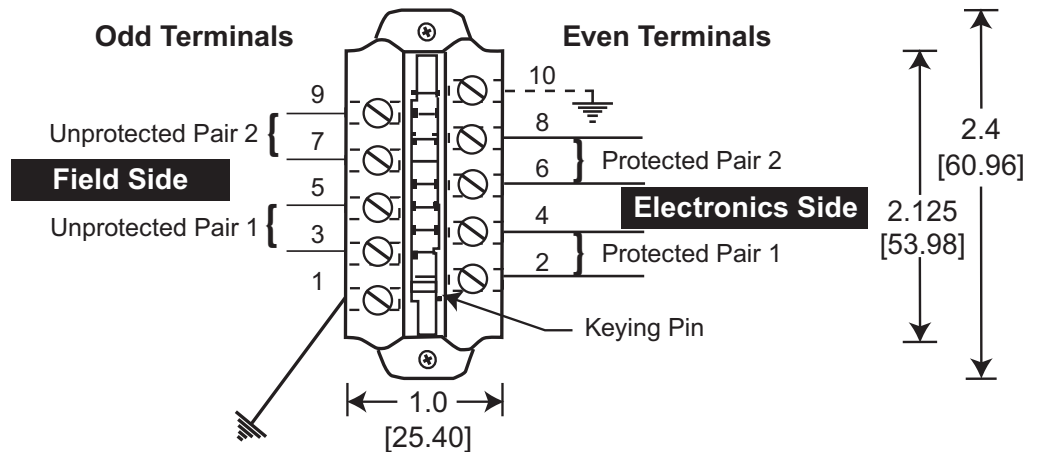

Ground Terminal 1 or 10 to Building Approved Ground
(preferably AC Power ground).

Drawing 2: Plug Model 174 into PCB1B base.

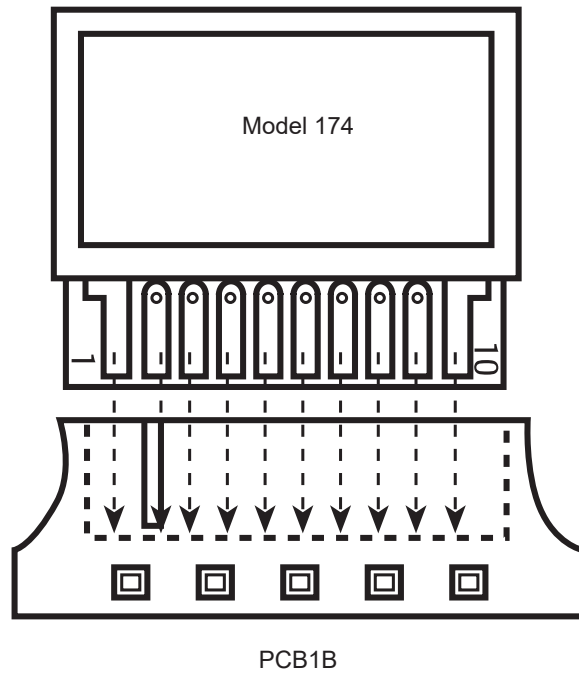


General Technical Specifications

Operating Voltage	18 - 36 VDC
Clamping Voltage	20 - 43 VDC
Operating Current	1 A
Peak Surge Current	250 A (8 x 20 μ s)
Frequency Range	0 to 20 MHz
Insertion Loss	< 0.1 dB at 20 MHz
SPD Technology	Silicon Avalanche Diode (SAD)
Connection Type	Terminal block with mechanical lugs Terminals accept up to 10 AWG
Operating Temperature	-40°C to +85°C
Dimensions (in / mm)	2.0 x 1.0 x 2.5 in. [50.8 x 25.4 x 63.5 mm] (Model 174 + PCB1B Base)
Weight (oz / kg)	1 oz [0.03 kg]
Certifications	UL 497B
Limited warranty	5 years

Model Cross Reference

MODEL <i>Former Model Name</i>	OPERATING VOLTAGE	CLAMPING VOLTAGE
174D020S250SPCN0 <i>Edco SLCP-20</i>	18 VDC	20 VDC
174D036S250SPCN0 <i>Edco SLCP-36</i>	32 VDC	36 VDC
174D043S250SPCN0 <i>Edco SLCP-43</i>	36 VDC	43 VDC
ACCESSORIES		
PCB1B <i>PCB1B-WKEY</i>	Wiring Base, Plug-in Socket	
PCDIN <i>11604KIT-PC</i>	DIN Mounting Kit for PCB1B	
PTU <i>PC642PTU</i>	Pass Through Module for Troubleshooting	

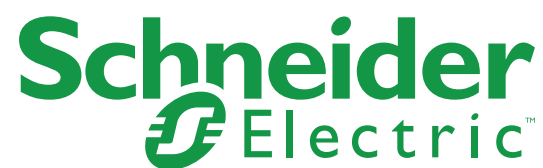

6700 Tower Cir #700
Franklin, TN 37067

se.com/us/en/work/support
1-888-778-2733

While every precaution has been taken to ensure accuracy and completeness in this literature, Schneider Electric assumes no responsibility, and disclaims all liability for damages resulting from use of this information or for any errors or omissions.

IO-75035 RevA 10-2021