

# **TR**□VE Access & Power Integration

# T1RSH3F8

Fully assembled kit includes:

- Trove1R rack enclosure with Altronix/Software House backplane (TSH1R)
- (1) eFlow6NB Power Supply/Charger
- (1) VR6 Voltage Regulator
- (1) ACMS8 Fused Dual Output Access Power Controller

# Installation Guide



All registered trademarks are property of their respective owners.

Rev. T1RSH3F8112618

Installing Company:	_ Service Rep. Name:	
Address:		Phone #:

#### Overview:

Altronix T1RSH3F8 rack kit is pre-assembled and consist of Trove1SH1R enclosure/backplane with factory installed Altronix power supply/charger and sub-assemblies. This kit also accommodates various combinations of Software House boards for up to eight (8) doors in a single enclosure.

# **Configuration Chart:**

120VAC	Power	Power Supply	Output		Maximum Supply	Fail-Safe/	Current	ACMS8	ACMS8
60Hz	Board	Board	[DC]	[Aux]			Per	Board	Board
Input	Input	Battery	Output	Output	Supply board and		ACMS8	Input	Output
Current	Fuse	Fuse	Range	Range	<b>ACMS8 Access Power</b>	"C"	Output	Fuse	Fuse
(A)	Rating	Rating	(VDC)	(VDC)	Controller's outputs	Outputs	(A)	Rating	Rating
3.5	5A/ 250V	10A/ 32V	20.19-26.4	20.19-26.4	24VDC @ 5.8A	8	2.5	15A/ 32V	3A/ 32V
	Input Current (A)	120VAC Supply 60Hz Board Input Input Current Fuse (A) Rating	120VAC Supply Supply 60Hz Board Board Input Input Fuse Fuse (A) Rating SA/ 10A/	Power Supply   Supp	120VAC Supply Board Board Input Input Fuse Fuse (A) Rating Rating (VDC) (VDC)  120VAC Supply Board Board Board Board Board Board Board Curput Curput Range (VDC) (VDC)  120VAC Supply Board Board Board Curput Output Range (VDC) (VDC)	Power Supply Board Input Input Input Fuse Rating Current (A) Rating Sation Sati	Power Supply 60Hz Board Input Input Current Fuse (A) Rating Rating (A) Sation Supply Sation Sation Supply Fail-Safe/ (VDC) (VDC) Sation Sation Supply Current for Main and Aux. Outputs on Power Supply board and Range Range (VDC) (VDC) Controller's outputs Sation Sation Sation Supply Sation Sation Supply Sation Sation Sation Supply Current for Main and Aux. Outputs on Power Supply board and ACMS8 Access Power (C" Controller's outputs Sation	Power Supply   Supply   Board Input Input   Fuse   Fuse   Rating   Rating   Current   Supply   Suppl	Power Supply 60Hz Board Input Input Current Fuse (A) Rating Rating (A) Sating Sating Sating Sating Supply Fail-Sate (VDC) Sating Sating Supply Board Range (VDC) Sating Supply Sating Supply Sating Sa

#### **Hardware and Accessories:**



# **Specifications:**

## Agency Listings:

CE European Conformity.

#### Mechanical:

- Black enclosure with ample knockouts for convenient access.
- Includes: tamper switch, cam lock and mounting hardware.
- Modular 2U standard EIA 19" drawer with extendable slides up to 48".
- Dimensions (H x W x D): 3.25" x 19.0" x 26.5" (82.6mm x 482.6mm x 673.1mm).

#### **Included Accessories:**

- One (1) tamper switch (Altronix Model TS112 or equivalent).
- · Cam lock.

#### **Available Accessories** (not included):


- *RE2:* Rack Mount Battery Enclosure accommodates up to four (4) 12VDC/7AH batteries.
- *WM5, WM25, WM100:* Magnetic Cable Tie Mounts (5, 25, 100 counts).

- 2 - T1RSH3F8


## Assembling and Attaching Z Bracket Wire Management Accessory (included):

Altronix Trove Rack enclosures include Z Bracket, a convenient and reliable wire management accessory.

- 1. Carefully unpack Z Bracket. Do not discard hardware (included) (Fig. 1, pg. 3).
- 2. Attach arms to each other using bolts and lock nuts (Fig. 1a, pg. 3).
- 3. Attach the hinge brackets to the ends of arms using bolts and nuts positioning them as shown on Fig. 1b, pg. 3.
- 4. Make sure that all nuts are tightened.

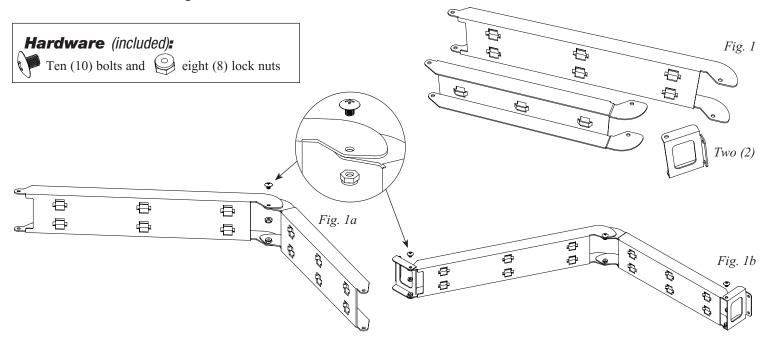

- 5. Attach the hinge bracket on the longer side of Z Bracket to the adjustable rail using bolts and lock nuts (included) (Fig. 2, 2a, pg. 3).
- 6. Attach the hinge bracket on the shorter side of Z Bracket to the rear of the rack enclosure using bolts (included).

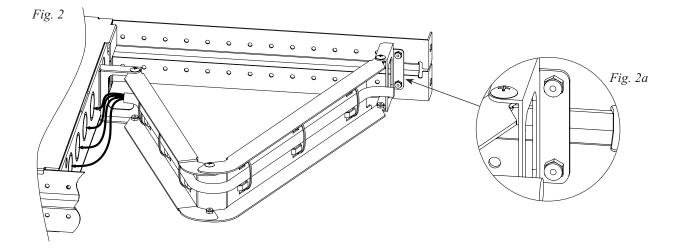


T1RSH3F8 - 3 -

#### **Installation Instructions for T1RSH3F8:**

Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.

- 1. Remove backplane from enclosure prior to installing into rack cabinet (do not discard hardware).
- 2. In order to mount included UL Listed tamper switch (Altronix Model TS112 or equivalent) turn the enclosure upside down. Punch out the knockout in designated location, on the back of the unit, from outside of the drawer (*Fig. 3, pg. 3*). Insert the tamper switch into the knockout from outside of the drawer with the button facing outwards and spaded connectors inside the drawer. Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the rack drawer.
- 3. Slide the Trove rack enclosure into an open 2U location in the rack cabinet.
- 4. Utilizing proper fasteners attach front ears to the rack rails.
- 5. Attach the rear of the adjustable slides to the rear rails of the rack cabinet with the proper fasteners.
- 6. Make sure that all internal cofigurations (wiring, voltage selection, switch settings, etc.) are complete before mounting backplane back into enclosure.
- 7. After all components are mounted on the backplane, attach it to the enclosure using included hardware.
- 8. Mount Software House modules to TSH1R backplane, refer to page 5.
- 9. Refer to the *eFlow Power Supply/Charger Installation Guide* for eFlow6NB and corresponding sub-assembly *Installation Guides* for the following models: ACMS8(CB), VR6 for further instructions.

Fig. 3 Back of the drawer, viewed from outside.

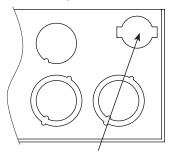

Tamper Switch mounting location

- 4 -

## T1RSH3F8: Configuration of Software House Boards:


- 1. Fasten spacers onto metal pems configuration (A), (B), or (C) of backplane depending on the access controller (Fig. 4, pg. 5).
- 2. Position access controller module over corresponding spacers and fasten screws into spacers (*Fig. 4a, pg. 5*).

  Note: Software House iSTAR Ultra ACM and iSTAR ACM SE/ACM PRO boards have one (1) USB port each. Please orient boards in the appropriate position according to the *Fig. 4* below.
- 3. Mount backplane to enclosure with hardware.

# **Access Controller Position Chart for the Following Models:**

Software House Access Controller	Pem Mounting
iSTAR Ultra ACM	A
iSTAR ACM SE/ACM PRO	B
I8, R8 or I8-CSI Module	C

Fig. 4

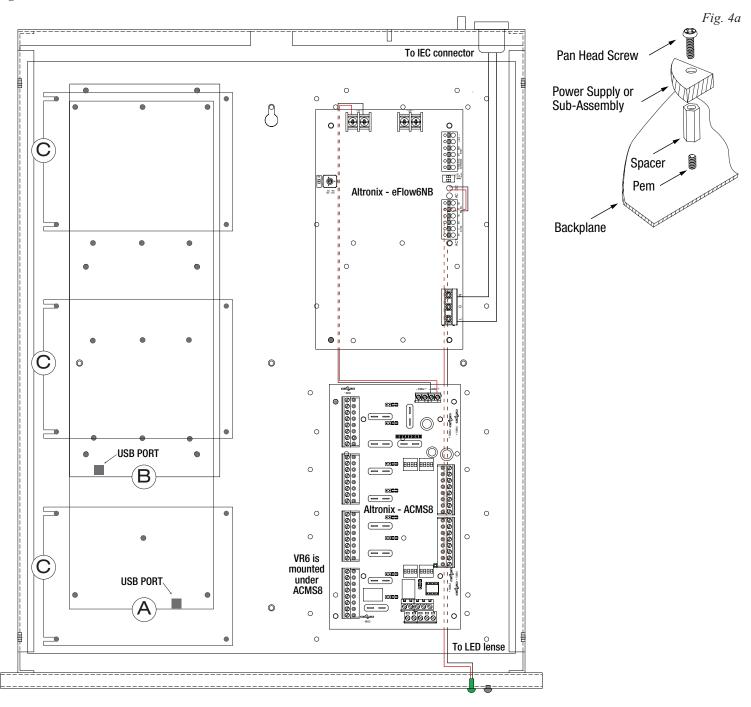

T1RSH3F8 - 5 -

# **Notes:**


- 6 - T1RSH3F8

# **Notes:**

T1RSH3F8 -7-

# **Trove1R Enclosure Dimensions** (H x W x D):

3.25" x 19.0" x 26.5" (82.6mm x 482.6mm x 673.1mm). Shown with Z Bracket attached.

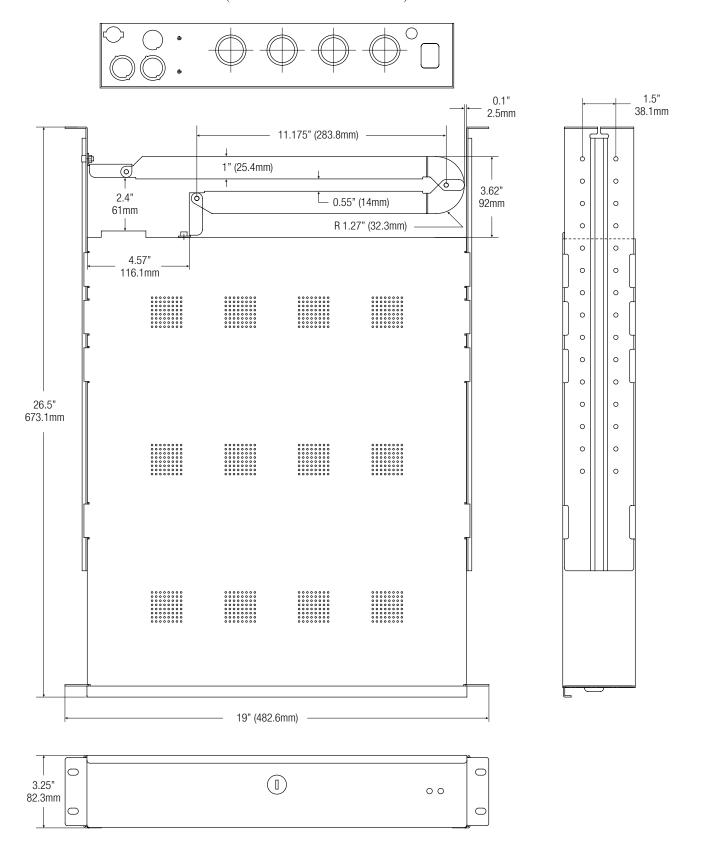

Altronix is not responsible for any typographical errors.

- 8 -

