



Admin Phone User Guide

Nyquist NQ-T1100

BOGEN®

© 2018–2022 Bogen Communications LLC
All rights reserved
740-00036F
220525

Contents

- Using the Admin Phone 1**
 - Hardware Components and Features1
 - Viewing NWS Alert text on NQ-T1100 Admin Phone4
 - Configuring the Admin Phone6
 - Setup with DHCP, and DHCP OPTION 66 set to Nyquist Server’s IP Address.6
 - Setup with DHCP, without support for DHCP OPTION 666
 - Setup with Static IP Address, no DHCP, no DHCP OPTION 667
 - Making Pages9
 - Multi-Site Emergency-All-Call Paging9
 - Multi-Site All-Call Paging9
 - Emergency-All-Call Paging.10
 - All-Call Paging10
 - Zone Paging11
 - Record Page11
 - Making Calls12
 - Changing the Event Schedule13
 - Playing Alarms13
 - Playing Tones14
 - Forwarding Calls14
 - Using the Voice Mail Feature15
 - Recording Announcements16
 - Playing Recorded Calls16
 - Restart Nyquist Server17
 - Stop Announcement17
 - Stop Scheduled Audio17
 - Using Audio Distribution17
 - Launching Routines18
 - Customizing Line Keys19

- Appendix A: Nyquist DTMF Feature Dialing Codes 20**
 - Alarm/Tone Activation20
 - Announcements21
 - Calling22
 - Call Parking/Call Pickup23
 - Call Forwarding23
 - Conferencing24
 - Call Transfer24
 - Monitoring/Recording25
 - Paging26
 - Voicemail27

Walking CoS	28
Dial Codes Used for Simulating Calls to Admin Station from Station Call Switches ..	28
Audio Distribution	29
Routines	29
Miscellaneous Dial Codes	30

Using the Admin Phone

The Bogen Model NQ-T1100 by Yealink is designed to serve as the Administrative Display Phone, or Admin Phone, for Nyquist Series systems. This phone combines a traditional telephone keypad with a color touch screen to provide rapid, efficient, and reliable control over many Nyquist features, such as launching Emergency-All-Call pages and managing school/site bell schedules.

This manual guides you through the use of the Admin Phone with the Nyquist system.

Hardware Components and Features

The main components of the Admin Phone are the 7-inch, 800×480 pixel, 24-bit color touch screen display and the keypad. In addition to the traditional 12-push-button dial pad, the Admin Phone features seven feature keys, six navigation keys, and volume control keys.

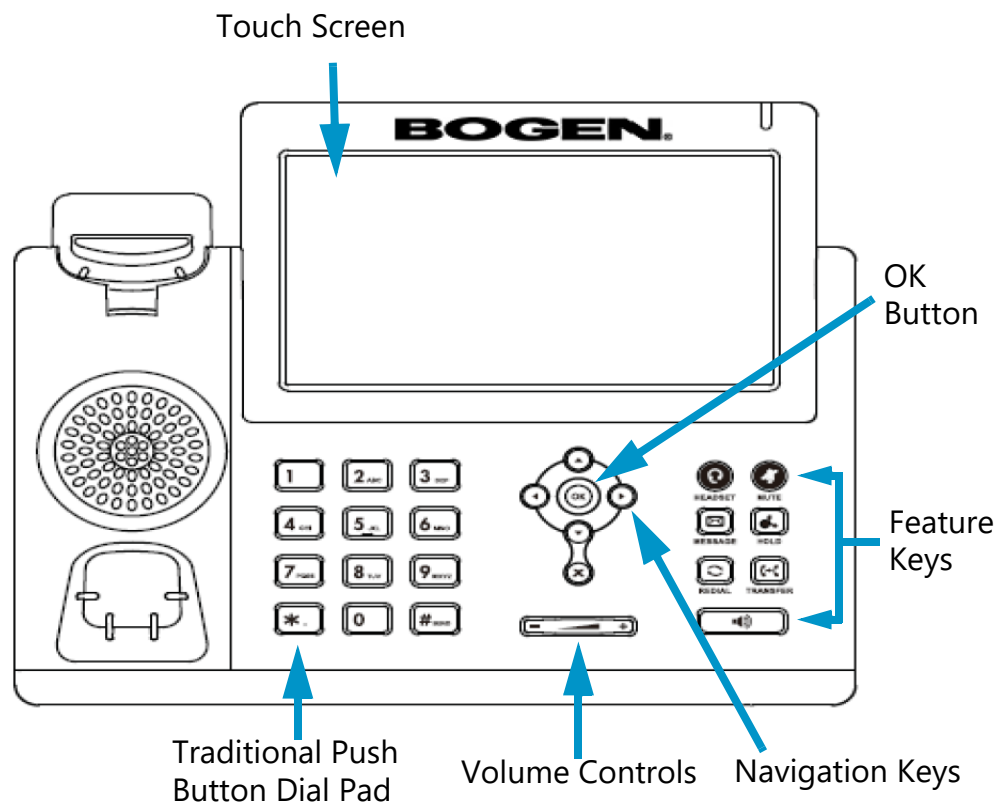









Figure 1. Hardware Components

The feature keys are described in the following table:

Table 1. Feature Keys

	Headset	Toggles and indicates the headset mode.
	Mute	Toggles and indicates the mute feature.
	Message	Allows you to retrieve voice mail messages, provided your Nyquist system has been set up to allow voice mail messages for this phone.
	Hold	Places a call on hold or resumes a held call.
	Redial	Redials the last number called.
	Transfer	Allows you to transfer a call to another extension.
	Speaker Phone	Toggles the hands-free speaker phone mode.

The touch screen displays information about calls, messages, and status and provides a graphical user interface (GUI) that allows you to quickly launch pages, access and change Schedules, start Routines, manage Audio Distribution, and use other Nyquist features. The touch screen makes switching between different screens swift, easy, and convenient.

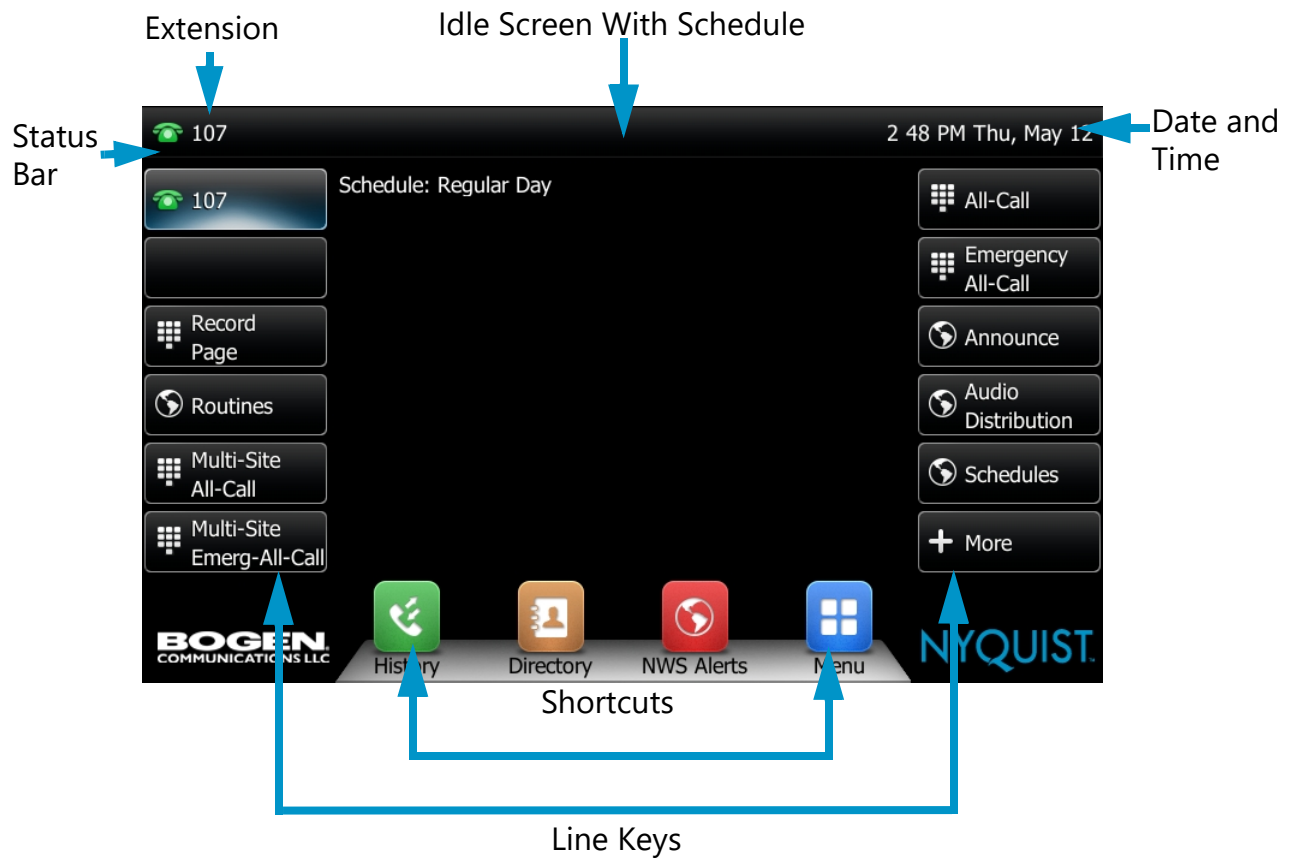


Figure 2. Display Window Features

If a bell schedule exists for your facility, the current schedule appears at the top of the idle screen. Any system messages, such as an incoming Emergency Call, and any operational or error messages appear beneath the bell schedule.

Note: The Time Zone for Date/Time are automatically set by the Nyquist server.

Viewing NWS Alert text on NQ-T1100 Admin Phone

National Weather Service Alerts text can be viewed on the NQ-T1100 Admin Phone display. To view the text of all active National Weather Service Alerts, press the **NWS Alerts** softkey found on the bottom of the NQ-T1100 Admin phone display:

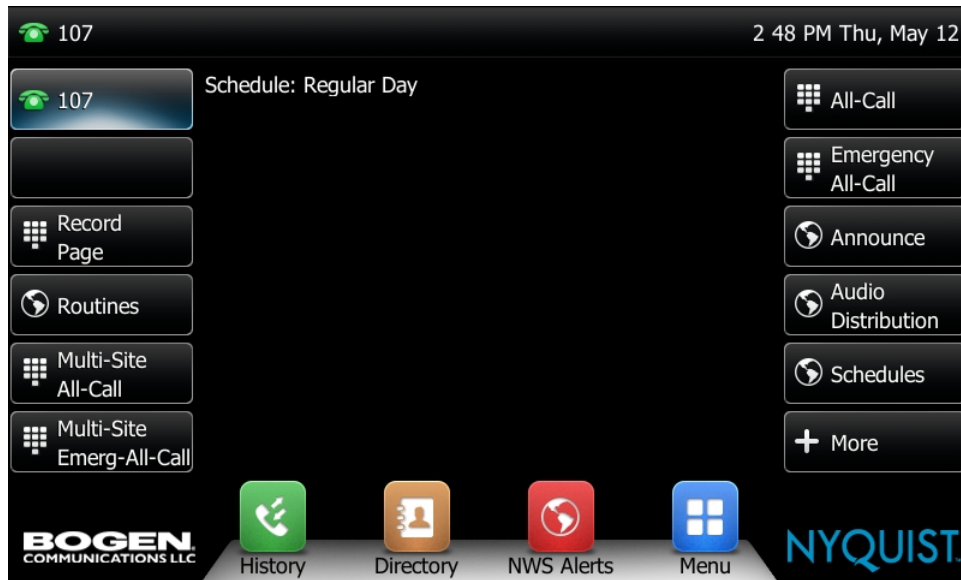


Figure 3. NWS Alerts Softkey

If no NWS alerts are active, the display will show "No alerts":

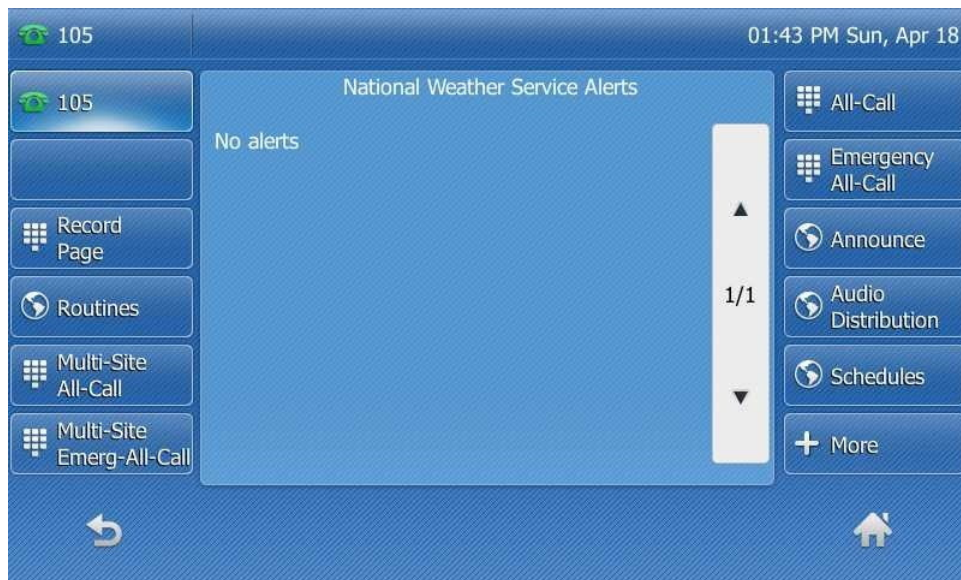


Figure 4. NWS with No Alerts

Note: "No alerts" can also indicate that there are no Routines executing to process NWS alerts via the `Display-Msg $alerts()` variable.

When NWS alerts are active, a scrollable text window will open in the center of the phone's screen to display the text of active alerts:

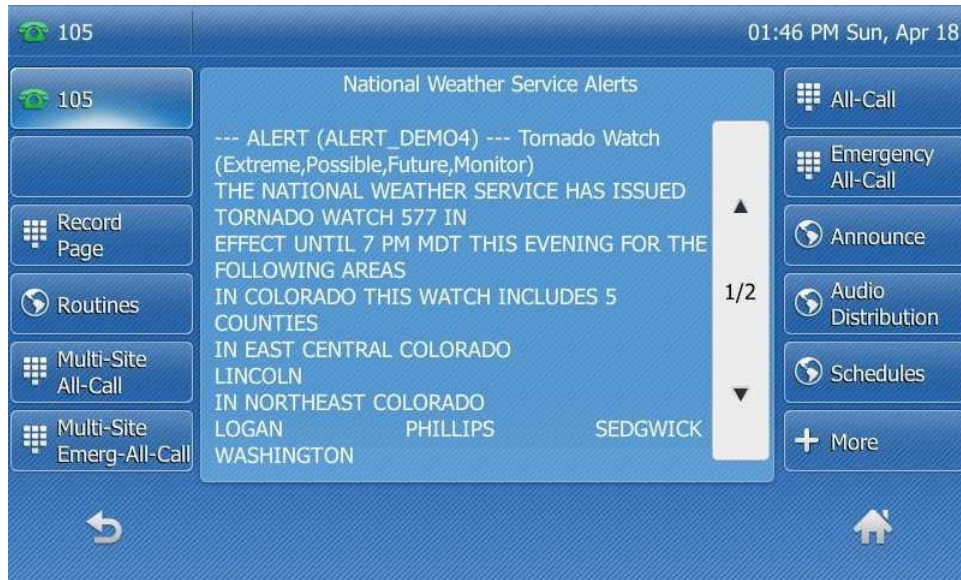


Figure 5. NWS with scrollable window

Use the scrollbar to advance through the alert text pages. Press the **(Back)** button (on the bottom left) to go back to the phone's Idle screen. While displaying the alerts, if there is no scrolling activity for 45 seconds, the phone will automatically return to the Idle screen. If a call rings on the phone while the alerts are being displayed, the phone will automatically switch to the incoming call display.

Note: The alerts display is limited to 2000 characters. If the active alerts contain more than 2000 characters of text, the end of the display will show "-TRUNCATED" to inform you that the remaining alert text has been truncated. To help reduce the number of characters taken up by alerts, consider not using the INCLUDE_INSTRUCTIONS \$alerts() parameter (see Figure 6).

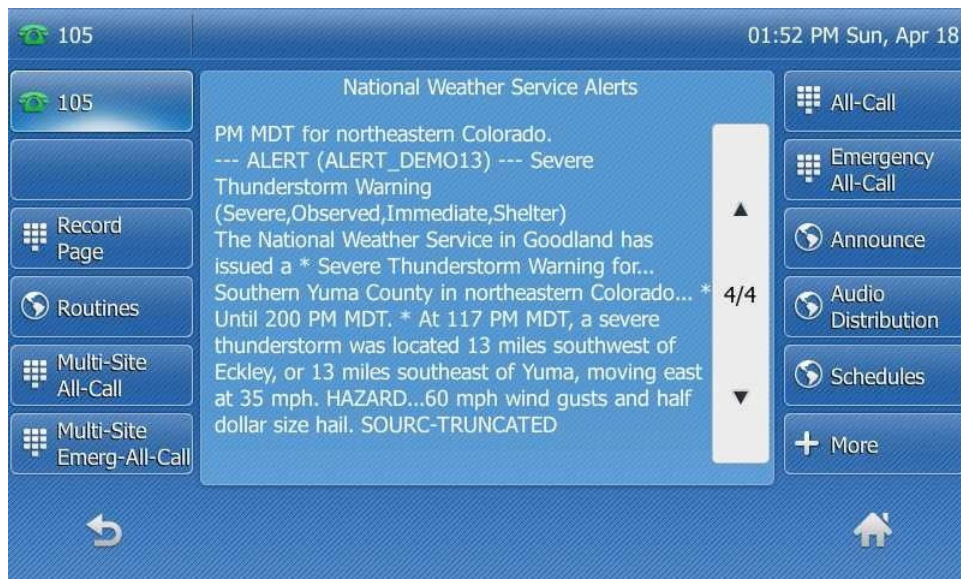


Figure 6. NWS without INCLUDE_INSTRUCTIONS

Configuring the Admin Phone

Before continuing with the following instructions, ensure that you have already added a Nyquist station for the phone; refer to the *Nyquist System Administrator Guide* for instructions on adding the NQ-T1100 IP phone as an Admin Phone station.

Setup with DHCP, and DHCP OPTION 66 set to Nyquist Server's IP Address

If your Nyquist network is configured to use DHCP for allocation of IP addresses and also setup to provide the Nyquist server's IP address via DHCP OPTION 66, then all you need to do is plug the Admin Phone into the network using a PoE network port. When using DHCP with OPTION 66, the Admin Phone will automatically obtain an IP address, automatically download configuration information from the Nyquist server, and automatically register a VoIP SIP account with the Nyquist server. No further configuration is required on the Admin Phone.

Setup with DHCP, without support for DHCP OPTION 66

The following steps will setup the Admin Phone for use in a network environment where DHCP will provide the Admin Phone with an IP address but will not provide the Nyquist server's IP address via DHCP OPTION 66 (which will need to be configured manually).

Configuring the Admin Phone using the NQ-T1100 Web Interface

- 1 Identify the Admin Phone's Internet Protocol (IP) address by doing one of the following:
 - Press the Admin Phone's **OK** navigation key to display its IP address, or
 - Locate the IP address in your network's Dynamic Host Configuration Protocol (DHCP) client table.
- 2 Open your computer's web browser, enter the Admin Phone's IP address (for example, http://192.168.0.10 or 192.168.0.10) in the address bar, and then press Enter. The computer will display the Admin Phone's web UI.
- 3 On the logon page, enter the **Username** (default is **admin**) and **Password** (default is **bogen**) and click **Login**.
- 4 Click the **Settings** tab.
- 5 Click **Auto Provision**.
- 6 Select **Off** for **PNP Active**.
- 7 Select **Off** for **DHCP Active**.
- 8 Enter the *Nyquist Server's* IP address into the **Server URL** field.
- 9 Click **Confirm** or **Save**.
- 10 Reboot the phone by unplugging the network connection and then reconnecting it.

The phone will reboot, automatically download its configuration information from the server, and reboot a second time to come online and register a VoIP SIP account with the Nyquist server.

Configuring the Admin Phone using the NQ-T1100 Phone touch screen Interface

- 1 On the Admin Phone's touch screen interface, touch the **Menu** button.
- 2 Touch **Advanced**.
- 3 Enter the admin password (default is **bogen**), touch **OK**.
- 4 Select **Auto Provision**.
- 5 Select **Off** for **DHCP Active**.
*Note: If **DHCP Active** is not displayed, use the *Configuring the Admin Phone using the NQ-T1100 Web Interface* instructions instead.*
- 6 Enter the Nyquist Server's IP address into the **URL** field.
- 7 Touch **Save**.
- 8 Reboot the phone by unplugging the network connection and then reconnecting it.

The phone will reboot, automatically download its configuration information from the server, and reboot a second time to come online and register a VoIP SIP account with the Nyquist server.

Setup with Static IP Address, no DHCP, no DHCP OPTION 66

The following steps will setup the Admin Phone using a Static IP address, for use in a network environment that uses Static IP address instead of DHCP allocated IP addresses.

When you first plug the NQ-T1100 into your network it expects to receive an IP address via DHCP (because DHCP is the phone's default configuration), it does not have a static IP address set by default. If you do not have access to a DHCP server to provide a temporary IP address, then follow the instructions under *Configuring the Admin Phone using the NQ-T1100 Phone touch screen Interface*, to manually configure the IP settings.

Configuring the Admin Phone using the NQ-T1100 Web Interface

- 1 Identify the Admin Phone's Internet Protocol (IP) address by doing one of the following:
 - Press the Admin Phone's **OK** navigation key to display the IP address, or
 - Locate the IP address in your network's Dynamic Host Configuration Protocol (DHCP) client table.
- 2 Open your computer's web browser, enter the Admin Phone's IP address (for example, http://192.168.0.10 or 192.168.0.10) in the address bar, and then press Enter. The computer will display the Admin Phone web UI.
- 3 On the logon page, enter the **Username** (default is **admin**) and **Password** (default is **bogen**) and click **Login**.
- 4 Click the **Settings** tab.
- 5 Click **Auto Provision**.
- 6 Select **Off** for **PNP Active**.
- 7 Select **Off** for **DHCP Active**.
- 8 Enter the Nyquist Server's IP address into the **Server URL** field.
- 9 Click **Confirm**.

- 10 Click the **Network** tab.
- 11 Click **Basic**.
- 12 Under **IPv4 Config**, select **Static IP Address**.
- 13 Enter desired values for **IP Address**, **Subnet Mask**, **Default Gateway**, **Primary DNS**, and **Secondary DNS**.
Note: If you were not provided with DNS addresses, you can try 8.8.8.8 and 8.8.4.4
- 14 Click **Confirm** or **Save**.
- 15 Reboot the phone by unplugging the network connection and then reconnecting it.

The phone will reboot, automatically download its configuration information from the server, and reboot a second time to come online and register a VoIP SIP account with the Nyquist server.

Configuring the Admin Phone using the NQ-T1100 Phone touch screen Interface

- 1 On the Admin Phone's touch screen interface, touch the **Menu** button.
- 2 Touch **Advanced**.
- 3 Enter the admin password (default is **bogen**), touch **OK**.
- 4 Select **Auto Provision**.
- 5 Select **Off** for **DHCP Active**.
*Note: If **DHCP Active** is not displayed, touch **Network** and continue to step #11. When finished with this section, use the *Configuring the Admin Phone using the NQ-T1100 Web Interface* instructions to set **DHCP Active** to **Off**.*
- 6 Enter the *Nyquist Server's* IP address into the **URL** field.
- 7 Touch **Save**.
- 8 Touch **Advanced**.
- 9 Enter the admin password (default is **bogen**), touch **OK**.
- 10 Touch **Network**.
- 11 Touch **WAN Port**.
- 12 Touch **IPv4**.
- 13 Change **Type** to **Static IP**.
- 14 Enter desired values for **IP Address**, **Subnet Mask**, **Default Gateway**, **Pri. DNS**, and **Sec. DNS**.
Note: If you were not provided with DNS addresses, you can try 8.8.8.8 and 8.8.4.4
- 15 Touch **Save**.
- 16 Reboot the phone by unplugging the network connection and then reconnecting it.

The phone will reboot, automatically download its configuration information from the server, and reboot a second time to come online and register a VoIP SIP account with the Nyquist server.

Note: You can also configure VLAN settings in the Network section if needed.

Making Pages

Nyquist allows the following types of pages:

- Multi-Site All-Call
- Multi-Site Emergency-All-Call
- All-Call
- Emergency All-Call
- Zone or Station

Note: The ability to make Multi-Site All-Call and Multi-Site Emergency-All-Call pages is determined by the Class of Service (CoS) configuration assigned by your system administrator for your Admin Phone.

Multi-Site Emergency-All-Call Paging

A Multi-Site Emergency-All-Call page is an emergency page that plays simultaneously throughout multiple sites that are configured in the facilities list. It has the highest priority of all pages.

To make a hands-free Multi-Site Emergency-All-Call page using the touch display:

- 1 Touch the **Multi-Site Emerg-All-Call** button.
- 2 Talk into the phone's microphone.
- 3 Touch **End Call** when finished.

To make a Multi-Site Emergency-All-Call page using the handset:

- 1 Pick up the handset.
- 2 When the dial screen appears, touch the **+More** button.
- 3 Touch the **Multi-Site Emerg-All-Call** button.
- 4 Talk into the handset.
- 5 Hang up the handset when finished.

Multi-Site All-Call Paging

A Multi-Site All-Call Page is a non-emergency page that plays simultaneously throughout multiple sites.

To make a hands-free Multi-Site All-Call page using the touch display:

- 1 Touch the **Multi-Site All-Call** button.
- 2 Talk into the phone's microphone.
- 3 Touch **End Call** when finished.

To make a Multi-Site All-Call page using the handset:

- 1 Pick up the handset.
- 2 When the dial screen appears, touch the **+More** button.

- 3 Touch the **Multi-Site All-Call** button.
- 4 Talk into the handset.
- 5 Hang up the handset when finished.

Emergency-All-Call Paging

An Emergency-All-Call page is a high priority page that simultaneously plays throughout the facility. An Emergency-All-Call page has a higher priority than an All-Call or Normal page.

To make a hands-free Emergency-All-Call page using the touch display:

- 1 Touch the **Emergency-All-Call** button.
- 2 Talk into the phone's microphone.
- 3 Touch **End Call** when finished.

To make an Emergency-All-Call page using the handset:

- 1 Pick up the handset.
- 2 When the dial screen appears, touch the **+More** button.
- 3 Touch the **Emergency-All-Call** button.
- 4 Talk into the handset.
- 5 Hang up the handset when finished.

All-Call Paging

An All-Call page is a non-emergency page that simultaneously plays throughout the facility.

To make a hands-free All-Call page using the touch display:

- 1 Touch the **All-Call** button.
- 2 Talk into the phone's microphone.
- 3 Touch **End Call** when finished.

To make an Emergency-All-Call page using the handset:

- 1 Pick up the handset.
- 2 When the dial screen appears, touch the **+More** button.
- 3 Touch the **All-Call** button.
- 4 Talk into the handset.
- 5 Hang up the handset when finished.

Zone Paging

You can choose to page only certain areas of the facility, called zones. The zones, which are collections of stations, must be created through the Web-based System Admin User Interface (UI) before zone paging from the Admin Phone can occur. Zones appear in the phone's Directory under the Paging menu. The Paging menu also includes entries for Facility paging.

To make a zone page using the display:

- 1 Touch the **+More** button.
- 2 Select the zone that you want to page.
- 3 Talk into the phone's microphone.
- 4 Touch **End Call** when finished.

To make a zone page using the handset:

- 1 Pick up the handset.
- 2 When the dial screen appears, touch the **+More** button.
- 3 Select the zone that you want to page.
- 4 Talk into the handset.
- 5 Hang up the handset when finished.

To make a zone page or facility page using the Directory:

- 1 Touch **Directory**.
- 2 Select **Paging**.
- 3 Scroll through the zone list using the scroll bar or navigation keys and select the desired zone to page.
- 4 Talk into the microphone or handset.
- 5 Press **End Call** or hang up the handset when finished.

Note: Paging zone names that begin with "Zone-Facility" are Facility zones that will play to the listed facility.

Record Page

You can record a page to be added to a zone queue. The maximum length of time for a recorded page is 60 minutes; if the recording exceeds 60 minutes, it will time out and not be saved. If the recording is silent for 60 seconds, it will time out and not be saved.

Note: When the DTMF Code #{Zone Number} is used to initiate a zone page, Nyquist will start recording a queued page if the zone belongs to a queue. If you want to start a real-time page to the zone instead, dial #{Zone Number}*.

Pages in a zone's queue are played in the order that they are placed in the queue. A live page started on a zone that is playing a recorded page will cause the recorded page to be terminated and sent back to the queue. The interrupted message will play again from the beginning of the message when the zone becomes idle. Multi-Site Emergency-All-Call, Multi-Site All-Call, Emergency All-Call, All-Call, Alarm, Tone, and Emergency Announcement will also interrupt any queued messages playing in any

zones. All re-queued messages will play again from the beginning of the message when the applicable zones become idle.

Selecting **Disable Audio** will cause playback paging of all recorded messages to stop. The messages will resume play from the beginning when audio is re-enabled.

To record a page for page queuing:

- 1 Do one of the following:
 - Touch the **Record Page** button.
 - Touch **Directory**, select **Paging**, and then select **Record Page**.
- 2 When prompted, enter the queue number for the queue that you want to page and press #.
- 3 Wait for the tone and then record your message.
- 4 Hang up when finished.

Making Calls

The steps for making calls depend on whether you are making the call from the display and speaker or from the handset and whether you know the extension that you want to call.

To make a call by dialing the extension number:

- 1 Do one of the following:
 - Press the **Speaker Phone** feature key.
 - Dial the extension number. When you start to dial, the keypad automatically appears.
 - Pick up the handset.
- 2 Dial the extension. You can dial from either the touch display or dial pad.
- 3 Touch **Send** or **Call**.
- 4 When finished with the call, either select **End Call** or hang up the handset.

To make a call using the Remote Phone Book:


- 1 Do one of the following:
 - Touch **Directory**.
 - Pick up the handset, and then select **Directory**.
- 2 Ensure **Remote Phone Book** is selected, and then select **Stations**.
- 3 Use the scroll bar or navigation keys to navigate to the station that you want to call, and then select that station.
- 4 When finished with the call, either select **End Call** or hang up the handset.

Calls can be placed to any extension, or to any Nyquist feature using DTMF codes listed in Appendix A.

Changing the Event Schedule

Nyquist allows the setting of bells and announcements to be played at specific times and in specific zones. More than one schedule can be created for a school/site. For example, a school/site may have an early release day on Wednesday and have classes begin and end at different times on that day than on the other days of the week. Based on this example, a Regular Schedule or an Early Release Schedule can be selected for the current day.

The Schedules feature available via the Admin Phone provides a quick way to change the bell schedule for the day. For example, if you normally use an Early Release Schedule for Wednesdays but want to use this schedule for today (which is slated to use the Regular Schedule), you can select the Early Release Schedule through the Admin Phone.

Note: If you want to use the handset, pick up the handset and then select the  (**Back**) button before following the steps.

To change today's schedule:

- 1 Touch **Schedules**.
- 2 Select the schedule that you want for the day. If you have more than one school/site appearing in the Schedules view, ensure you have selected the correct schedule for the correct school/site.

An asterisk (*) appears before the current schedule. Selecting **None** disables the schedule, which also disables scheduled tones, audio, and routines included in the schedule.

- 3 Touch **Change Schedule**.
- 4 When prompted, enter the System Password.

Playing Alarms

You can play a facility alarm from a list of default alarms and those created through the Admin Web UI.

To play an alarm:

- 1 Do one of the following:
 - Touch **Directory**.
 - Pick up the handset, and then select **Directory**.
- 2 Ensure **Remote Phone Book** is selected, and then select **Alarms**.
- 3 Use the scroll bar to navigate to the alarm that you want, and then select that alarm. The alarm plays continuously until you manually stop it.
- 4 To end the alarm, touch **End Call** or hang up the handset.

Note: If you want to end an alarm that is already active, select **STOP Alarm**.

Playing Tones

Nyquist provides tones that can be used with events, such as bell schedules or announcements. In addition to the default tones, tones can also be created or downloaded through the Admin Web UI.

To play a tone:

- 1 Do one of the following:
 - Touch **Directory**.
 - Pick up the handset, and then select **Directory**.
- 2 Ensure **Remote Phone Book** is selected, and then select **Tones**.
- 3 Use the scroll bar to navigate to the tone that you want, and then select that tone.
- 4 To end the tone, touch **End Call** or hang up the handset.


Note: If you want to end a tone that is already active, select **STOP Tone**.

Forwarding Calls

If your Admin Phone has the appropriate CoS parameter set, you can forward your calls to another Nyquist extension, whether it's a physical station or a Web UI station. You can select to always forward calls, forward calls if you are on another call, or forward calls if they are not answered within a specified number of seconds.

If the Admin Station remains busy for more than two minutes, an Analog Call Switch and Speaker or Digital Call Switch and Speaker caller will be told that the call cannot be completed and to please try again. The call switch will return to the idle state.

You can forward calls using either the **Menu** or **Directory** options.

Note: If you want to use the handset, pick up the handset and then select the  button before following the steps.

To forward calls from the Menu:

- 1 Touch **Menu**.
- 2 Touch **Features**.
- 3 Touch **Call Forward**.
- 4 Select from one of the following options:
 - 5 – Always Forward
 - 6 – Busy Forward
 - 7 – No Answer Forward
- 5 Select **On**, and then enter the extension or phone number that the call is to be forwarded to.
- 6 Touch **Save**.

Note: If you use the Menu option and attempt to forward to an extension that is already forwarding to your extension, you will not receive an error, even though the call forwarding will not be activated.

To ensure that the desired call forwarding is activated and to receive audio feedback on setting up call forward, use the following steps.

To call forward from the Directory:

- 1 Touch **Directory**.
- 2 Touch **Features**.
- 3 Touch **Call Forwarding**.
- 4 Select one of the following from the interactive audio menu:
 - 1 – Call Forward for Unconditional
 - 2 – Call Forward on Busy
 - 3 – Call Forward on No Answer
 - 4 – Call Forward on Busy and Call Forward on No Answer
 - 5 – No Call Forwarding
- 5 When prompted, enter the extension or phone number that the call is to be forwarded to.

The system will provide error messages if it is unable to perform the desired call forwarding.

To turn Call Forwarding off from the Menu:

- 1 Touch **Menu**.
- 2 Touch **Features**.
- 3 Touch **Call Forward**.
- 4 Select **Off**.
- 5 Touch **Save**.

To turn Call Forwarding off from the Directory:

- 1 Touch **Directory**.
- 2 Touch **Features**.
- 3 Touch **Call Forwarding**.
- 4 From the interactive audio menu, select **5 – No Call Forwarding**.

Using the Voice Mail Feature

If your phone has the appropriate CoS parameter set, you can view details about and listen to voice mail messages and set the code that can be used to retrieve your voice mail messages.

The Power indicator flashes red if you have a new voice mail message.

To listen to voice mail messages:

- 1 Press the **Message** key.
- 2 Follow prompts to retrieve messages.

Recording Announcements

You can record announcements to be played immediately after they are recorded or to play at a later date and time.

To record an announcement:

- 1 Do one of the following:
 - Touch **Directory**.
 - Pick up the handset, and then select **Directory**.
- 2 Ensure **Remote Phone Book** is selected, select **Features**, and then select **Record Announcement**.
- 3 After the tone, record your announcement, and press **#** when finished.
- 4 Select from the following options:
 - Press **1** to accept this recording.
 - Press **2** to listen to it.
 - Press **3** to re-record your message.
- 5 Select from the following options:
 - Press **1** to save this announcement.
 - Press **4** to play this announcement now.
 - Press **7** to schedule this announcement.

If you select 7, enter the 2-digit month, 2-digit date, 4-digit year, and then enter the hour and minutes in HH:MM format for the date and time the announcement will play.
- 6 Follow any additional prompts.

Playing Recorded Calls

If your phone has the appropriate CoS parameter set, you can playback recorded calls.

To playback recorded calls:

- 1 Do one of the following:
 - Touch **Directory**.
 - Pick up the handset, and then select **Directory**.
- 2 Ensure **Remote Phone Book** is selected, and then select **Features**.
- 3 Select **Playback Recorded Calls**.
- 4 Select the type of recorded call that you want to playback. Options are:
 - 1 – Emergency
 - 2 – Monitoring Call
 - 3 – Urgent
 - 4 – Normal

Restart Nyquist Server

To restart the Nyquist Server:

- 1 Touch **Directory**.
- 2 Select **Features**.
- 3 Select **Restart Nyquist Server**.
- 4 Enter the system password.

Note: **Restart Nyquist Server** only restarts the Nyquist application; it does not reboot the server or restart the Operating System.

Stop Announcement

To stop an announcement if the Announce key is present:

- 1 Touch the **Announce** button.
- 2 Use the navigation keys to select **Stop Announcement**.
- 3 Follow audio prompt.

To stop an announcement if the Announce key is NOT present:

- 1 Touch **Directory**.
- 2 Select **Features**.
- 3 Select **Stop Announcement**.
- 4 Follow audio prompt.

Stop Scheduled Audio

To stop scheduled audio:

- 1 Touch **Directory**.
- 2 Select **Features**.
- 3 Select **Stop Scheduled Audio**.

Using Audio Distribution

Note: The Admin Station must have **Audio Distribution** CoS enabled in order for the **Audio Distribution** menu to display on the Admin Phone.

Audio Distribution can be started and stopped using the Audio Distribution menu.

To start audio distribution:

- 1 Touch **Audio Distribution**.
- 2 From the menu, select the audio distribution that you want to start.

After an audio distribution is started, the entry displayed in the menu will be prefixed with **(P)** to indicate that it's playing.

To stop audio distribution:

- 1 Touch **Audio Distribution**.
- 2 From the menu, select the audio distribution that you want to stop; it must be prefixed with **(P)**.

To stop ALL audio distribution:

- 1 Touch **Audio Distribution**.
- 2 From the menu, select **Stop ALL Audio Distribution**.

The audio distribution entries listed in the **Audio Distribution** menu use the following suffixes depending on the zones/stations that are defined as targets for playing the audio:

- [All Speakers] – Indicates play to all speakers.
- [Zone] – Indicates play to a single zone where Zone is replaced with zone number.
- [Zone, Zone...] – Indicates play to two or more zones where Zone is replaced with zone number.
- [Zone+] – Indicates play to a single zone plus one or more specific stations. (Stations are not listed.)
- [Zone, Zone...+] – Indicates play to two or more zones where Zone is replaced with zone number, plus one or more specific stations. (Stations are not listed.)

Launching Routines

Note: The ability to manually launch routines is determined by the CoS configuration assigned by your system administrator for your Admin Phone.

You can manually launch a routine that has **Allow DTMF** enabled from an Admin Phone by doing one of the following:

- Dial *94{Routine-DTMF-code}.
- Select the **Routines** menu from the Admin Phone and then select the routine that you want to launch.

Note: Only routines with **Allow DTMF** enabled appear in the menu.

Note: If you use *94 to start a routine, you can also pass parameters to the Routine using the following DTMF syntax: *94{routine-DTMF-code}*{parameter1}*{parameter2}

Note: To display a list of Routine DTMF codes, select the **Routines** menu; in the displayed routines list, the number displayed in parentheses after the routine name is the routine DTMF code for the Routine.

If you disconnect the call during a routine, the routine continues until finished. If the routine includes **Pause** actions, the call will not disconnect until all **Pause** actions have been executed.

A routine launched from the Admin Phone can end with any of the following page commands, provided the Admin Phone has the appropriate CoS enabled:

- All-Call
- Emergency-All-Call
- Facility-Page
- Mutli-Site-All-Call
- Multi-Site-Emergency-All-Call
- Zone-Page

Customizing Line Keys

Line keys are the soft keys that appear on the display window (see "Display Window Features" on page 3). Once the NQ-T1100 IP Phone has been added as a Station, the placement and labels of line keys can be customized. For information regarding customizing line keys, refer to the "Customizing an NQ-T1100 IIP Phone – Color Touch Display" section in the *Nyquist System Administrator Guide*.

To customize a line key that is set to type "Reserved":

- 1 On the phone's display window, long press the key that you want to customize.
- 2 For the **Type**, select **SpeedDial**.
- 3 For **Account ID**, select the line that you are customizing.

By default, Line 1 is associated with the Nyquist system and would be the appropriate choice.

- 4 For **Label**, enter a label that will appear on the display window for this key. The label should describe what occurs when you select the line key (for example, Fire Alarm).
- 5 For **Value**, enter the DMTF code sequence that is to be dialed on the Nyquist system when the soft key is pressed. For example, to play a fire alarm, you would enter *91 and the number of the alarm that you want to play. For a list of DMTF codes, see "*Nyquist DTMF Feature Dialing Codes*" on page 20.
- 6 Press **Save**.

To remove programming from a line key:

- 1 On the phone's display window, long press the key.
- 2 For the **Type**, select **N/A**.
- 3 Press **Save**.

Appendix A: Nyquist DTMF Feature Dialing Codes

Note: The use of feature dial codes is restricted by the station's CoS assignments.

Alarm/Tone Activation

Description	DTMF Code	Required CoS
Start Alarm specified by {DTMF-code}	*91{DTMF - code}	Activate Alarm Signals
	0000091{DTMF - code}	Activate Alarm Signals
Start Tone specified by {DTMF-code}, play to {zone} <i>Note:</i> *{zone} is optional.	*96{DTMF - code}*{zone}	Manually Activate Tone Signals
	0000096{DTMF - code}*{zone}	Manually Activate Tone Signals
Start Tone specified by {DTMF-code}	*96{DTMF - code}	Manually Activate Tone Signals
Prompts user to enter a tone number and tone parameters (e.g., times to play) and starts the tone at all Time-type zones	*96	Manually Activate Tone Signals

Announcements

Description	DTMF Code	Required CoS
Start Announcement specified by {DTMF-code} to station's configured "Announcement Zone" <i>Note:</i> If "Announcement Zone" is not configured, the caller will be prompted to enter a zone number.	*92{DTMF-code}	All-Call Page
	0000092{DTMF-code}	All-Call Page
Start Announcement specified by {DTMF-code}, play to {zone}	*92{DTMF-code}*{zone}	Zone Paging
	0000092{DTMF-code}*{zone}	Zone Paging
Start Announcement specified by {DTMF-code} to all Facilities (including local facility)	*97{DTMF-code}#0	Multi-Site Paging Inter-Facility Call/Page
Start Announcement specified by {DTMF-code} to Facility specified by {facility-page-number}	*97{DTMF-code}#{facility-page-number}	Inter-Facility Call/Page
Start Announcement specified by {DTMF-code} to dialed Facilities <i>Note:</i> Use "0" for {facility-page-number} to include the local facility. <i>Note:</i> The number of dialed digits cannot exceed 70 digits.	*97{DTMF-code}#{facility-page-number}*{facility-page-number}	Multi-Site Paging Inter-Facility Call/Page
Stop Announcement currently playing to {Zone-Number}	*93{zone-number}	
	0000093{zone-number}	

Calling

Description	DTMF Code	Required CoS
Call {extension} speaker (intercom, auto-answer)	{extension}	Call Any Station
Call {extension} ringer (telephonic, ringing)	*{extension}	Call Any Station
Join conversation at {extension}	*#{extension}	Join Conversation
Call {extension} at {facility-page-number}	##*{facility-page-number}*{extension}	Inter-Facility Call/Page
Place long distance call with area code (AAA = Area code, NNNNNNN = number)	981AAANNNNNNN	Outside Access rights
Place local ten-digit call with area code	98AAANNNNNNN	Outside Access rights
Place local seven-digit call	98NNNNNNN	Outside Access rights
Place 911 emergency call	911	
<i>Note:</i> Based on Station's 911 Route setting, call may be directed to Admin Station, PSTN-based 911, or denied.	98911	
Place Emergency call to designated Admin station	****	
Place call to PBX system (via SIP Trunk) by dialing {DTMF-codes}	***{DTMF-codes}	Outside Access rights
<i>Note:</i> {DTMF-codes} can be as simple as an extension number on the attached PBX system.		

Call Forwarding

Description	DTMF Code	Required CoS
Call Forwarding Menu	970	Call Forwarding
All-Calls (CFALL)	971{extension}	Call Forwarding
When Busy (CFBS)	972{extension}	Call Forwarding
When No Answer (CFNA)	973{extension}	Call Forwarding
When Busy or No Answer (CNBN)	974{extension}	Call Forwarding
Cancel Call Forwarding	975	Call Forwarding
Call Forwarding Status (Caller only)	976	Call Forwarding
Call Forwarding Status (All users)	977	Call Forwarding

Call Parking/Call Pickup

Description	DTMF Code	Required CoS
Park call (during call)	#72	
<i>Note:</i> To pick up a parked call, dial the parked call's extension (by default, extensions 21-29) that was provided when the call was parked using #72. The parking lot extensions can be changed at the Admin Web UI through System Parameters .		
Call pickup {extension} when ringing	7*{extension}	Remote Pickup

Call Transfer

Description	DTMF Code	Required CoS
Blind transfer (during call)	#1{extension}	Call Transfer
Attended transfer (during call)	*1{extension}	Call Transfer
Complete attended transfer, dropping out of call	*2	Call Transfer
Complete attended transfer, but stay in the call	*3	Call Transfer
Swap to the other party (during attended transfer)	*4	Call Transfer
Transfer (drop) call from Speaker to associated Phone	*3	Call Transfer
Transfer (drop) call from Speaker to associated Phone	####	Call Transfer
Transfer call from Phone to associated Speaker	#1{speaker-extension}	Call Transfer

Conferencing

Description	DTMF Code	Required CoS
Create/Enter Dynamic Conference {number}	**{number}	Conference Admin Conference User
<p><i>Note:</i> If the conference owner enters 0000 as the password, the conference will be deleted. If an Admin station user type enters 0000 as the password but is not the conference owner, the user will be prompted for the system password. If the correct system password is entered, the conference will be deleted.</p>		
Start system playback of list of created conferences that includes the conference number and the extension that created the conference	**0	

Monitoring/Recording

Description	DTMF Code	Required CoS
Monitor call or location at {extension} <i>Note:</i> Spy Mode monitoring cannot be used on a station that has been set to Privacy Mode.	978{extension}	Monitor Calls/Locations
Enable "spy mode" (MUTE) during call monitoring	4	
Enable "whisper mode" during call monitoring	5	
Enable "barge mode" during call monitoring	6	
Record Message (Announcement)	*990	All-Call Paging
<p><i>Note:</i> When you record an announcement by dialing *990 or by selecting Record Announcement on the Admin phone's Announce menu, the initial DTMF Code for the recorded and saved announcement will be set to the announcement's row ID. You can change the DTMF Code after the announcement is saved by editing the announcement in the web interface Announcements view.</p> <p>The saved announcement has Play to Zone set to blank (no zone selected). This means that when you play an announcement via an IP phone Announcement menu selection, you will be asked to enter a zone number (where 0 = All Speakers). You can define a permanent zone number for the saved announcement by updating Play to Zone after the recorded announcement has been saved.</p>		
Playback recorded calls MENU: 1–Emergency, 2–Monitored, 3–Urgent, 4–Standard	999	Manage Recordings
Start/Stop recording (DTMF used during a call)	*3	Record Calls

Paging

Note: The "##" prefix is used to indicate multi-facility paging operations.

Description	DTMF Code	Required CoS
Multi-Site Emergency All-Call Page	##0911	Emergency All-Call Multi-Site Paging
Multi-Site All Call Page	##0	All-Call Paging Multi-Site Paging
Emergency All-Call Page	#0911	Emergency All-Call
Multi-Facility Emergency All-Call Page	##0912{facility-page-number}*{facility-page-number}...	Emergency All-Call Multi-Site Paging
Emergency All-Call Page	951	Emergency All-Call
All-Call Page	#0	All-Call Paging
	#00	All-Call Paging
	0000000	All-Call Paging
Page to {zone}	#{zone}	Zone Paging
	0000099{zone}	Zone Paging
Real-time Page to {zone} that belongs to a queue	#{zone>*	Zone Paging
All-Call Page to {facility-page-number}	##{facility-page-number}	Inter-Facility Call/Page
Multi-Facility All-Call Page	##{facility-page-number}*{facility-page-number}...	Inter-Facility Call/Page
Zone Page to {zone-number} at {facility-page-number}	##{facility-page-number}#{zone-number}	Inter-Facility Call/Page

Paging (Continued)

Note: The "##" prefix is used to indicate multi-facility paging operations.

Description	DTMF Code	Required CoS
Real-time page to {zone-number} that belongs to a queue at {facility-page-number}	##{facility-page-number}#{zone-number}*	Inter-Facility Call/Page
Record page; system will prompt for Zone Number	*991	Zone Paging
Record page for {zone-number}	*991*{zone-number}	Zone Paging
Cancel Recorded Page <i>Note: Only works if made from the same extension that created the recorded page.</i>	*992	Zone Paging
Cancel Recorded Page for {zone-number} <i>Note: Only works if made from the same extension that created the recorded page.</i>	*992*{zone-number}	Zone Paging

Voicemail

Description	DTMF Code	Required CoS
Voicemail for current caller	900	Voicemail
Voicemail for specified {extension}	904{extension}	Voicemail
Leave voicemail for specified {extension}	904{extension}*	Voicemail

Walking CoS

Description	DTMF Code	Required CoS
Current IP phone's extension becomes {extension} <i>Note:</i> If Auth Code is set to 0000 in the Admin Web UI's System Parameters , this feature is disabled.	3*{auth-code}*{extension}	Walking Class of Service

Dial Codes Used for Simulating Calls to Admin Station from Station Call Switches

Description	DTMF Code	Required CoS
Normal call to admin <i>Note:</i> During the Check-In process, a Normal call starts the check-in process for a station.	0	
Emergency call to admin	*0	
Urgent call to admin	*00	
Outside line calling in (uses night-ring logic)	*000	

Routines

Description	DTMF Code	Required CoS
Execute Routine with {routine-DTMF-code}	*94{routine-DTMF-code}	Execute Routines
<i>Note:</i> Only routines with Allow DTMF can be executed from the Admin Phone.	0000094{routine-DTMF-code}	Execute Routines
Execute Routine with {routine-DTMF-code} specifying values for parameters \$cmdParam1 and \$cmdParam2.	*94{routine-DTMF-code}*{parameter1}*{parameter2}	Execute Routine
Only routines with Allow DTMF can be executed from the Admin Phone.	0000094{routine-DTMF-code}*{parameter1}*{parameter2}	Execute Routine
Stop Routine with {routine-DTMF-code}	*95{routine-DTMF-code}	Execute Routines
<i>Note:</i> If the Allow DTMF parameter for the specified routine is set to No , you will be prompted to enter the system password.	0000095{routine-DTMF-code}	Execute Routines

Audio Distribution

Description	DTMF Code	Required CoS
Start Audio Distribution where {DTMF-code} is the DTMF code for the desired Audio Distribution	987*{DTMF-code}	Audio Distribution
	00000987{DTMF-code}	Audio Distribution
Stop Audio Distribution where {DTMF-code} is the DTMF code for the desired Audio Distribution	980*{DTMF-code}	Audio Distribution
	00000980{DTMF-code}	Audio Distribution
Stop ALL Scheduled Audio	920	Audio Distribution

Miscellaneous Dial Codes

Description	DTMF Code	Required CoS
Restart Nyquist system server <i>Note:</i> User is prompted for System Password.	#*349	
Toggle Audio Distribution to associated speaker	*9	
Disable Audio	0000097	Disable Audio
Enable Audio	0000098	Enable Audio
Stop Scheduled Audio	920	Audio Distribution
Close {contact-number} on I/O Controller {extension} (For example, dialing 942#120#1 closes contact number 1 on I/O Controller 120.)	942#{extension}#{contact-number}	Manage Output Contacts
Open {contact-number} on I/O Controller {extension} <i>Note:</i> For example, dialing 943#120#1 opens contact number 1 on I/O Controller 120.	943#{extension}#{contact-number}	Manage Output Contacts
Request a callback during a call	*7	Call Any Station
Cancel a callback request during a call	*8	Call Any Station
Request a callback from a specific extension	*7{extension}	Call Any Station
Cancel a callback request from a specific extension	*8{extension}	Call Any Station
Start Nyquist Features on Remote Facilities	###{facility-page-number}*{feature-DTMF-digits}	Inter-Facility Features
Examples:		
Start Announcement 1 on Facility 1	##*1*00000921	
Start Audio Distribution 6 on Facility 5	##*5*000009876	
Execute Routine 5 on Facility 10	##*10*00000945	