


# QUICKSTART "BASIC" INSTALLATION GUIDELINES FOR AN 1812 CLASSIC CABINET AND BY-PASS BOARD




120 Glasgow Avenue  
Inglewood, California 90301  
U.S.A.

It is highly recommended that you consult the Installation/Owner's manual for complete instructions on all the different types of installations. The 1812 Classic Telephone Entry System involves the installation of the 1812 Classic cabinet, the by-pass board for the incoming telephone line, and wiring of these components (On reverse side). Be sure that all dirt, metal or wood debris is removed from inside cabinet after mounting it. This could damage the control board and cause a malfunction during operation.

## Remove Control Board from Cabinet

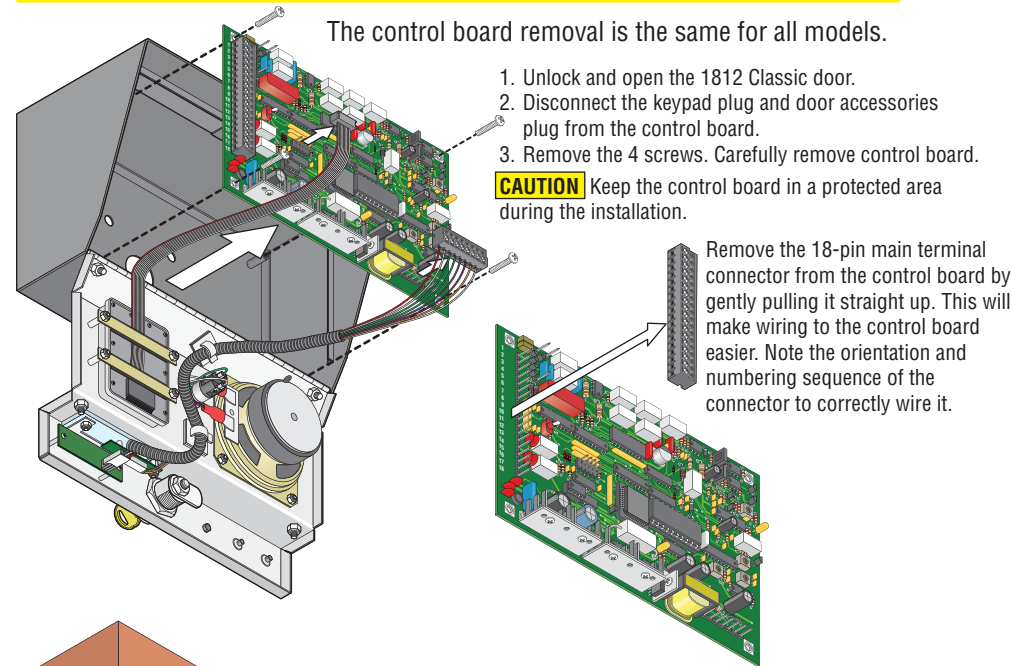


**IMPORTANT** The 1812 Classic and by-pass board **MUST** be properly grounded! A gooseneck mounting post anchored in concrete **does not make a good ground.**

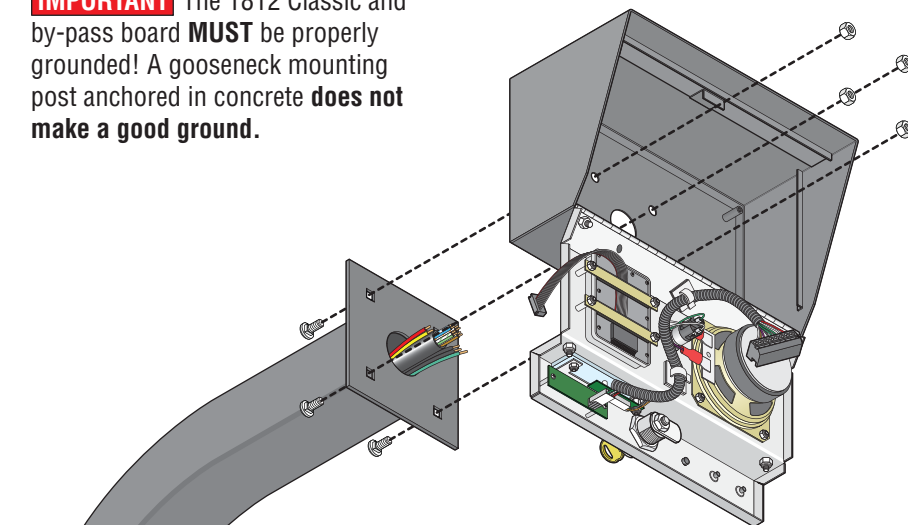


## Mount Cabinet on a Mounting Post

Use existing 4 holes in cabinet box to bolt the surface or wall mount models on a DoorKing mounting post (there are several different styles available). Use the hardware that is supplied with the mounting post. Run all necessary wires through the post to the cabinet (See reverse side).

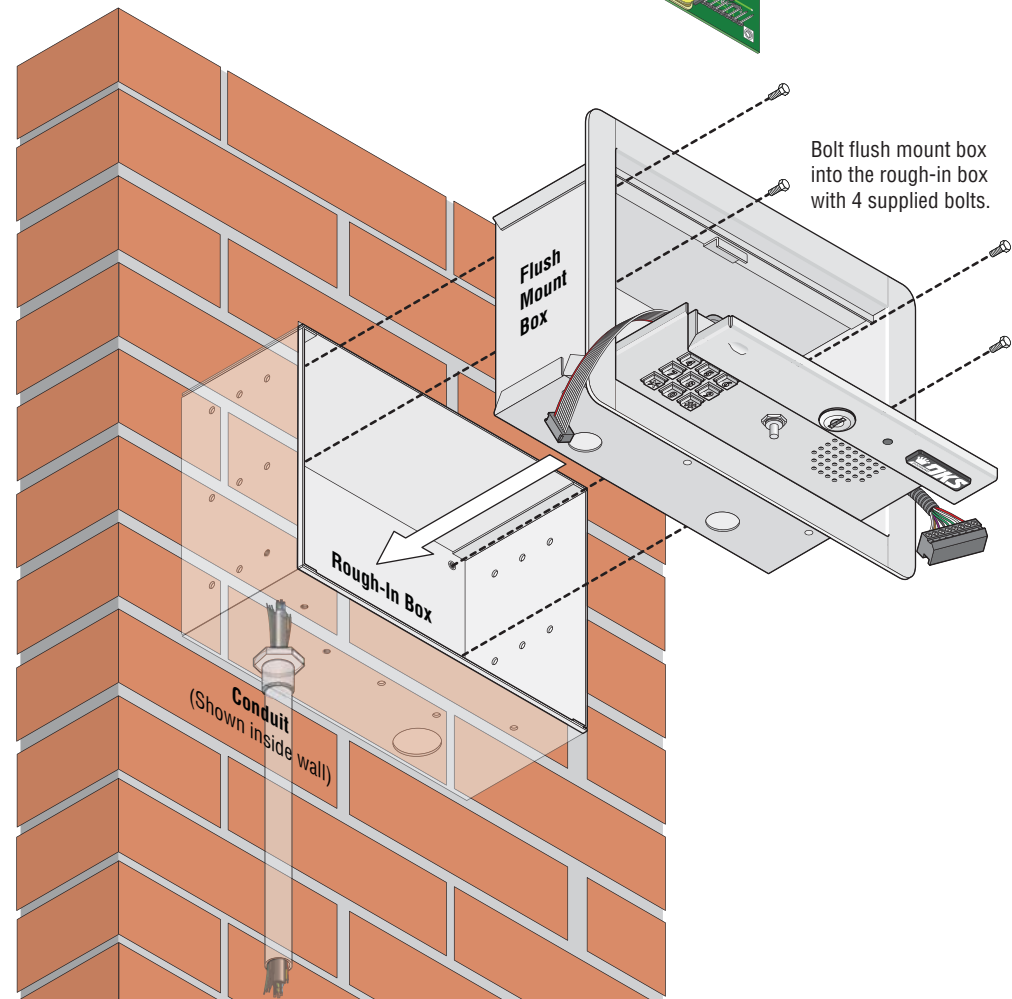




## Flush Mount Cabinet in a Pilaster, Wall or Kiosk

Mount rough-in box into the pilaster, wall or kiosk. Run conduit inside wall into bottom of rough-in box if desired. Use appropriate hardware (Not supplied) to secure the rough-in box in place. Run all necessary wires through the conduit in to the rough-in box (See reverse side).

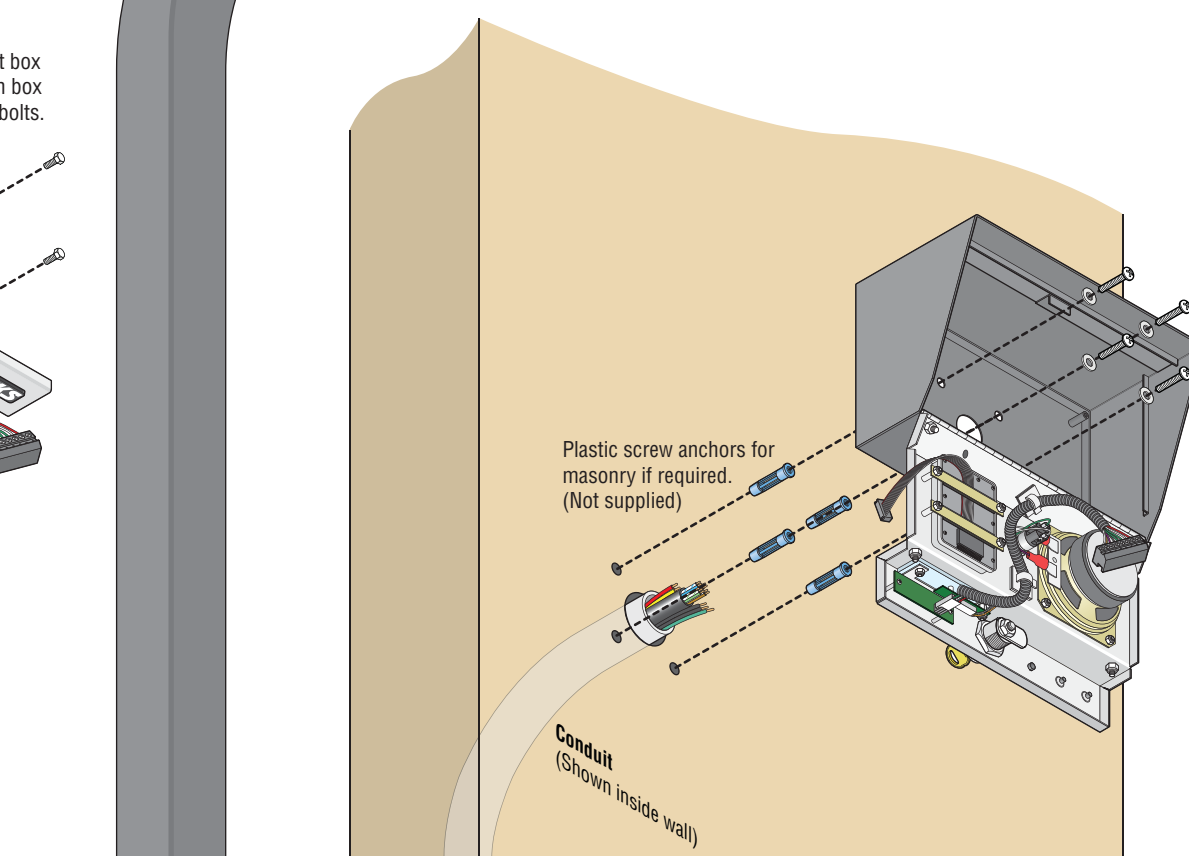

## Mount Cabinet Directly to a Wall or Pilaster

Use the 4 existing holes in the cabinet box to screw the surface or wall mount models to the wall. Run conduit inside or outside of wall or pilaster if desired. Use appropriate hardware to mount the cabinet (Not supplied). Be sure that the mounting hardware does not protrude into the cabinet where it could cause a short. Run all necessary wires through the conduit to the cabinet (See reverse side).

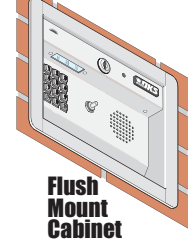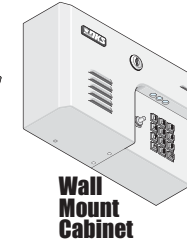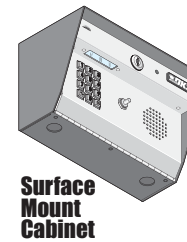


## Install the By-Pass Board

The 1812 Classic by-pass board provides a method to by-pass the 1812 Classic and route the incoming telephone line directly to the homeowner's phone. It must be installed as part of the 1812 Plus system. All telephone wires for the 1812 Classic must pass through the by-pass board. Mount the by-pass board in a location that is easily accessible by the homeowner. In case of 1812 trouble or maintenance, the homeowner will use the by-pass switch on the board to route the incoming telephone line directly to their home phone. If the by-pass board is installed outdoors, it must be installed in a NEMA Type 4 enclosure (not supplied) with conduit to protect the board and wires from direct exposure to landscape sprinklers, rain, snow, and other elements.


**"Entry"** switch position:

Routes incoming phone line through 1812 Classic and then to the home phone.

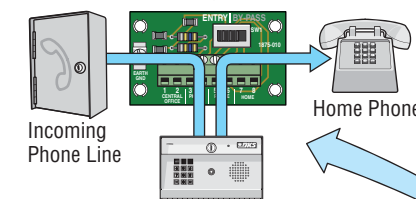


**"By-Pass"** switch position:

Routes incoming phone line directly to the home phone, bypassing 1812 Classic.

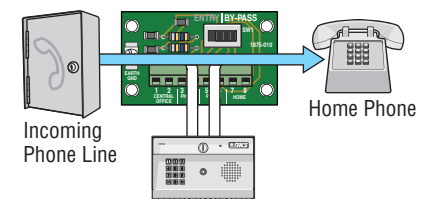

Ground by-pass board. Minimum 12 AWG wire (Not supplied).

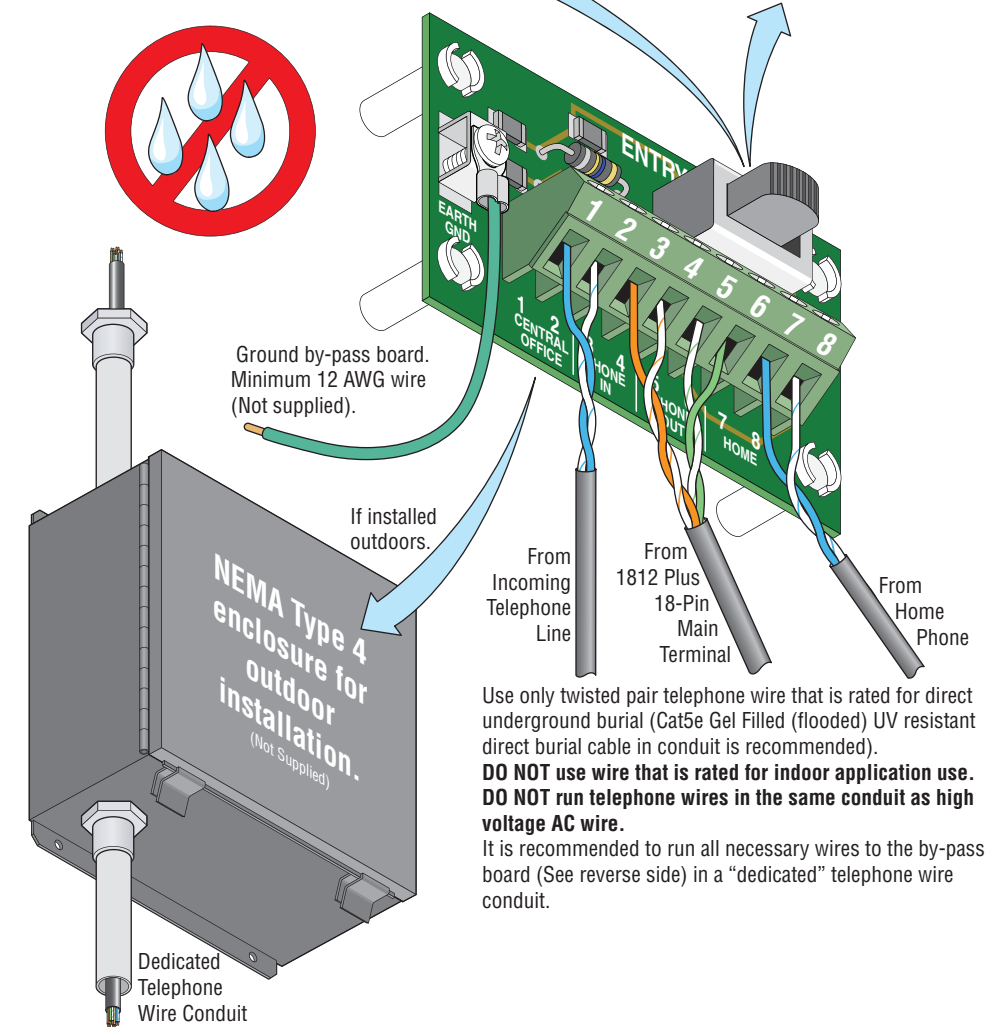

Use only twisted pair telephone wire that is rated for direct underground burial (Cat5e Gel Filled (flooded) UV resistant direct burial cable in conduit is recommended).

**DO NOT use wire that is rated for indoor application use. DO NOT run telephone wires in the same conduit as high voltage AC wire.**

It is recommended to run all necessary wires to the by-pass board (See reverse side) in a "dedicated" telephone wire conduit.

# QUICKSTART "BASIC" WIRING GUIDELINES FOR AN 1812 CLASSIC SYSTEM WITH TWO ACCESS CONTROL DEVICES

It is highly recommended that you consult the Installation/Owner's manual for complete wiring instructions on all the different types of installations and programming.



120 Glasgow Avenue  
Inglewood, California 90301  
U.S.A.




## Basic Programming for the 1812 Classic

The 1812 Classic has been programmed at the factory with many of the programming parameters (default setting) set for a typical residential application with a single 1812 Classic.


However, **you must program a "Master Code" before putting the 1812 Classic into service.** If you are using more than a single 1812 Classic in the system, or if you are using any of the advanced features of the 1812 Classic, such as Time Zones, Do-Not-Disturb Schedules, Call Forwarding, Holiday Schedules, Hold Open Schedules, Directory Code Dial-Out Phone Numbers, Temporary Access Codes, etc., you will need to download the complete Installation/Owner's and Programming Manual from our tech support web site.

### Telephone Company Demarcation Point


Use common electrical safety practices when connecting telephone wires. You can receive a substantial jolt if the phone rings while handling these wires. "RING" terminal voltage varies and can be between -48 to -130 Volts AC, depending on the distance to the central office. "TIP" terminal is always positive with respect to RING terminal.

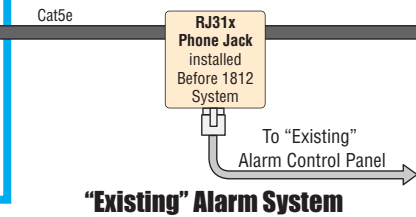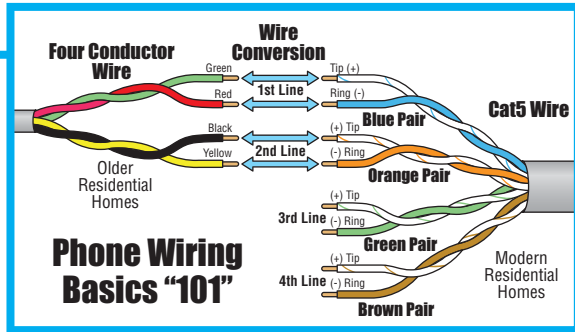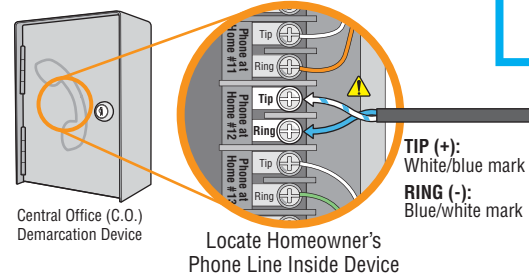

### Access Control Devices

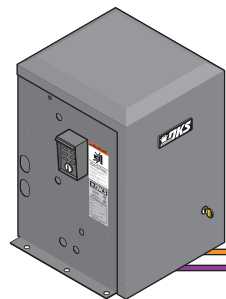

"Normally Open" Vehicular Gate Operator (Terminal 11 and 13)

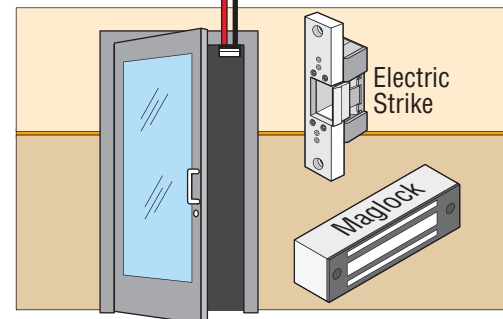



Magnetic locks or electric strikes must be powered from a separate UL Listed power transformer. **DO NOT** power electric strikes or magnetic locks from the 1812 Classic power transformer. Keep power wire runs as short as possible.

### Programming Relay 1 and 2 Strike Time - (Factory default is 1 second)

1. Press \* 0 3 and enter the MASTER CODE. [\* 0 3 \_\_\_\_ (beep)]
2. Enter "1" for relay 1 or "2" for relay 2, then press \*. [ \_ \* (beep)]
3. Enter a two-digit strike time (00-99), then press \*. [ \_\_ \* (beep)]  
Note: Strike time entered in seconds. 00 = ¼ sec., 10 = 10 seconds, etc.
4. Repeat steps 2 and 3 to set the other relay strike time if necessary.
5. Press "0 #" TOGETHER to end. [0 # (beeeeeep)]


### 24 VAC Power Transformer and Access Control Device(s) Wire Run Table

Wire Size	Max Distance
18 AWG	100 ft
16 AWG	200 ft

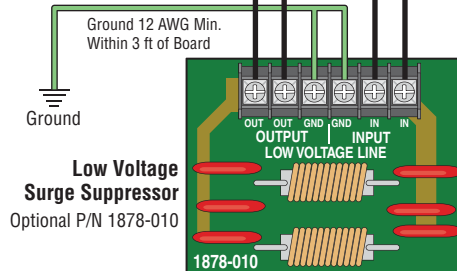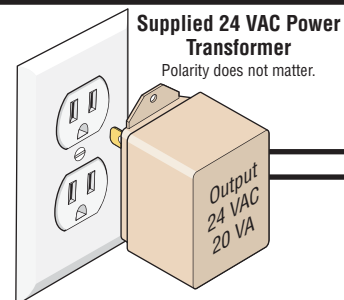

### By-Pass Board

The By-Pass board is required.

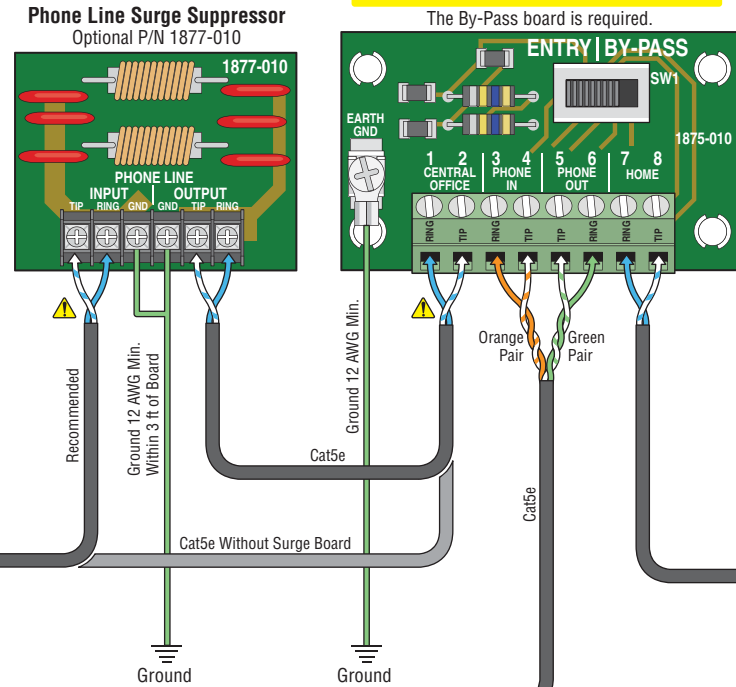


### Telephone Wire Run (Cat5e) Table

Wire Size	Max Distance
24 AWG	800 ft
22 AWG	1600 ft
20 AWG	2200 ft
18 AWG	3600 ft


### Check Polarity of Telephone Line

Check for polarity on the incoming telephone line to each board and maintain polarity throughout the telephone line (TIP (+), RING (-)).

Cat5e Gel Filled (flooded) UV resistant direct burial cable run in conduit recommended. **DO NOT** run telephone wires in the same conduit as high voltage AC wire.

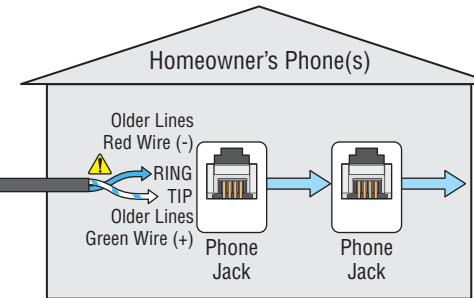

### Control Board

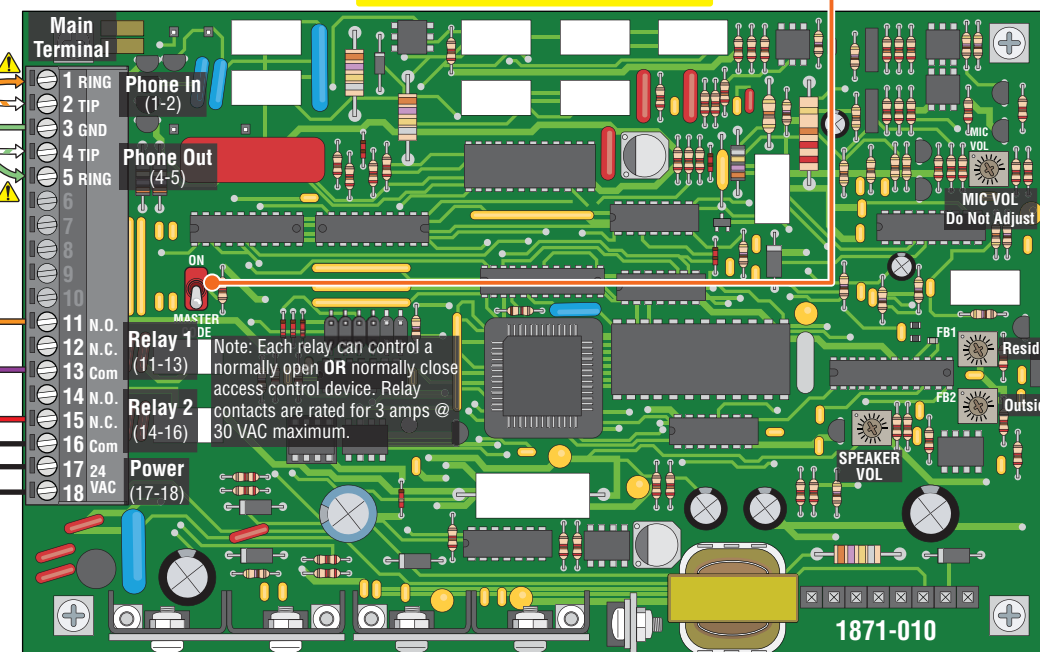

### Programming Momentary Access Codes

#### Programming Momentary Access Code(s) to Operate Relay 1 and/or 2 on a 24/7 Basis - (Maximum of 14 codes per relay)

1. Press \* 0 2 and enter the MASTER CODE. [\* 0 2 \_\_\_\_ (beep)]
2. Enter a two-digit "location code" to determine which relay will be activated, (01-14) - relay 1's location OR (26-39) - relay 2's location, then press \*. [ \_\_ \* (beep)]
3. Choose and enter a four-digit momentary access code, then press \*. [ \_\_\_\_ \* (beep)]
4. Repeat steps 2 and 3 to enter additional momentary access codes for each relay, do not duplicate or go beyond "location code" number limits for each relay.
5. Press "0 #" TOGETHER to end programming. [0 # (beeeeeep)]

### Complete Instructions

This "Quickstart" guideline is designed for installing a single 1812 Classic in a typical single family home application using the factory default settings programmed in the 1812 Classic. Complete installation instructions and programming manual is available on the enclosed CD AND from our tech support web site.

CLICK HERE TO VISIT DOOR KING'S TECHNICAL WEB SITE:  
[www.dkaccess.com/english/Telephone\\_Entry/telephone\\_entry.html](http://www.dkaccess.com/english/Telephone_Entry/telephone_entry.html)

### Program MASTER CODE

#### Master Code Switch Description

Switch OFF - Normal operating mode position (position shown).

Switch ON - After master code switch has been turned ON, system will be in Master Code programming mode. (If master code switch is turned ON and master code is not entered, the system will sound a short tone after 30 seconds and continue every 30 seconds until master code is entered or switch is turned off).

#### Programming the "Master Code"

1. Turn Master Code switch ON.
2. Enter a four digit Master Code number then press "\*", "beep" will be heard. [ \_\_\_\_ (beep)] (Write down master code).
3. Turn Master Code switch OFF.