



# User Guide

---

## Wired Camera Web Interface

---

This guide uses the VIGI C540 (V2) web page for demonstration.  
Features and pictures may differ from your actual product.

# Contents

<b>About This Guide .....</b>	<b>1</b>
<b>Login .....</b>	<b>2</b>
1.1 Connect the Camera to Network.....	3
1.2 Log In to the Web Interface .....	3
<b>Live View .....</b>	<b>5</b>
<b>View Device Information .....</b>	<b>8</b>
3.1 View System Logs.....	9
3.2 View Device Information.....	10
<b>Change Camera Settings .....</b>	<b>11</b>
4.1 Camera Display Settings .....	12
4.1.1 Configure Image Settings.....	12
4.1.2 Configure OSD Settings.....	15
4.1.3 Configure Privacy Mask .....	15
4.2 Camera Stream Settings.....	16
4.2.1 Configure Video Settings.....	16
4.2.2 Configure Audio Settings (Only for some models).....	18
4.2.3 Configure ROI.....	19
<b>PTZ Settings (Only for Pan&amp;Tilt Camera).....</b>	<b>20</b>
5.1 Park Settings .....	21
5.2 Target Track Settings .....	21
<b>Events.....</b>	<b>23</b>
6.1 Motion Detection .....	24
6.2 Camera Tampering .....	25
6.3 Line Crossing Detection .....	26
6.4 Intrusion Detection .....	27
6.5 Region Entering Detection.....	29
6.6 Region Exiting Detection .....	31
6.7 Object Abandoned/Removal Detection.....	33

6.8	Vehicle Detection .....	35
6.9	Human Detection.....	36
6.10	Light Alarm (Only for some models) .....	37
6.11	Sound Alarm (Only for some models) .....	37
6.12	Exception Event .....	38

## **Recording and Storage.....39**

7.1	Recording Schedule .....	40
7.2	Storage Management .....	41

## **Network Management.....42**

8.1	Configure Network Connection .....	43
8.2	Configure Ports .....	44
8.3	Configure Port Forwarding.....	44
8.4	Configure IP Restriction .....	45
8.5	Configure Multicast.....	46

## **Cloud Service .....48**

## **System Settings .....50**

10.1	Configure Basic Settings .....	51
10.2	Modify System Time .....	51
10.3	Manage User Accounts .....	52
10.4	System Management .....	53
10.5	Upgrade Firmware.....	54
	10.5.1 Online Upgrade .....	54
	10.5.2 Local Upgrade .....	54
10.6	Reboot Device Regularly .....	54


# About This Guide

This User Guide provides information for using and managing VIGI camera via a web browser. It explains functions of VIGI camera and shows you how to configure them.

## Conventions

When using this guide, notice that:

- Features available in VIGI cameras may vary due to your region, device model, and firmware version. All images, steps, and descriptions in this guide are only examples and may not reflect your actual experience.
- The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute the warranty of any kind, express or implied. Users must take full responsibility for their application of any products.
- This guide uses the specific formats to highlight special messages. The following table lists the conventions that are used throughout this guide.

<u>Underlined</u>	Indicates hyperlinks. You can click to redirect to a website or a specific section.
Teal	Indicates contents to be emphasized and texts on the web page, including the menus, tabs, buttons and so on.
>	The menu structures to show the path to load the corresponding page.
 <b>Caution</b>	Reminds you to be cautious, and ignoring this type of note might result in device damage or data loss.
<b>Note</b>	Indicates information that helps you make better use of your device.

## More Information

- For technical support, the latest version of the User Guide and other information, please visit <https://www.tp-link.com/support>.
- The Quick Installation Guide can be found where you find this guide or inside the package of the product.
- To ask questions, find answers, and communicate with TP-Link users or engineers, please visit <https://community.tp-link.com> to join TP-Link Community.



## ***Login***

This chapter guides you on how to log in to the web UI of the VIGI camera:

- [Connect the Camera to Network](#)
- [Log In to the Web Interface](#)


After the cameras are added to network, multiple methods are provided for you to monitor and manage cameras. You can manage and monitor the cameras remotely via the VIGI app or VIGI Security Manager, and you can also directly monitor and manage your camera via a web browser. Check the support page of the product for more manuals at [www.tp-link.com](http://www.tp-link.com).

## ♥ 1.1 Connect the Camera to Network

The camera works with an NVR for easier batch access and management. You can add cameras to network via an NVR.

1. Connect your cameras to the same network as your NVR (as shown below).
2. Power on your cameras.
3. Follow the NVR manual to add and activate your cameras.

**Note:** You can follow the Quick Start Guide included in the package to mount and add cameras to your network.

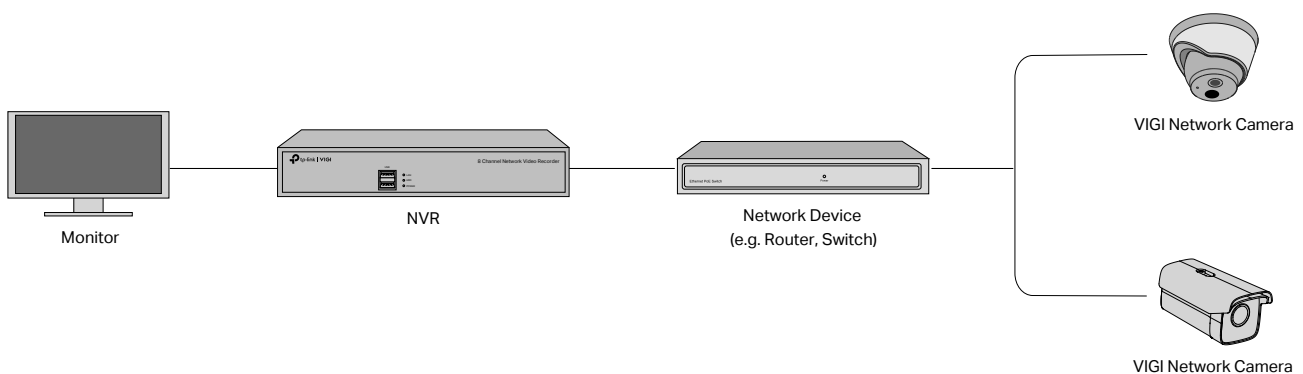


## ♥ 1.2 Log In to the Web Interface

With an intuitive user interface, it is easy to configure and manage the camera via a web browser. Follow the steps below to log in to the web UI of the camera for the first time.

1. Find the camera's IP address on your router's client page.
2. On your local computer, open a web browser and enter `https://camera's IP address` (`https://192.168.0.60` by default).

### 3. Select your **Country/Region** and **Time Zone**.

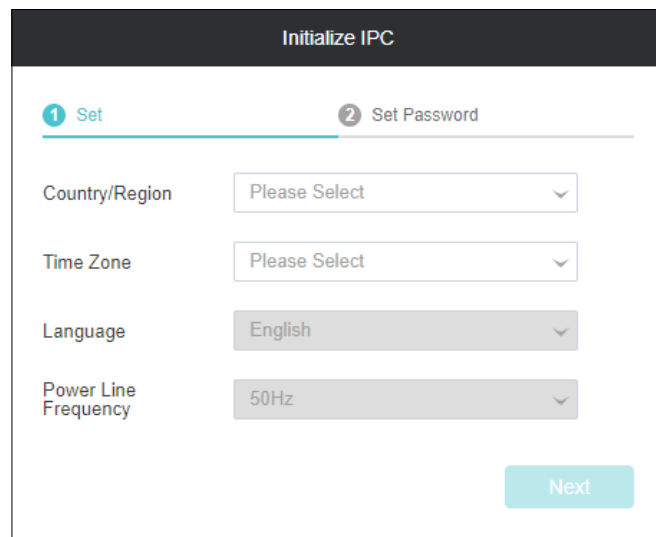

**Initialize IPC**

1 Set      2 Set Password

Country/Region


Time Zone

Language

Power Line Frequency

Next

### 4. Set a password to activate the camera. Click **Finish**.

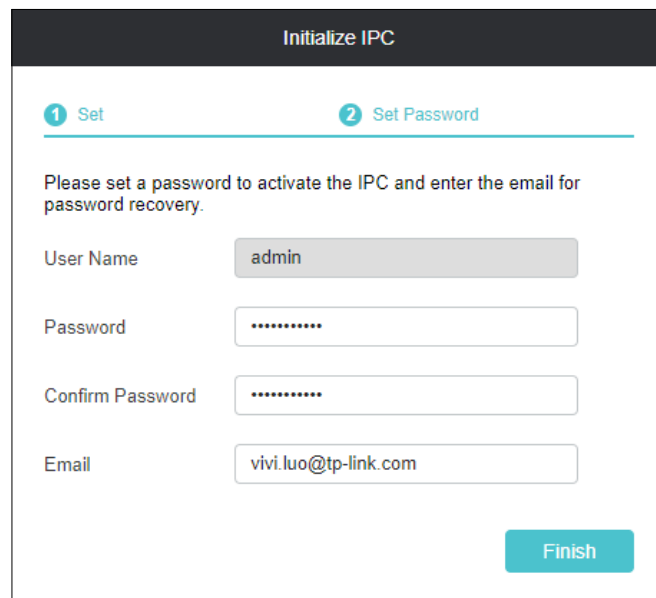

**Initialize IPC**

1 Set      2 Set Password

Please set a password to activate the IPC and enter the email for password recovery.

User Name

Password

Confirm Password

Email

Finish

Now, you can log in to the camera using the password set here.

#### **Note:**

1. For future logins, use the default username **admin** and the password you set for this camera.
2. If you forgot the password, click **Forgot password?** and follow the web instructions to reset the password.




## ***Live View***

You can monitor the camera in real time and respond to abnormal conditions with quick operations, such as zooming in the image, capturing screenshots.



1. Find the camera's IP address on your router's client page.
2. On your local computer, open a web browser and enter `https://camera's IP address` (`https://192.168.0.60` by default).
3. Log in with default user name **admin** and the password you set for this camera.
4. You can view the live video on the Preview page.

Note: Here we use the page for VIGI C540 Outdoor Full-Color PT Network Camera.

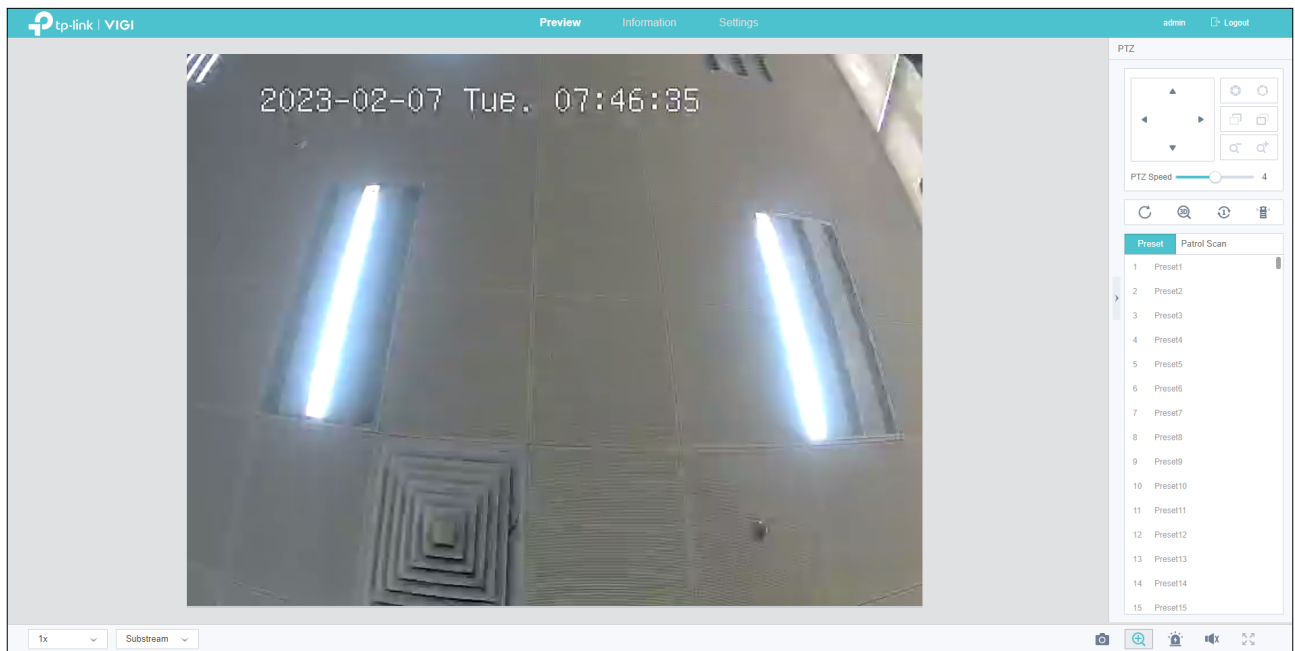

1x

Click the corresponding buttons to change the image proportion.

Substream

Click to change the stream type.



Click to capture screenshots.



Click to zoom in/out the live image.



(Only for certain cameras) Click to trigger the sound alarm. It will last about 10 seconds.



(Only for certain cameras) Click to adjust the volume of the speaker.



Click to change to full screen.



(Only for the camera with Pan&Tilt) Click the arrow to adjust the PTZ direction.

PTZ Speed 4

(Only for the camera with Pan&Tilt) Drag to adjust the PTZ rotation speed.

---

Only for the camera with Pan&Tilt




 Click to reset the PTZ position.

 Click to start 3D positioning.

 Click to start quick patrol.

 Click to start quick park.

---



(Only for the camera with Pan&Tilt) Click Preset to set the preset PTZ position; click Patrol Scan to set or edit the patrol path.

---

# 3

## ***View Device Information***

This chapter introduces how to check the system logs and view your device information on the web UI. This chapter contains the following sections:

- [View System Logs](#)
- [View Device Information](#)

## ♥ 3.1 View System Logs

The camera uses logs to record, classify, and manage the messages of the system and devices. You can search, view, and export the logs.

Follow the steps below to search and export the logs.

1. Go to **Information > System Log > System Log**.
2. Specify the time range and log types and click **Search**. The filtered logs appear in the table.

The screenshot shows the 'System Log' interface. At the top, there are search filters: 'Start Time' (2022-09-14, 13:46:37), 'End Time' (2022-09-21, 13:46:37), and 'Log Type' (All). A 'Search' button is located to the right of the Log Type dropdown. Below the filters, it says 'Current Log Type: All'. A table displays the log entries with columns for 'No.', 'Recording Time', and 'Event'. The table contains 8 rows of data. At the bottom of the interface, there are buttons for 'Clear Logs' and 'Export Logs', and a pagination control showing 'Total: 357', '1/45', 'Page 1', and a 'Go' button.

No.	Recording Time	Event
1	2022-09-21 13:46:36	ts package not finish, frame_length_left = 765...
2	2022-09-21 13:46:36	ts package not finish, frame_length_left = 260...
3	2022-09-21 13:46:24	ts package not finish, frame_length_left = 767...
4	2022-09-21 13:46:24	ts package not finish, frame_length_left = 260...
5	2022-09-21 13:46:16	[p2p dbg] *** http close client(local) session...
6	2022-09-21 13:46:16	Delete a minor stream, current minor stream p...
7	2022-09-21 13:46:16	CloseSession called, 0th in 1
8	2022-09-21 13:46:12	[CLOUDCOM]server(0)-90100 cloudCom d...

### Start/End Time

Specify a time range to filter the logs based on the recording time.

### Log Type

Select a type from the drop-down list to filter the logs.

**All:** All types of logs.

**Alarm:** Alarms triggered by events, such as tampering, line crossing, and area intrusion.

**Exception:** Abnormal events that may influence camera's functions, such as video signal lost and errors of hard drive.

**Operation:** Operations that take place on the camera, such as login and upgrade.

**Information:** Informational messages, such as local device information.

### Clear Logs

Click to clear all logs.

### Export Logs

Click to export logs to your local computer.

## ♥ 3.2 View Device Information

You can view the basic information about the camera, including device model, firmware version, network information, stream information and device QR code.

Go to [Information > Device Information > Device Information](#) to view the details.

### Device Information

---

Device Information

---

Current System Time	2022-09-21 14:10:36
Device Model	HI3516E
Device Name	HI3516E
Firmware Version	HI3516E_V1.0.0

---

Network Information

---

IP	192.168.0.60
MAC	9C-A2-F4-9A-6F-53

---

Stream Information


---

Resolution	2560*1440
Frame Rate	25

---

Device QR Code

---



# 4

## ***Change Camera Settings***

This chapter introduces how to change the camera display settings and camera streams settings. It contains the following sections:

- [Camera Display Settings](#)
- [Camera Stream Settings](#)


## ♥ 4.1 Camera Display Settings

You can change the camera display settings according to your needs.

### 4.1.1 Configure Image Settings

Follow the steps below to configure image settings.

1. Go to **Settings > Camera > Display > Image**.
2. Configure the following parameters.

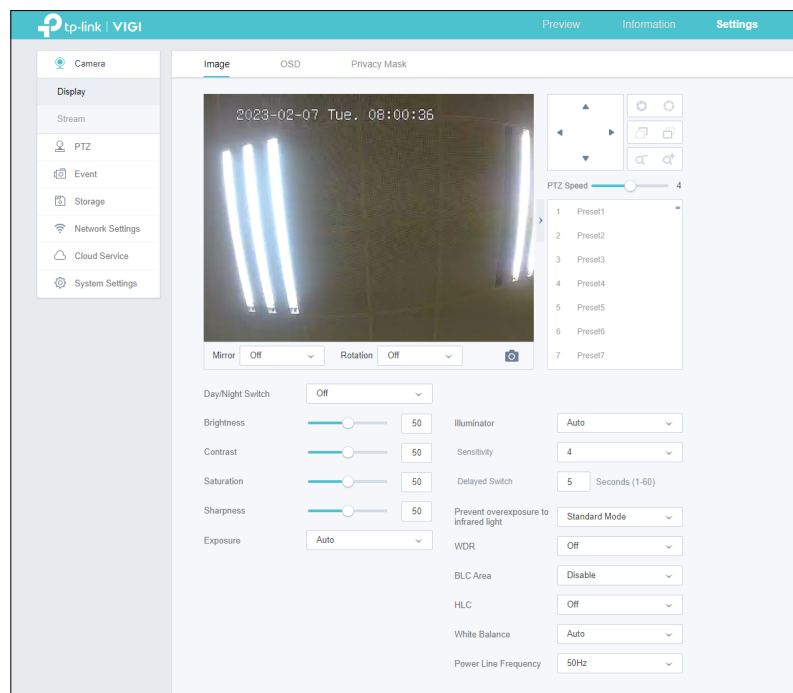

#### Mirror

Select a mirror mode. When you select **Off**, the image displays normally.

#### Rotation

Select a rotation angle. When you select **Off**, the image displays normally.

#### Day/Night Switch

Select a method to switch the image settings of day and night.

**Off:** The camera applies the same image settings in a day.

**Auto:** The camera switches the image mode of day and night automatically based on the light intensity.

**Scheduled:** The camera switches the image mode of day and night at specified time. If you select this method, adjust the slide bar to specify the switch time.

#### Brightness


Adjust the brightness of image. The image gets brighter when the value increases.

<b>Contrast</b>	Adjust the contrast of image. The image contrast gets stronger when the value increases.
<b>Saturation</b>	Adjust the saturation of image. The color of image gets richer when the value increases.
<b>Sharpness</b>	Adjust the sharpness of image. The image gets sharper when the value increases.
<b>Exposure</b>	<p>Select a exposure mode.</p> <p><b>Auto:</b> The camera adjusts the exposure automatically. If you select <b>Auto</b>, specify the exposure scale. The image gets brighter when the scale increases.</p> <p><b>Manual:</b> The image exposure is fixed. If you select <b>Manual</b>, adjust the slide bar of Gain to specify the exposure gain, and select a shutter speed. The image gets brighter when the gain increases or the shutter speed gets slower.</p>
<b>Illuminator</b>	<p>Select a mode to decide the usage of infrared light. The available options vary due to the mode you select in Day/Night Switch.</p> <p><b>Auto:</b> The camera enables the infrared light automatically when it detects the environment turns dark, and disables when the environment is bright enough.</p> <p><b>Scheduled On/Off:</b> Specify the time to enable and disable infrared light.</p> <p><b>Always On/Off:</b> The camera enables/disables the infrared light all the time.</p>
<b>Sensitivity</b>	Specify <b>Sensitivity</b> to decide the light intensity that can trigger the switch of infrared light. The infrared light is easier to be triggered when the sensitivity decreases.
<b>Delayed Switch</b>	Decide how long the camera waits to enable or disable the infrared light when the environment reaches the light condition.
<b>Prevent overexposure to infrared light</b>	<p>Select standard mode or enhanced mode or manually adjust the brightness of image.</p> <p><b>Standard Mode:</b> In this mode, the brightness of the infrared light will be automatically adjusted to prevent overexposure, but the exposure method will not be changed. When the brightness of the screen becomes higher, the infrared light will become brighter.</p> <p><b>Enhanced Mode:</b> In this mode, the exposure mode will be optimized. The brightness of the fill light is generally lower in priority, because reducing the brightness will lead to a decrease in the brightness of the picture, the Gain value will introduce noise, and denoising will cause blur. Therefore, using this mode will change the exposure mode and bright areas are darkened and dark areas are brightened</p> <p><b>Manual:</b> Manually adjust the brightness of image. The image gets brighter when the value increases.</p>



<b>WDR</b>	WDR (Wide Dynamic Range) can improve the image effects in backlit scenes. If you select <b>On</b> , the camera balances the light of the brightest and darkest areas automatically.
<b>BLC Area</b>	BLC (Backlight Compensation) can clear the dark area of the video. Select a position and the camera adjusts the exposure based on the light intensity in the area.
<b>HLC</b>	HLC (Highlight compensation) can compensate for brighter parts of your image, maintaining detail in brighter parts of the image that would otherwise be blown out.
<b>White Balance</b>	<p>Select a mode and the camera will adjust the color temperature to display the image approximated to the realistic vision effects.</p> <p><b>Auto:</b> The camera adjusts the color temperature automatically.</p> <p><b>Daylight/Natural Light/Incandescent/Warm Light:</b> The camera adjusts the color temperature to remove the color casts caused by the corresponding light.</p> <p><b>Current:</b> The camera keeps the current color settings all the time.</p> <p><b>Custom:</b> Adjust the slide bar to configure the color temperature, and the camera keeps the settings all the time.</p>
<b>Power Line Frequency</b>	Set the power line frequency.
<b>Restore</b>	Click to restore to factory default settings.

For some models, you can edit the **Fill Light Settings**.

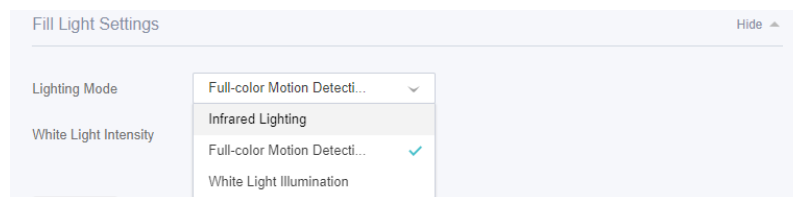

<b>Lighting Mode</b>	<p>Select the fill light mode which affects the anti-overexposure strategy and image.</p> <p><b>Infrared Lighting:</b> The image is black and white.</p> <p><b>Full-color Motion Detection:</b> When motion detection is detected, it will turn from black and white to full-color and the white light will be turned on at the same time. It includes three modes, standard, soft, and custom.</p> <p><b>White Light Illumination:</b> The image is full-color and the white light will be turned on at the same time. It includes three modes, standard, soft, and custom.</p>
----------------------	--

## 4.1.2 Configure OSD Settings

You can configure OSD (On Screen Display) to edit the information displayed in Live View and recordings.

Follow the steps below to configure OSD settings.

1. Go to **Settings > Camera > Display > OSD**.
2. Configure the following parameters, and click **Save** to save your settings.

**Date** Check to display the date on the image

**Week** Check to display the week on the image.

**Channel Name** Check to display the channel name on the image.  
You can also check **Custom** and specify a text to display.

**Display Effect** Set the display effect of the image.

**Font Size** Set the font size.

**Font Color** Set the font color.


**Restore** Click to restore to factory default settings.

### 4.1.3 Configure Privacy Mask

With Privacy Mask, you can set privacy area in the image. The area cannot be recorded and monitored.

Follow the steps below to configure Privacy Mask.

1. Go to **Settings > Camera > Display > Privacy Mask**.
2. Enable **Privacy Mask**. Draw the privacy areas on the preview screen (the blue squares in the picture below). Use the mouse to adjust the size and location of areas. To remove a certain privacy area, select it and click **Delete**. To remove all privacy areas, click **Clear**. Click **Save** to finish the configuration.

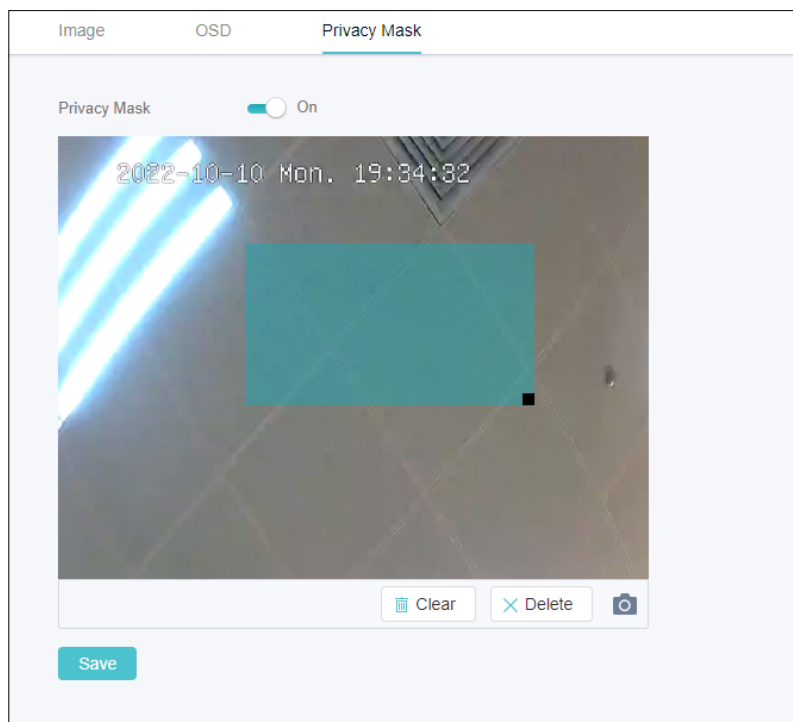

## ♥ 4.2 Camera Stream Settings

In Stream Settings, you can configure video stream levels, change the audio output settings and ROI (Region of interest) level.

Video stream levels decide the video quality in Live View and recording, and you can adjust the video quality of certain area by specifying the ROI level.

### 4.2.1 Configure Video Settings

Follow the steps below to configure video settings.

1. Go to **Settings > Camera > Stream > Video**.

2. Configure the following parameters, and click **Save** to save your settings.

<b>Stream Type</b>	Two stream types are supported, main stream and substream. You can decide which stream is applied based on network bandwidth and device performance.
<b>Video Encoding</b>	Select the encoding type of the stream. Compared with H.264, H.265 is improved in reducing the file size and saving the bandwidth.
<b>Resolution</b>	Specify the resolution of the video stream. The screen displays images more clearly when the resolution increases.
<b>Video Frame Rate</b>	Specify the frame rate of videos. The video is more fluent when the rate increases.
<b>Bit Rate Type</b>	Select a type of bit rate.  VBR: The bit rate changes with the image within Maximum Bit Rate.  CBR: The bit rate is Maximum Bit Rate all the time.
<b>Image Quality</b>	When VBR selected as the bit rate type, set the video quality as high, medium, or low.
<b>Smart Coding</b>	Enable Smart Coding to improve compression performance.

<b>Max Bit Rate</b>	When VBR selected as the bit rate type, specify the upper limit of bit rate.  When CBR selected as the bit rate type, specify the bit rate.
<b>Restore</b>	Click to restore to factory default settings.

### 4.2.2 Configure Audio Settings (only for some models)

Follow the steps below to configure video settings.

1. Go to **Settings > Camera > Stream > Audio**.
2. Configure the following parameters, and click **Save** to save your settings.

The screenshot shows the 'Audio' settings page with the following configuration:

- Audio output settings:**
  - Mute: Off
  - Output Volume: 80
  - System Volume: 100
- Audio input settings:**
  - Audio Coding: G711A-law
  - Audio Input: MicIn
  - Input Volume: 80
  - Noise Filtering: On
  - Audio Switch: On

Buttons: Restore, Save


<b>Mute</b>	Toggle to mute the speaker of the camera.
<b>Output Volume</b>	Adjust the volume of the speaker.

<b>System Volume</b>	Adjust the volume of the sound alarm.
<b>Audio Coding</b>	Select the encoding type of the audio.
<b>Audio Input</b>	Select audio input device.
<b>Input Volume</b>	Adjust the volume of the microphone.
<b>Noise Filtering</b>	Enable noise filtering to remove the noise from the video.
<b>Audio Switch</b>	Turn on of the microphone.
<b>Restore</b>	Click to restore to factory default settings.

### 4.2.3 Configure ROI

In ROI, you can configure the interest level of a specified area in each channel. The level 1–6 is ranked from low to high. The higher the ROI level, the better image quality.

1. Go to **Settings > Camera > Stream > ROI**.
2. Select the stream type and enable ROI. Draw an area on the preview screen (the blue square in the picture below). Use the mouse to adjust the size and location of areas. Specify the ROI level and click **Save**.

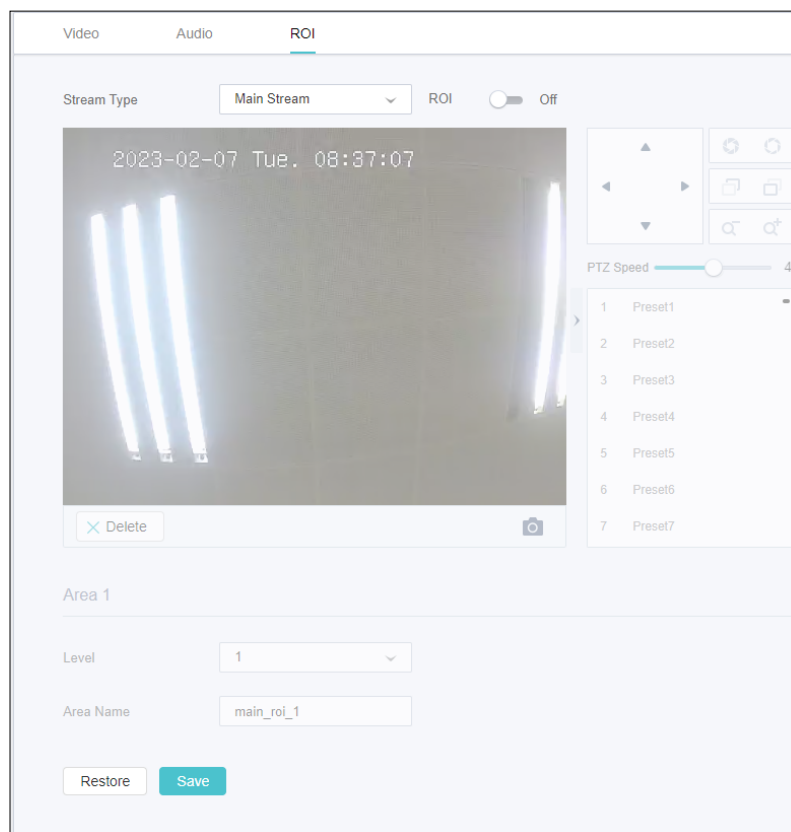

# 5

## ***PTZ Settings (Only for Pan&Tilt Camera)***

This chapter introduces how to change the PTZ settings. It contains the following sections:

- [Park Settings](#)
- [Target Track Settings](#)

## ♥ 5.1 Park Settings

When Park is enabled, the camera will perform the preset position, path, or pattern automatically if there is no operations in specified time. Follow the steps below to enable Park.

1. Go to **Settings > PTZ > Park**.

The screenshot shows the 'Park' settings page. At the top, there is a 'Park' toggle switch which is currently turned 'On'. Below this, under the heading 'Parameter Settings', there are three configuration options: 'Park Time' is a text input field containing the number '5', with a label 'Seconds (5-720)'; 'Park Mode' is a dropdown menu currently showing 'Preset'; and 'Park Mode ID' is another dropdown menu showing 'No presets added.', with a note to the right that says 'Please go to Preview to set a preset.'. At the bottom left of the settings area is a teal 'Save' button.

2. Enable Park, select a mode and a preset, and enter the park time.


<b>Park Time</b>	When there is no operations during this time, the camera will perform the preset.
<b>Park Mode</b>	Select a mode to decide what kind of preset the camera will perform.
<b>Park Mode ID</b>	Select a preset from the drop-down list. The presets in the list vary based on the selected park mode.

## ♥ 5.2 Target Track Settings

When Target Track is enabled, you can set the smart detection, then the camera will track the specific target type.



1. Go to **Settings > PTZ > Target Track**.

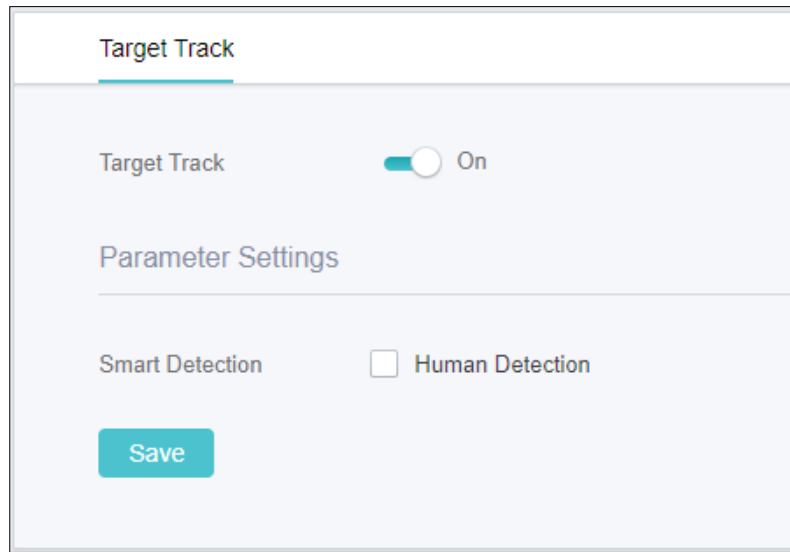

2. Enable Target Track, select the specific target type.

# 6

## ***Events***


This chapter guides you on how to configure the event settings and alarm actions when your cameras detect different types of events. VIGI camera monitors the user-defined areas and you'll be automatically alerted to any suspicious activity in your home and office. This chapter includes the following sections:

- [Motion Detection](#)
- [Camera Tampering](#)
- [Line Crossing Detection](#)
- [Intrusion Detection](#)
- [Region Entering Detection](#)
- [Region Exiting Detection](#)
- [Object Abandoned/Removal Detection](#)
- [Vehicle Detection](#)
- [Human Detection](#)
- [Light Alarm \(Only for some models\)](#)
- [Sound Alarm \(Only for some models\)](#)
- [Exception Event](#)

## ♥ 6.1 Motion Detection

Motion detection allows cameras to detect the moving objects in the monitored area and triggers alarm actions. You can customize the motion detection settings, select the triggered actions and set the alarm schedule for cameras. Follow the steps below to finish the configuration.

1. Go to **Settings > Event > Basic Event > Motion Detection**.

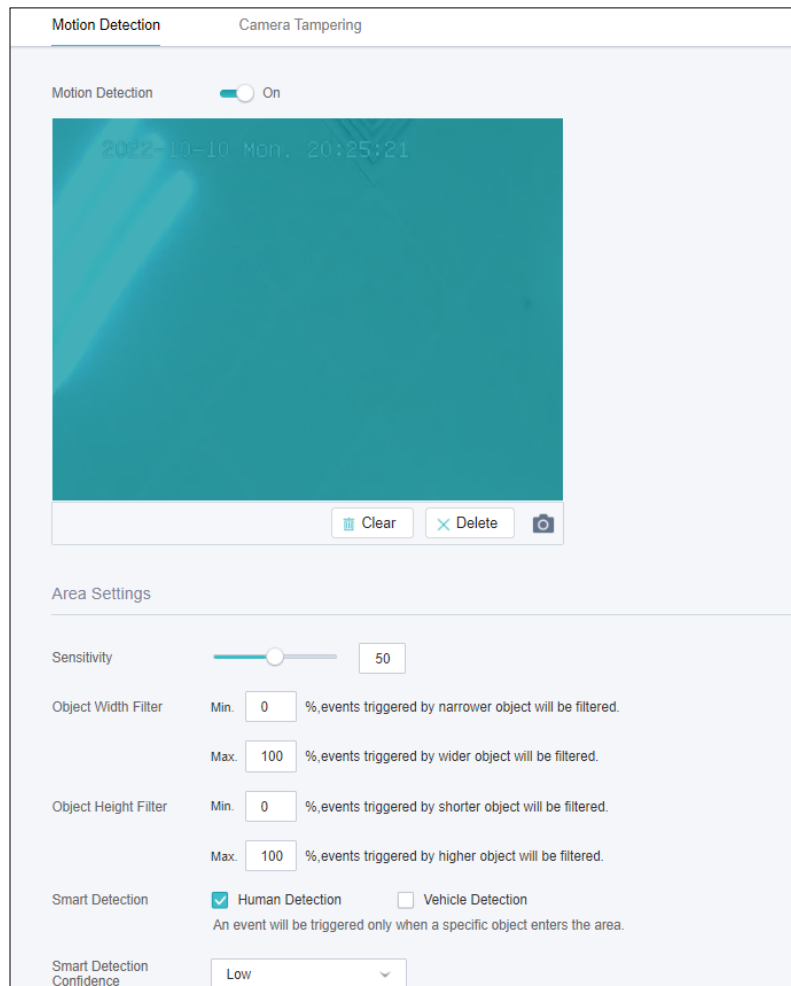

2. Enable **Motion Detection**.
3. Draw rectangles for motion detection on the preview screen. The whole region is selected by default. Then configure the motion detection settings.

**Note:** The maximum number of customized areas is 4.

<b>Sensitivity</b>	Adjust the value of sensitivity. A higher value can trigger alarm actions more easily.
<b>Object Width Filter</b>	Set the minimum and maximum object width to filter the corresponding events.
<b>Object Height Filter</b>	Set the minimum and maximum object height to filter the corresponding events.

<b>Smart Detection</b>	Select the detection type. It can be configured only for the cameras which support human detection and vehicle detection.
<b>Smart Detection Confidence</b>	Select the detection type. It can be configured only for the cameras which support human detection and vehicle detection.

- Set the processing mode. Note that the process mode options vary by model.

Processing mode Hide ▲

---

**Record** The device will start recording when an event is detected.

**Push notifications** The device will send a message to the TP-Link VIGI app when an event is detected.

**Sound Alarm** The alarm on the camera will be triggered when an event is detected.

**Light Alarm** The light on the camera will flash when an event is detected.

- Click **Save** to save the settings.

## ♥ 6.2 Camera Tampering

Camera tampering triggers alarm actions when an area of camera's lens is purposely blocked, obstructed or vandalized. You can customize the video tampering settings, select the triggered actions and set the alarm schedule for cameras. Follow the steps below to finish the configuration.

- Go to **Settings > Event > Basic Event > Camera Tampering**.

Motion Detection Camera Tampering

---

Camera Tampering  On

Parameter Settings

---

Sensitivity  50

Processing mode

---

**Push notifications** The device will send a message to the TP-Link VIGI app when an event is detected.

**Sound Alarm** The alarm on the camera will be triggered when an event is detected.

**Light Alarm** The light on the camera will flash when an event is detected.

**Save**

- Enable **Camera Tampering**.
- Set the sensitivity of video tampering. A higher value can trigger the alarm actions more easily.
- Set the processing mode. Note that the process mode options vary by model.

Processing mode

---

**Push notifications** The device will send a message to the TP-Link VIGI app when an event is detected.

**Sound Alarm** The alarm on the camera will be triggered when an event is detected.

**Light Alarm** The light on the camera will flash when an event is detected.


**Save**

- Click **Save** to save the settings.

## ♥ 6.3 Line Crossing Detection

Line crossing detection triggers alarm actions when cameras detect that moving objects cross a customized virtual line. You can customize the line crossing detection settings, select the triggered actions and set the alarm schedule. Follow the steps below to finish the configuration.

1. Go to **Settings > Event > Smart Event**, select **Line Crossing Detection** from the drop-down list.

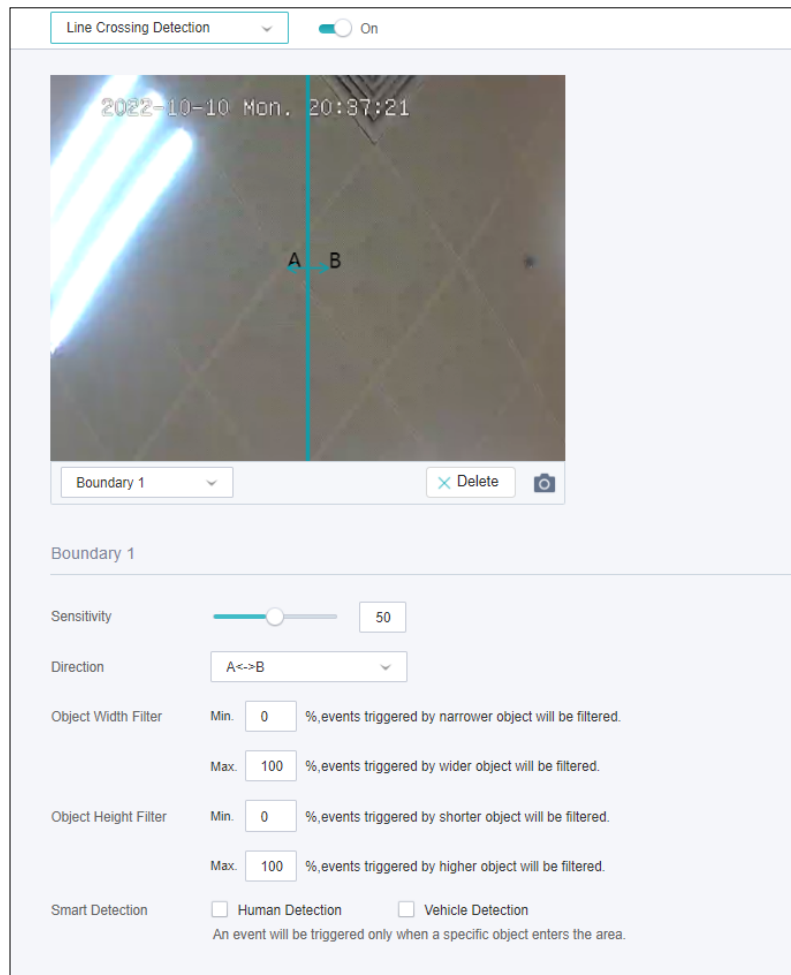

2. Draw lines on the preview screen. Select the line and configure settings of line crossing detection.

**Note:** The maximum number of customized lines is 4. You need to configure settings for each line.

### Sensitivity

Set the sensitivity of line crossing detection. A higher value can trigger alarm actions more easily.

### Line Crossing Direction

**A->B:** Only the object crossing the configured line from the A side to the B side can be detected.

**B->A:** Only the object crossing the configured line from the B side to the A side can be detected.

**A<->B:** The object goes across the configured line with both directions can be detected.

<b>Object Width Filter</b>	Set the minimum and maximum object width to filter the corresponding events.
<b>Object Height Filter</b>	Set the minimum and maximum object height to filter the corresponding events.
<b>Smart Detection</b>	Select the detection type. It can be configured only for the cameras which support human detection and vehicle detection.

### 3. Set the arming schedule.

The screenshot shows the 'Arming Schedule' configuration window. At the top, it says 'Line crossing detection will be enabled only during the specific periods.' and has a 'Clear schedules' button. Below is a grid with days of the week (Monday to Sunday) on the y-axis and hours (0 to 24) on the x-axis. All cells in the grid are filled with blue, indicating that line crossing detection is enabled for all hours of every day.

### 4. Set the processing mode. Note that the process mode options vary by model.

The screenshot shows the 'Processing mode' configuration window. It has four options, each with a checkbox and a description:


- Record** The device will start recording when an event is detected.
- Push notifications** The device will send a message to the TP-Link VIGI app when an event is detected.
- Sound Alarm** The alarm on the camera will be triggered when an event is detected.
- Light Alarm** The light on the camera will flash when an event is detected.

### 5. Click **Save** to save the settings.

## ♥ 6.4 Intrusion Detection

Intrusion detection triggers alarm actions when cameras detect an intrusion in the specified areas. You can customize the intrusion detection settings, select the triggered actions and set the alarm schedule. Follow the steps below to finish the configuration.

1. Go to **Settings > Event > Smart Event**, select **Intrusion Detection** from the drop-down list.

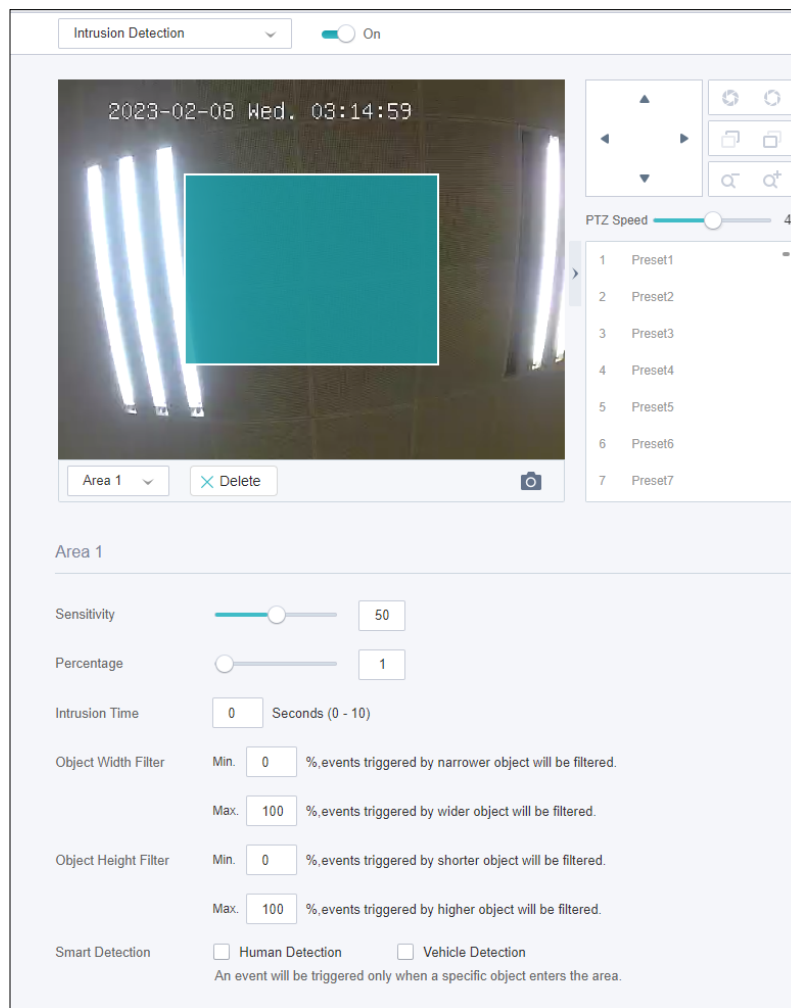


2. Draw intrusion areas on the preview screen. Select the area and configure the settings.

**Note:** The maximum number of customized areas is 4. You need to configure settings for each area.


<b>Sensitivity</b>	Set the sensitivity of intrusion detection. A higher value can trigger alarm actions more easily.
<b>Percentage</b>	Set the percentage of intrusion detection. When an object takes up the specific percentage of the area, the alarm actions will be triggered.
<b>Intrusion Time</b>	Set the intrusion time. When an object intrudes this area for specific time, the alarm actions will be triggered.
<b>Object Width Filter</b>	Set the minimum and maximum object width to filter the corresponding events.
<b>Object Height Filter</b>	Set the minimum and maximum object height to filter the corresponding events.
<b>Smart Detection</b>	Select the detection type. It can be configured only for the cameras which support human detection and vehicle detection.

3. Set the arming schedule.

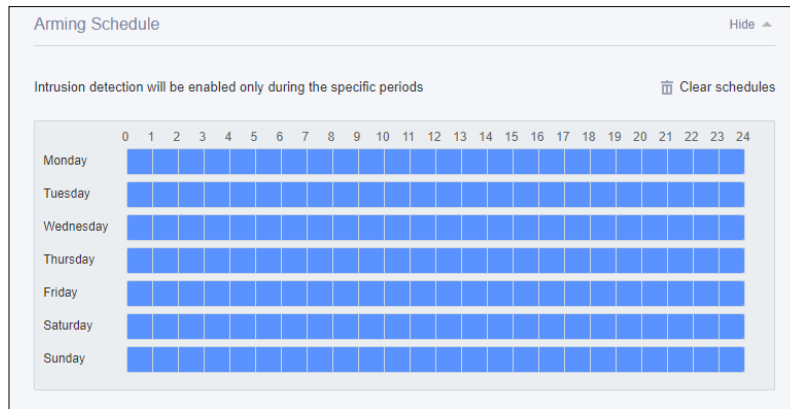

The screenshot shows the 'Arming Schedule' configuration page. At the top, it says 'Arming Schedule' with a 'Hide' button. Below that, a note states 'Intrusion detection will be enabled only during the specific periods' and a 'Clear schedules' button. The main part of the interface is a grid with 24 columns representing hours (0-24) and 7 rows representing days of the week (Monday to Sunday). All cells in the grid are filled with blue, indicating that intrusion detection is enabled for all hours of every day.

4. Set the processing mode. Note that the process mode options vary by model.

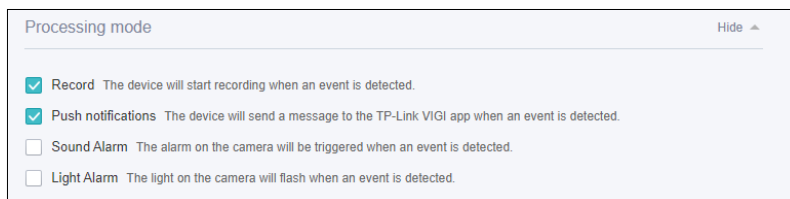

The screenshot shows the 'Processing mode' configuration page. It has a 'Hide' button at the top right. Below the title, there are four options, each with a checkbox and a description:

- Record The device will start recording when an event is detected.
- Push notifications The device will send a message to the TP-Link VIGI app when an event is detected.
- Sound Alarm The alarm on the camera will be triggered when an event is detected.
- Light Alarm The light on the camera will flash when an event is detected.


5. Click **Save** to save the settings.

## 6.5 Region Entering Detection

Region entering detection triggers alarm actions when cameras detect moving objects enter the specified regions. You can customize the region settings, select the triggered actions and set the alarm schedule. Follow the steps below to finish the configuration.



1. Go to **Settings > Event > Smart Event**. Select **Region Entering Detection** from the drop-down list.

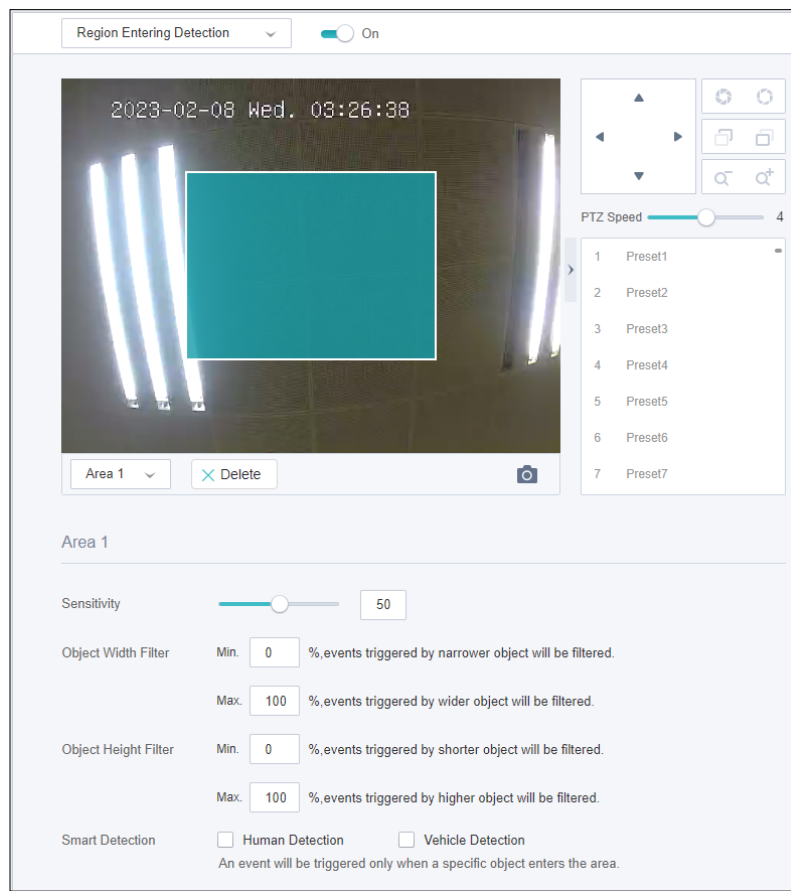


2. Enable **Region Entering Detection**.
3. Draw rectangles for area entrance detection on the preview screen.


Note: The maximum number of customized areas is 4. You need to configure settings for each area.

<b>Sensitivity</b>	Adjust the value of sensitivity. A higher value can trigger alarm actions more easily.
<b>Object Width Filter</b>	Set the minimum and maximum object width to filter the corresponding events.
<b>Object Height Filter</b>	Set the minimum and maximum object height to filter the corresponding events.
<b>Smart Detection</b>	Select the detection type. It can be configured only for the cameras which support human detection and vehicle detection.

4. Set the arming schedule.

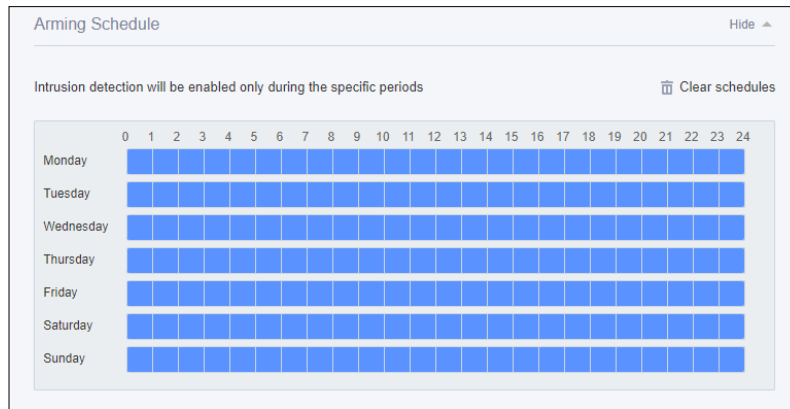

5. Set the processing mode. Note that the process mode options vary by model.

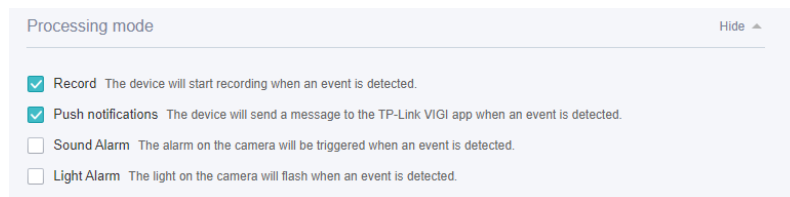


6. Click **Save** to save the settings.

## ♥ 6.6 Region Exiting Detection

Region exiting detection triggers alarm actions when cameras detect moving objects exit the specified regions. You can customize the region settings, select the triggered actions and set the alarm schedule. Follow the steps below to finish the configuration.

1. Go to **Settings > Event > Smart Event**, select **Region Exiting Detection** from the drop-down list.

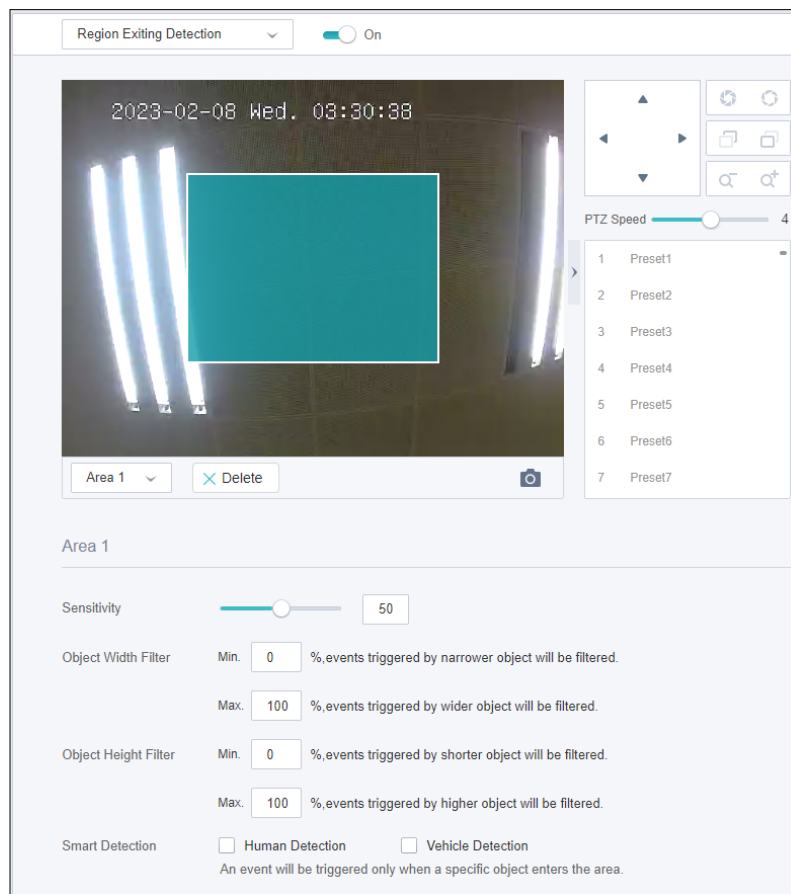


2. Enable **Region Exiting Detection**.
3. Draw rectangles for area exiting detection on the preview screen.

Note: The maximum number of customized areas is 4. You need to configure settings for each area.


<b>Sensitivity</b>	Adjust the value of sensitivity. A higher value can trigger alarm actions more easily.
<b>Object Width Filter</b>	Set the minimum and maximum object width to filter the corresponding events.
<b>Object Height Filter</b>	Set the minimum and maximum object height to filter the corresponding events.
<b>Smart Detection</b>	Select the detection type. It can be configured only for the cameras which support human detection and vehicle detection.

4. Set the arming schedule.

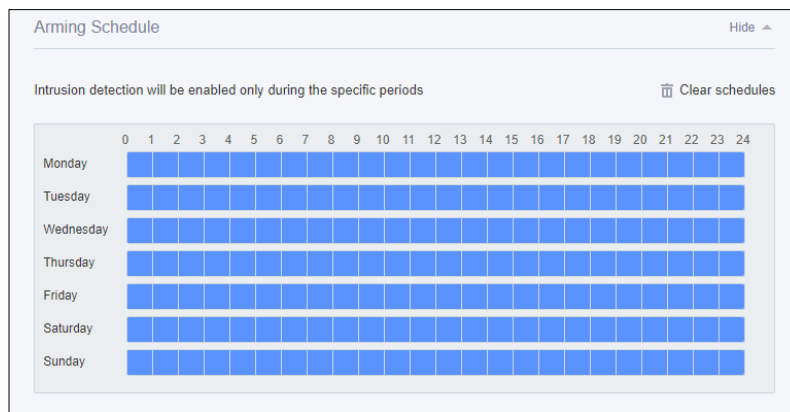

The screenshot shows the 'Arming Schedule' configuration page. At the top, it says 'Arming Schedule' with a 'Hide' button. Below that, a note states 'Intrusion detection will be enabled only during the specific periods' and a 'Clear schedules' button. The main part of the interface is a grid with 24 columns representing hours (0-24) and 7 rows representing days of the week (Monday to Sunday). All cells in the grid are filled with blue, indicating that intrusion detection is enabled for all hours of every day.

5. Set the processing mode. Note that the process mode options vary by model..

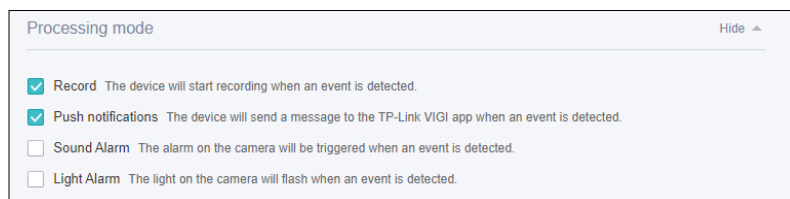

The screenshot shows the 'Processing mode' configuration page. At the top, it says 'Processing mode' with a 'Hide' button. Below that, there are four options, each with a checkbox and a description:


- Record The device will start recording when an event is detected.
- Push notifications The device will send a message to the TP-Link VIGI app when an event is detected.
- Sound Alarm The alarm on the camera will be triggered when an event is detected.
- Light Alarm The light on the camera will flash when an event is detected.

6. Click **Save** to save the settings.

## ♥ 6.7 Object Abandoned/Removal Detection

Object abandoned/removal detection triggers alarm actions when cameras detect objects are left behind or taken away in the specified areas. You can customize the area settings, select the triggered actions and set the alarm schedule. Follow the steps below to finish the configuration.

1. Go to **Settings > Event > Smart Event**, select **Object Abandoned/Removal Detection** from the drop-down list.

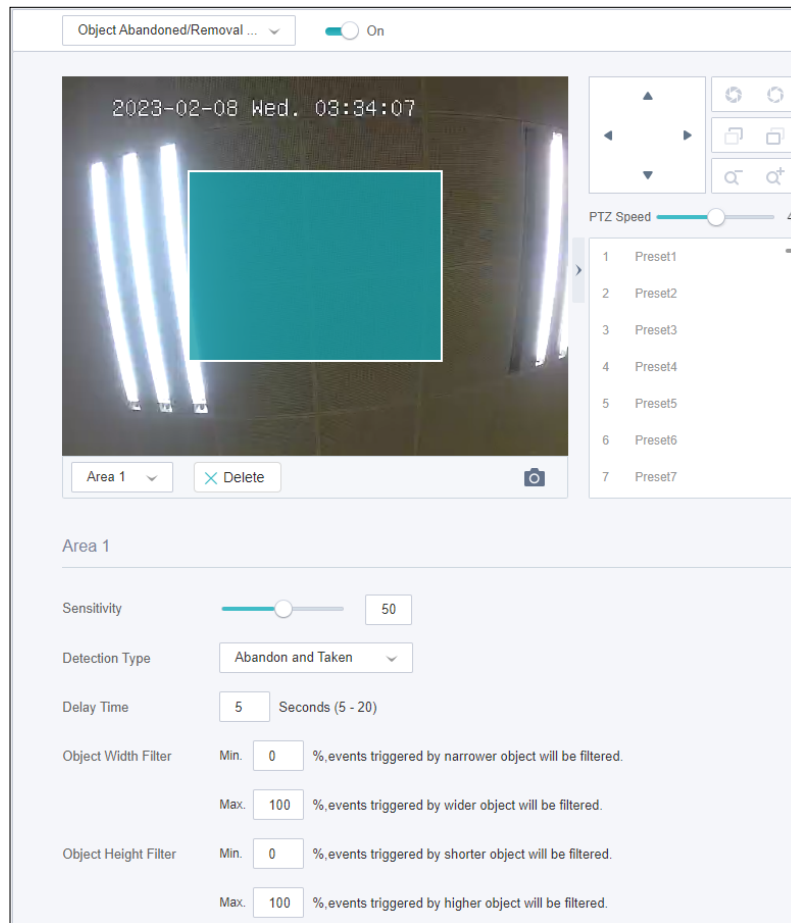


2. **Enable Object Abandoned/Removal Detection.**
3. **Draw rectangles for area exiting detection on the preview screen.**


Note: The maximum number of customized areas is 4. You need to configure settings for each area.

<b>Sensitivity</b>	Adjust the value of sensitivity. A higher value can trigger alarm actions more easily.
<b>Detection Type</b>	Select the detection type.
<b>Delay Time</b>	Set how long the object is left behind or taken away to trigger the event.
<b>Object Width Filter</b>	Set the minimum and maximum object width to filter the corresponding events.
<b>Object Height Filter</b>	Set the minimum and maximum object height to filter the corresponding events.

4. Set the arming schedule.

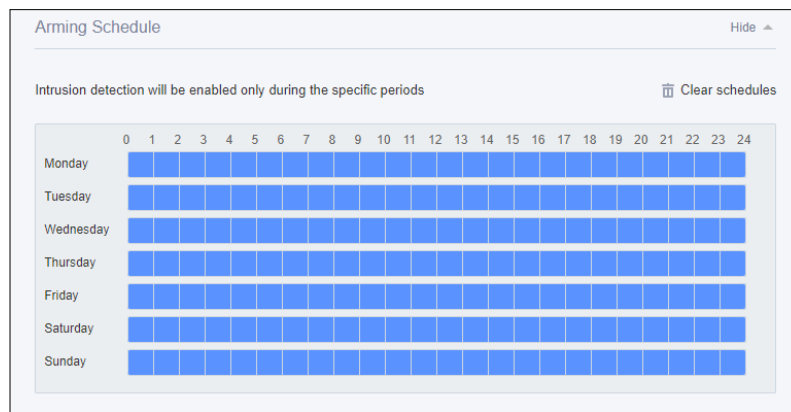

5. Set the processing mode. Note that the process mode options vary by model..

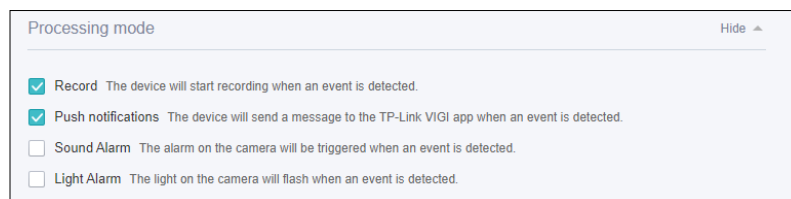


6. Click **Save** to save the settings.

## ♥ 6.8 Vehicle Detection

Vehicle detection triggers alarm actions when cameras detect vehicles are moving in the specified areas. You can customize the area settings, select the triggered actions and set the alarm schedule. Follow the steps below to finish the configuration.


1. Go to **Settings > Event > Smart Event**, select **Vehicle Detection** from the drop-down list.

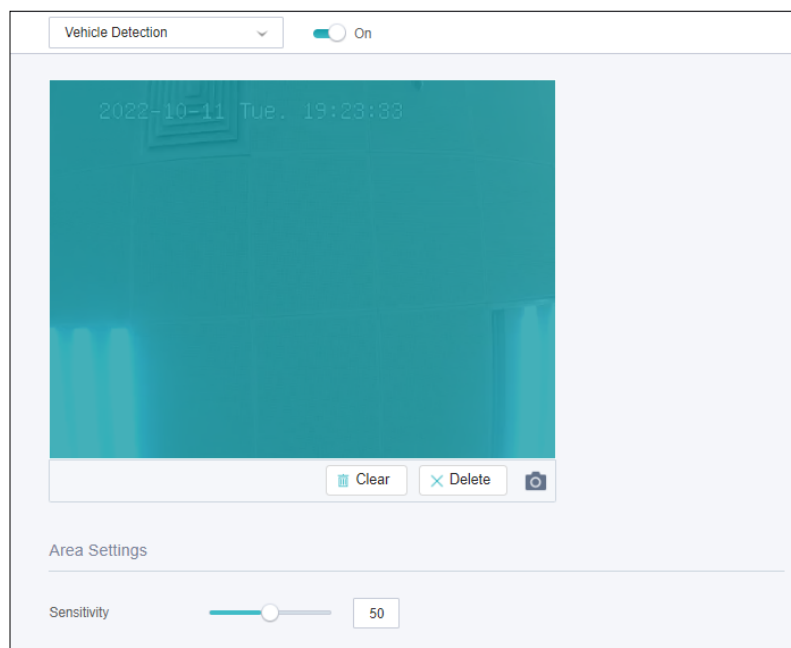


2. Enable **Vehicle Detection**.

3. Adjust the value of sensitivity. A higher value can trigger alarm actions more easily.

4. Set the arming schedule.

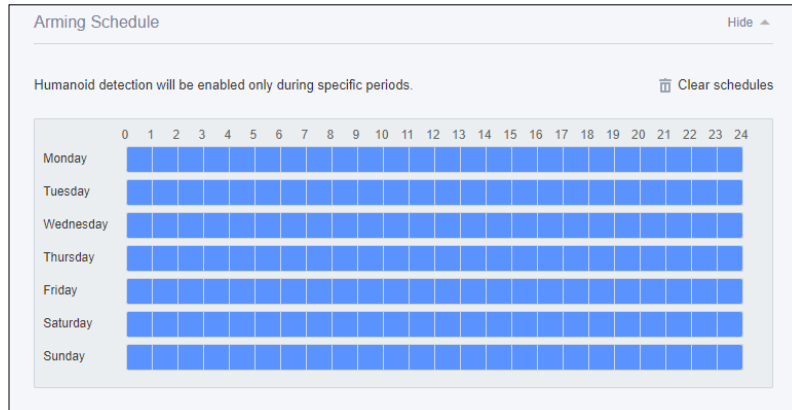

5. Set the processing mode. Note that the process mode options vary by model..

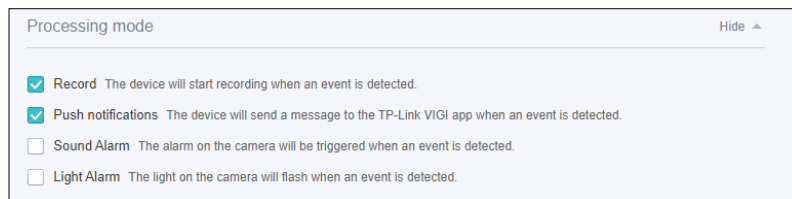


6. Click Save to save the settings.

## ♥ 6.9 Human Detection

Human detection triggers alarm actions when cameras detect persons are moving in the specified areas. You can customize the area settings, select the triggered actions and set the alarm schedule. Follow the steps below to finish the configuration.


1. Go to **Settings > Event > Smart Event**, select **Human Detection** from the drop-down list.

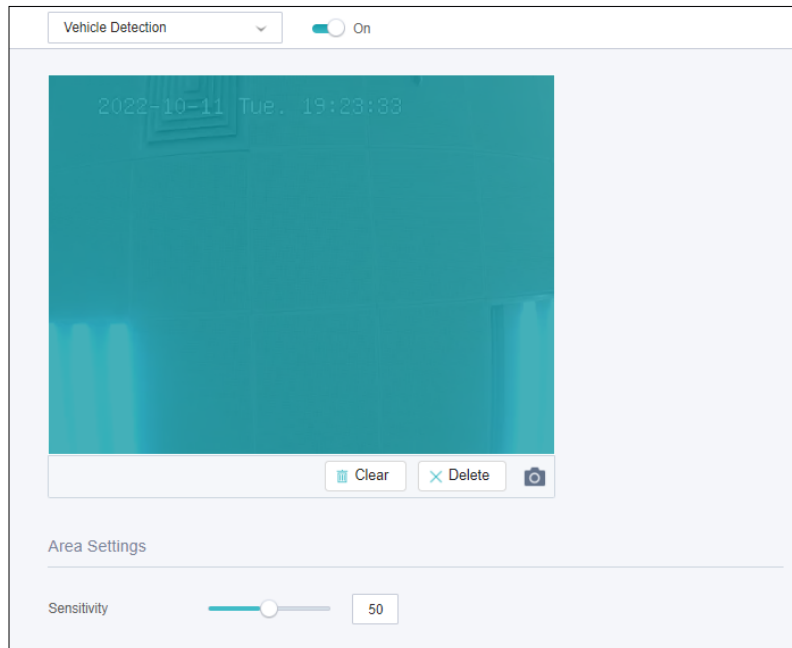

2. Enable **Human Detection**.

3. Adjust the value of sensitivity. A higher value can trigger alarm actions more easily.

## 4. Set the arming schedule.

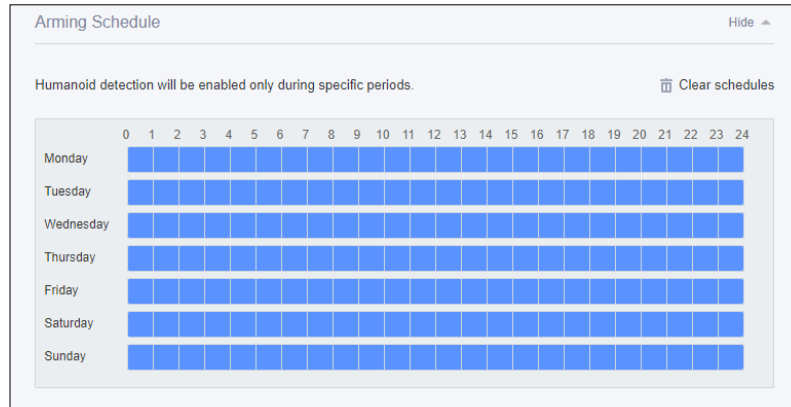


Arming Schedule Hide ▲

Humanoid detection will be enabled only during specific periods. Clear schedules

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Monday	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
Tuesday	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
Wednesday	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
Thursday	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
Friday	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
Saturday	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
Sunday	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■

## 5. Set the processing mode. Note that the process mode options vary by model..

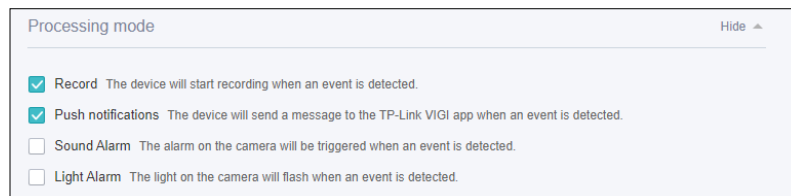

Processing mode Hide ▲


- Record The device will start recording when an event is detected.
- Push notifications The device will send a message to the TP-Link VIGI app when an event is detected.
- Sound Alarm The alarm on the camera will be triggered when an event is detected.
- Light Alarm The light on the camera will flash when an event is detected.

6. Click **Save** to save the settings.

## ♥ 6.10 Light Alarm (Only for some models)

Enable Light Alarm, then the light on the camera will flash when an event is detected.

Go to **Settings > Event > Alarm Device > Light Alarm**. Enable **Light Alarm**, then schedule when the light alarm will be triggered.

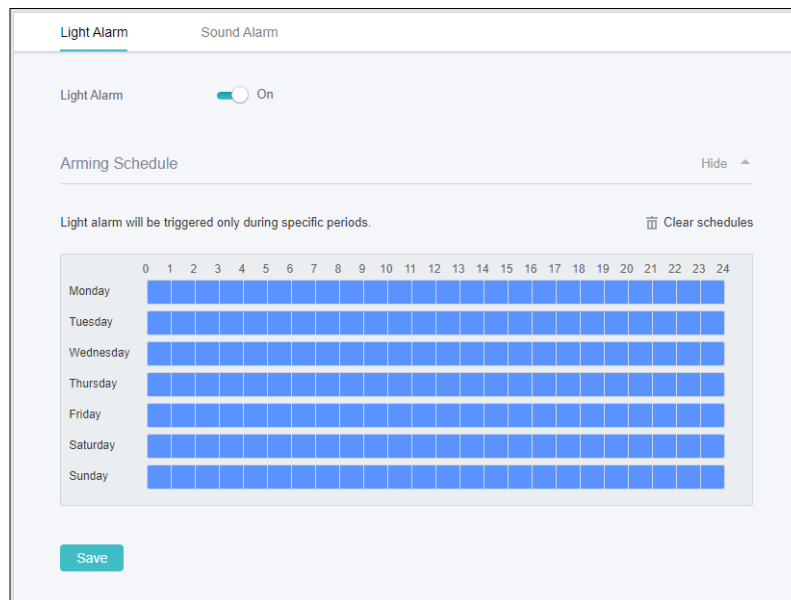

Light Alarm Sound Alarm

Light Alarm  On

Arming Schedule Hide ▲

Light alarm will be triggered only during specific periods. Clear schedules

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Monday	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
Tuesday	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
Wednesday	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
Thursday	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
Friday	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
Saturday	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
Sunday	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■

**Save**

## ♥ 6.11 Sound Alarm (Only for some models)

Enable Sound Alarm, then the alarm on the camera will be triggered when an event is detected.



Go to **Settings > Event > Alarm Device > Sound Alarm**. Enable **Sound Alarm**, select the **Alarm Type**, then schedule when the sound alarm will be triggered.

The screenshot shows the 'Sound Alarm' configuration page. At the top, there are two tabs: 'Light Alarm' and 'Sound Alarm', with 'Sound Alarm' selected. Below the tabs, there is a 'Sound Alarm' toggle switch set to 'On'. Underneath, the 'Sound Type' is set to 'Alarm Tone' via a dropdown menu. The 'Arming Schedule' section is expanded, showing a message: 'Sound alarm will be triggered only during specific period.' with a 'Clear schedules' link. A 7x24 grid represents the days of the week (Monday to Sunday) and hours (0 to 24). All cells in this grid are filled with blue, indicating that the alarm is scheduled to trigger every day, every hour. A 'Save' button is located at the bottom left of the configuration area.

## ♥ 6.12 Exception Event

Set the maximum login attempts to protect the security of your camera. The camera will be locked for 30 minutes if you enter the wrong password more than the specified attempts. Follow the steps below to finish the configuration.

1. Go to **Settings > Event > Exception Event**.

The screenshot shows the 'Access Exception' configuration page. At the top, there is a tab labeled 'Access Exception'. Below the tab, there is a 'Login Error Detection' toggle switch set to 'On'. Underneath, the 'Max Login Attempts' is set to '10' with a range '(3-10)' indicated. A 'Save' button is located at the bottom left of the configuration area.

2. Enable **Login Error Detection** to limit the login attempts:
3. Set the maximum login attempts. The number should be between 3 and 10
4. Click **Save** to save the settings.

**Note:** To unlock the camera and try to log in again, power the camera off then power it on.



## ***Recording and Storage***

This chapter guides you on how to view and configure recording and storage settings on your camera. VIGI camera allows you to set your own recording schedules and parameters. This chapter includes the following sections:

- [Recording Schedule](#)
- [Storage Management](#)

## ♥ 7.1 Recording Schedule

Recording schedule section provides convenience and flexibility for the daily monitoring of your camera. You can customize the recording schedules. You can set different schedules for each day. In Advanced Settings page, you can set the pre-recording time and delay time for recording.

1. Go to **Settings > Storage > Recording Schedule**.

2. Enable **Recording Schedule**, select continuous recording or motion detection, then select the time.

### Continuous Recording

The camera will record continuously.

### Motion Detection

The camera will record when motion is detected.

### Pre-recording Time

The time is set for cameras to record before the scheduled time or event. For example, the schedule for continuous recording starts at 10:00. If you set the pre-recording time as 5 seconds, the camera starts to record at 9:59:55.

### Delay Time


The time is set for cameras to record after the scheduled time or event. For example, if you set the post-record time as 5 seconds, it records till 11:00:05 as motion detection ends at 11:00.

3. Click **Save** to save the settings.

## ♥ 7.2 Storage Management

In Storage Management, you can view the parameters and configure the properties and disk group of SD card. You can also enable the camera to overwrite the earlier recording files when the SD card is full.

1. Go to **Settings > Storage > Storage Management**.

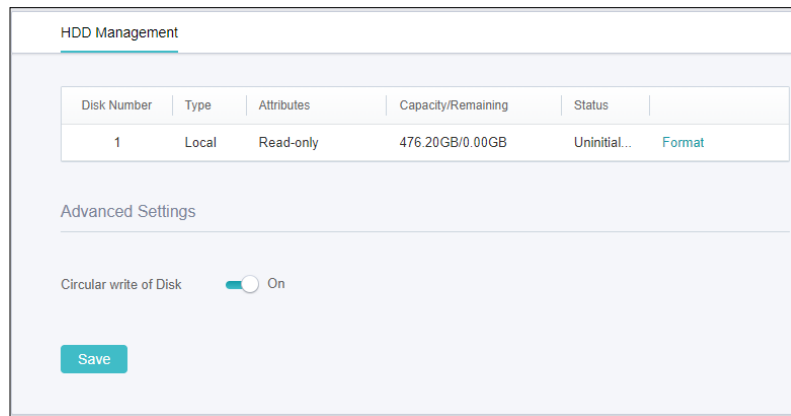

2. You can view the details of the storage. If the SD card is not initialized, click **Format** to format the SD card.
3. Determine if you want to enable the camera to overwrite the earlier recording files when the SD card is full.
4. Click **Save** to save the settings.

# 8

## ***Network Management***

With proper network configurations, you can connect your camera to the internet, build up mapping between internal and external ports. This chapter contains the following sections:

- [Configure Network Connection](#)
- [Configure Ports](#)
- [Configure Port Forwarding](#)
- [Configure IP Restriction](#)
- [Configure Multicast](#)

## ♥ 8.1 Configure Network Connection

In Connection, you can view the connection status and configure the camera to obtain a dynamic or static IP address.

Follow the steps below to configure the network settings.

1. Go to **Settings > Network Settings > Connect**.

The screenshot shows the 'Internet Connection' configuration interface. At the top, the status is 'Connected'. Below this, there are two sections: 'Basic Settings' and 'Advanced Settings'. In the 'Basic Settings' section, the 'Mode' is set to 'Static IP'. The 'IP Address' is '192.168.0.60', 'Subnet Mask' is '255.255.255.0', 'Gateway' is '192.168.0.1', 'Preferred DNS' is '192.168.31.1', and 'Alternative DNS' is '0.0.0.0'. In the 'Advanced Settings' section, the 'MTU' is '1480' and 'Adaptive IP' is turned 'Off'. A 'Save' button is located at the bottom left of the form.

**Status** Displays the current internet status.

**Mode** Configure the camera to obtain a dynamic or static IP address.

**IP Address** Specify an IP address for the camera. The IP address should be in the same segment as the gateway; otherwise, the camera cannot connect to the internet.

**Subnet Mask** Enter the subnet mask.

**Gateway** Enter the IP address of the gateway device to which the data packets will be sent. This IP address should be in the same segment as the camera's IP address.

**Preferred / Alternative DNS** Enter the IP address of the DNS server.

<b>MTU</b>	Specify MTU (Maximum Transmission Unit) to decide the largest size of data unit that can be transmitted in the network. A larger unit can improve the efficiency with more data in each packets, but it may increase the network delay because it needs more time to transmit. Therefore, if you have no special needs, it is recommended to keep the default value.
<b>Adaptive IP</b>	Enable this option if you want to set the camera's IP to change according to the network topology.

**Note:** The cameras should be in the same segment with the NVR, so that the NVR can discover and manage them.

2. Click **Save** to save your settings.

## ♥ 8.2 Configure Ports

In Port, you can configure the HTTPS port and service port of NVR that can be used to access the NVR through the network. When managing and monitoring the devices via VIGI Security Manager or the VIGI app, the ports configured here are used for communications of corresponding protocols.

Go to **Settings > Network Settings > Port**. Specify HTTPS port and service port. Click **Save**.

The screenshot shows the 'Port' configuration interface. It has a title bar 'Port' and three rows of configuration options:

- HTTPS:** Input field containing '443'
- RTSP:** Input field containing '554'
- Video Service:** Input field containing '8800'

At the bottom of the form, there are two buttons: 'Restore' (white with grey border) and 'Save' (teal with white text).

<b>HTTPS</b>	Specify a port for HTTPS protocol.
<b>RTSP</b>	Specify a port for RTSP protocol.
<b>Video Service</b>	Specify a port for protocols of video services

## ♥ 8.3 Configure Port Forwarding

Port Forwarding is used to establish the mapping between the internal port and external port. When Port Forwarding is enabled, you can access the device and watch the videos when accessing the external port remotely.

Note: The cameras should be connected to the internet, and Port Forwarding should be enabled on the gateway.

Follow the steps below to configure Port Forwarding.

1. Go to **Settings > Network Settings > Port Forwarding**.
2. Enable Port Forwarding and specify a mapping type. If you select **Auto** as the mapping type, the mappings are established automatically. If you select **Manual** as the mapping type, click **Edit** to specify the external port.

Port Type	Internal Port	External Port	Internal IP	Status	
HTTPS	443	443	192.168.0.60	Disabled	<a href="#">Edit</a>
RTSP	554	554	192.168.0.60	Disabled	<a href="#">Edit</a>
Video Service	8800	8800	192.168.0.60	Disabled	<a href="#">Edit</a>

<b>Port Type</b>	Displays the protocol type.
<b>Internal Port</b>	Displays the port of the NVR to be converted.
<b>External Port</b>	Displays the external port opened by the gateway.
<b>Internal IP</b>	Displays the IP address of the NVR that needs to be converted.
<b>Status</b>	Displays the status of mapping.
<b>Restore</b>	Click to restore the settings to default factory settings.

3. Click **Save**.

With Port Forwarding enabled, you can remotely watch the videos with the URL `rtsp://A.B.C.D:Port/streamN`, for example, `rtsp://10.0.1.47:28736/stream1`. A.B.C.D is the WAN IP address of the gateway, and Port is the number of RTSP external port. N can be number 1 or 2 that indicates the stream, 1 for main stream and 2 for substream.

## ♥ 8.4 Configure IP Restriction


When IP Restriction is enabled, you can add IP addresses to the deny list or allow list to restrict the access to the camera. The IP address in the deny list cannot access the camera, while only the IP addresses in the allow list can access the camera.

Follow the steps below to configure IP Restriction.

1. Go to **Settings > Network Settings > IP Restriction**.




2. Enable IP Restriction and specify the restriction rule. If you select **Deny List**, the devices with the IP addresses specified in the table will not be able to access the camera. If you select **Allow List**, only the devices with the IP addresses specified in the table can access the camera.

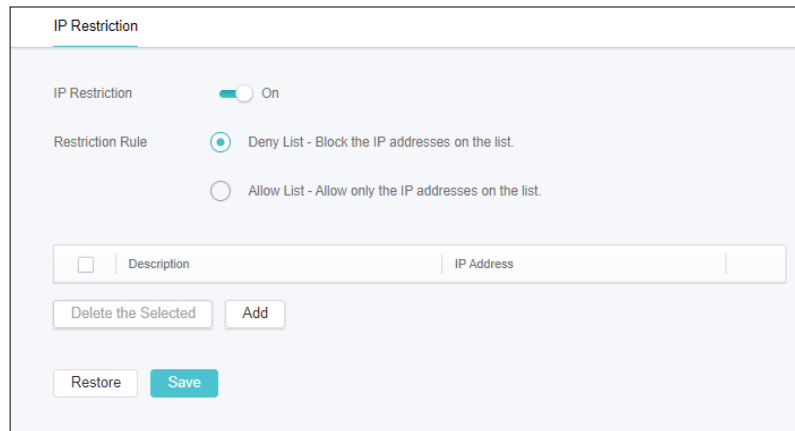

The screenshot shows the 'IP Restriction' configuration page. At the top, there is a toggle switch for 'IP Restriction' which is turned 'On'. Below this, there are two radio button options for the 'Restriction Rule': 'Deny List - Block the IP addresses on the list.' (which is selected) and 'Allow List - Allow only the IP addresses on the list.'. A table with two columns, 'Description' and 'IP Address', is visible below the rules. The table is currently empty. Below the table are buttons for 'Delete the Selected', 'Add', 'Restore', and 'Save'.

3. Click **Add** to add the desired IP address, give a description to identify this IP address, then click **Save**.

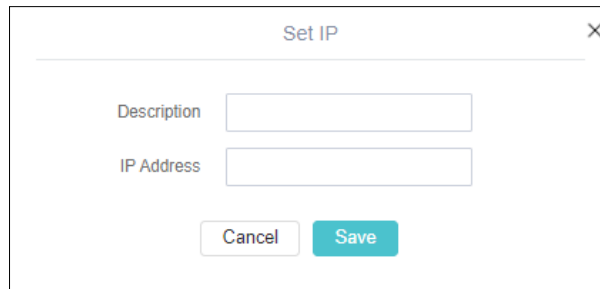

The screenshot shows a 'Set IP' dialog box with a close button (X) in the top right corner. It contains two input fields: 'Description' and 'IP Address'. Below the input fields are two buttons: 'Cancel' and 'Save'.

4. Click **Save** to save your settings.


## ♥ 8.5 Configure Multicast

When Multicast is enabled, you can watch videos using the multicast address and port.

Follow the steps below to configure Multicast.

1. Go to **Settings > Network Settings > Multicast**.

2. Select the stream type, then enable **Multicast**. For the multicast address and port, you can disable Random IP Port and specify a static address and port, or enable it and use a random one. Click **Save**.

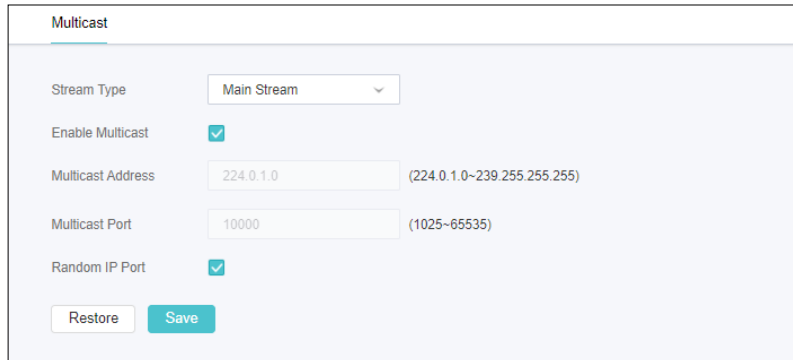

The screenshot shows a configuration window titled "Multicast". It contains the following fields and controls:

- Stream Type:** A dropdown menu set to "Main Stream".
- Enable Multicast:** A checked checkbox.
- Multicast Address:** A text input field containing "224.0.1.0" with a range "(224.0.1.0~239.255.255.255)" to its right.
- Multicast Port:** A text input field containing "10000" with a range "(1025~65535)" to its right.
- Random IP Port:** A checked checkbox.
- Buttons:** "Restore" and "Save" buttons at the bottom.

After Multicast enabled, you can watch the video with the URL `rtsp://A:B:C:D/multicastStreamN`, for example, `rtsp://192.168.0.3/multicastStream1`. A.B.C.D is the IP address of the camera, and N can be number 1 or 2 that indicates the stream, 1 for main stream and 2 for substream.




## ***Cloud Service***

After connecting your camera to the internet, you can manage it remotely via Cloud Services.

The camera supports remote management with the support of TP-Link Cloud Services. With a TP-Link ID bound, you can remotely monitor your areas on multiple platforms, including computers and mobile phones.

Follow the steps below to bind your TP-Link ID to the camera and download the VIGI Security Manager or VIGI app.

1. Go to **Settings > Cloud Service**.
2. Click **Go to Bind**. Enter your TP-Link ID and password and click **Bind**. If you do not have a TP-Link ID, click **Sign Up** to register.

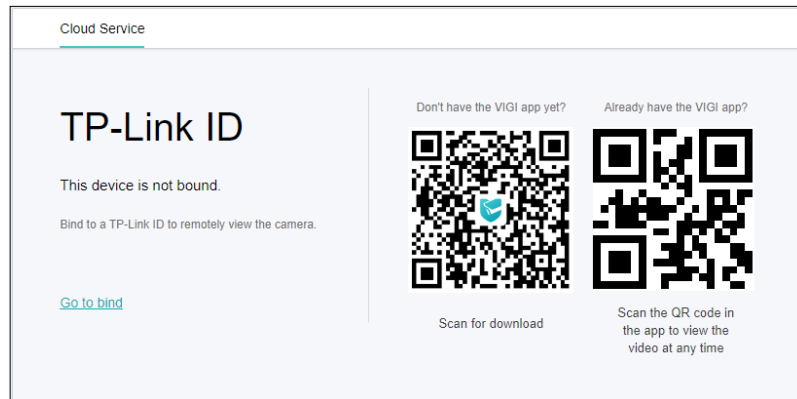

3. After binding your TP-Link ID, download VIGI Security Manager on the computer from [Download Center](#), or download the VIGI app on your mobile phone by scanning the QR code below. Log in with your TP-Link ID. Then you can monitor the live view and manage the camera remotely on your computer or mobile phone.



If you want to unbind the TP-link ID, click **Unbind** on the same page and follow the web instructions to unbind the camera.

# 10


## ***System Settings***

This chapter guides you to configure the basic and advanced settings of your camera, export and import settings. You can create and modify administrator accounts based on your needs. This chapter includes the following sections:

- [Configure Basic Settings](#)
- [Modify System Time](#)
- [Manage User Accounts](#)
- [System Management](#)
- [Upgrade Firmware](#)
- [Reboot Device Regularly](#)

## ♥ 10.1 Configure Basic Settings


To configure the settings for your camera, go to **Settings > System Settings > Basic Settings**. You can view and change the name of your camera, turn on or off the status LED (only for some models).

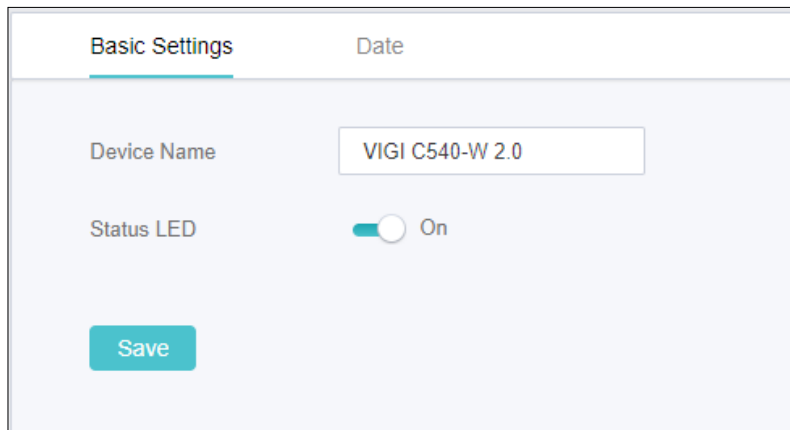

The screenshot shows the 'Basic Settings' page. At the top, there are two tabs: 'Basic Settings' (selected) and 'Date'. Below the tabs, there are two main settings: 'Device Name' with a text input field containing 'VIGI C540-W 2.0', and 'Status LED' with a toggle switch currently turned 'On'. A teal 'Save' button is located at the bottom left of the settings area.

## ♥ 10.2 Modify System Time


VIGI camera provides two methods to modify the system time. NTP (Network Time Protocol) can automatically get the system time from the internet, or you can manually set the system time. You can also select the time zone according to your region, and configure the DST settings. To configure these settings, go to **Settings > System Settings > Date**.

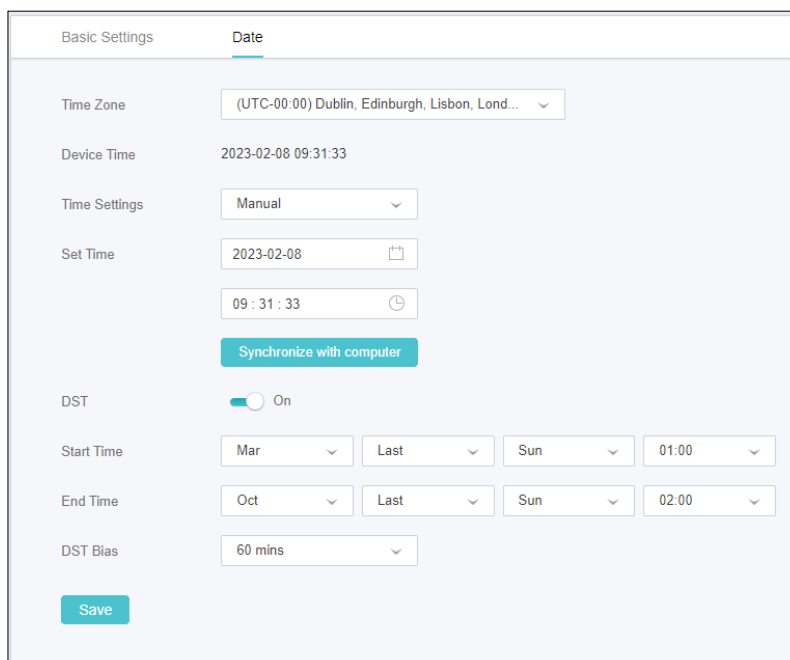

The screenshot shows the 'Date' settings page. At the top, there are two tabs: 'Basic Settings' and 'Date' (selected). The settings include: 'Time Zone' with a dropdown menu showing '(UTC-00:00) Dublin, Edinburgh, Lisbon, Lond...'; 'Device Time' displaying '2023-02-08 09:31:33'; 'Time Settings' with a dropdown menu set to 'Manual'; 'Set Time' with a date picker showing '2023-02-08' and a time picker showing '09:31:33'; a teal 'Synchronize with computer' button; 'DST' with a toggle switch turned 'On'; 'Start Time' with four dropdown menus for month (Mar), frequency (Last), day (Sun), and time (01:00); 'End Time' with four dropdown menus for month (Oct), frequency (Last), day (Sun), and time (02:00); and 'DST Bias' with a dropdown menu set to '60 mins'. A teal 'Save' button is located at the bottom left.


## ♥ 10.3 Manage User Accounts

You can modify the default user account (admin) based on your needs. The Administrator user name is admin and the password is set when you set up your camera for the first time. To configure these settings, go to **Settings > System Settings > User Management**.

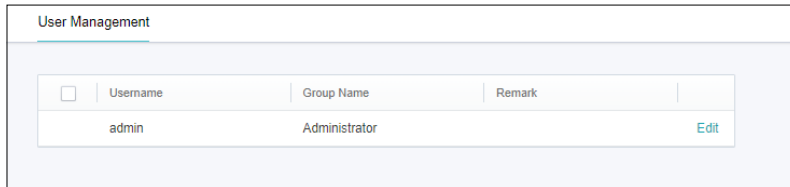

<input type="checkbox"/>	Username	Group Name	Remark	
	admin	Administrator		<a href="#">Edit</a>

Click **Edit** to change the settings.

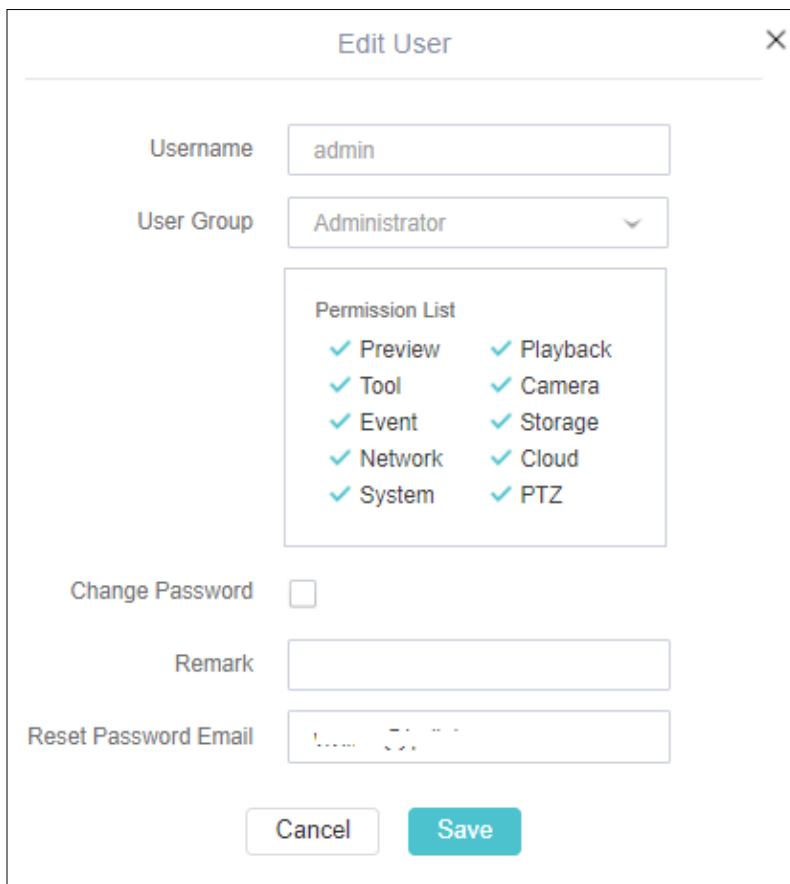

### Edit User

Username:

User Group:

Permission List

- Preview
- Playback
- Tool
- Camera
- Event
- Storage
- Network
- Cloud
- System
- PTZ

Change Password:

Remark:

Reset Password Email:

Select the **Change Password** checkbox to change the password.

The screenshot shows the 'Edit User' form with the following details:

- Username:** admin
- User Group:** Administrator
- Permission List:**
  - Preview, Playback, Tool, Camera, Event, Storage, Network, Cloud, System, PTZ (all checked)
- Change Password:**
- Old Password:** [Empty field]
- New Password:** [Empty field]
- Confirm Password:** [Empty field]
- Remark:** [Empty field]
- Reset Password Email:** vivi.luo@tp-link.com
- Buttons:** Cancel, Save

Enter the old password and set a new password. Click **Save** to save your settings, then you will need use the new password to log into the camera.

## ♥ 10.4 System Management

You can reset the camera to factory default settings, import and export the configuration file of your camera. To configure these settings, go to **Settings > System Settings > System Management**.

The screenshot shows the 'System Management' section with the following details:

- System Management:**
  - Reset to Factory Default:** [Reset button]
  - Export configuration file:** [Export button]
  - Import configuration file:** [Text input field] [Browse button] [Import button]

To reset the camera, click the **Reset** button to reset the camera.

To export the configuration file, click the **Export** button.



To import the configuration file, click **Browse** to select your file, then click **Import**.

## ♥ 10.5 Upgrade Firmware


TP-Link aims at providing better network experience for users. We will inform you through the web management page if there's any update firmware available for your router. Also, the latest firmware will be released at the TP-Link official website [www.tp-link.com](http://www.tp-link.com), and you can download it from the **Support** page for free.

### Note:

- Backup your camera configuration before firmware upgrade.
- Do NOT power off the camera during the firmware upgrade.

### 10.5.1 Online Upgrade

1. Go to **Settings > System Settings > System Management > Upgrade Firmware**.
2. Click **Check for Update** to see whether the latest firmware is released.

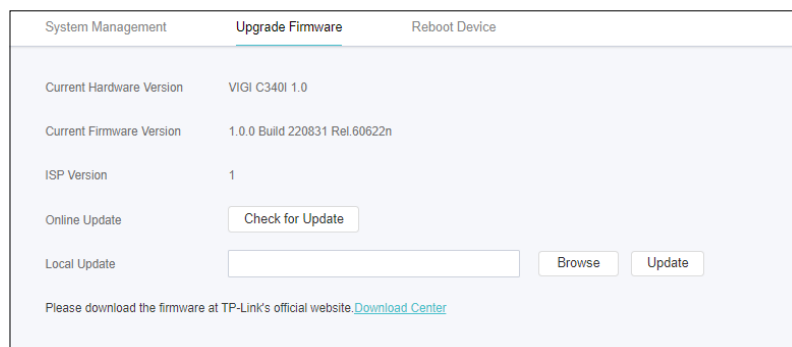

3. Focus on the **Online Upgrade** section, and click **Upgrade** if there is new firmware.
4. Wait a few minutes for the upgrade and reboot to complete.

### 10.5.2 Local Upgrade


1. Download the latest firmware file for the router from [www.tp-link.com](http://www.tp-link.com).
2. Go to **Settings > System Settings > System Management > Upgrade Firmware**.
3. Click **Browse** to locate the downloaded new firmware file, and click **Update**.
4. Wait a few minutes for the upgrade and reboot to complete.

## ♥ 10.6 Reboot Device Regularly

You can The Scheduled Reboot feature cleans the cache to enhance the running performance of the camera.

1. Go to **Settings > System Settings > Reboot Device**.
2. Enable **Scheduled Reboot**.

3. Select the day and time and click **Save** to save your settings. Then your camera will reboot regularly at a specific time.

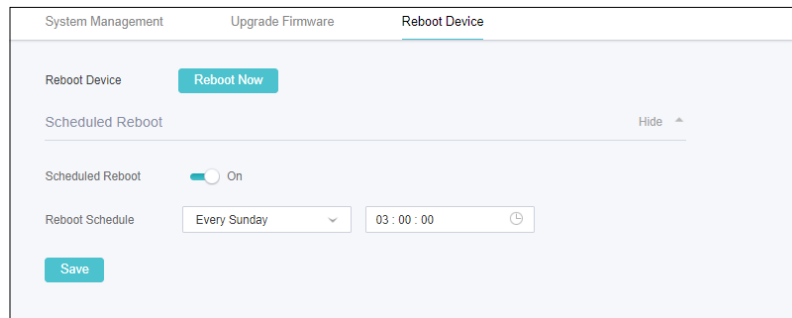

The screenshot shows a web interface for system management. At the top, there are three tabs: "System Management", "Upgrade Firmware", and "Reboot Device", with "Reboot Device" being the active tab. Below the tabs, there are three main sections:

- Reboot Device:** Contains a teal "Reboot Now" button.
- Scheduled Reboot:** Includes a "Hide" link with an upward arrow.
- Scheduled Reboot:** Features a toggle switch labeled "On" which is currently turned on.
- Reboot Schedule:** Contains a dropdown menu set to "Every Sunday" and a time input field set to "03 : 00 : 00" with a clock icon.

At the bottom left of the form is a teal "Save" button.

**Note:** You can click **Reboot Now** to reboot the camera immediately.