

GV-APOE2412

Contents

Packing List	1
Front Panel	2
LED Indicator	2
Rear Panel	3
Mount Installation	3
Leveled Installation	3
Rackmount Installation	4
Connecting to GV-IP Camera	5
Accessing the Web Interface	6
Basic Setup	7
A. Assigning an IP Address	7
B. Configuring PoE Port Using GV-IP Device Utility	9
C. Enabling the DHCP Server	10
Loading Default Setting.....	11
Hardware	11
Web Interface	11
Updating Firmware	12
Specifications	12

GV-APOE2412

24-Port Gigabit L2+ Web Management PoE Switch




Packing List

- | | |
|------------------|-----------------------|
| 1. GV-APOE2412 | 5. Screw x 8 |
| 2. User Guide | 6. Rack Mount Kit x 2 |
| 3. Download Page | 7. Rubber Feet x 4 |
| 4. Power Cord | |

Note: If any of these items are found missing or damaged, please contact your local supplier for replacement.

Front Panel

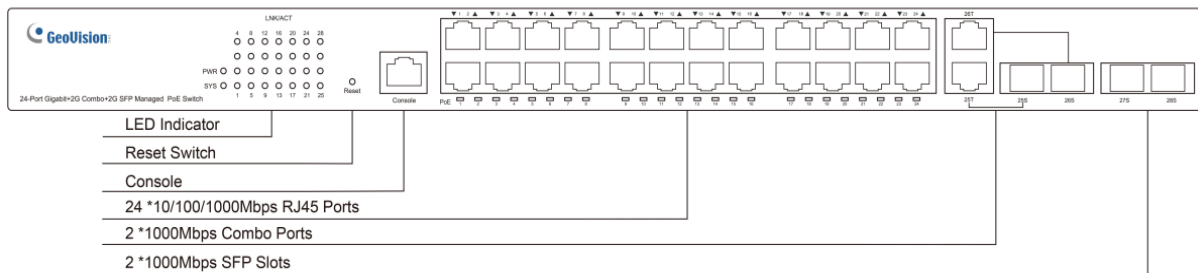

IMPORTANT:

1. The 2 SFP ports labeled 25S ~ 26S are associated with the 2 RJ-45 ports labeled 25T ~ 26T respectively. When one of the two associated ports is used, the other port will not work. For example, if the Gigabit SFP port labeled 25S is used, the Gigabit RJ-45 port labeled 25T will not function.
2. The Console port is used to connect to the serial port of a computer or other terminal device for debugging only.

LED Indicator


LED	Color/Status	Description
PWR	Green	Off: Switch is not powered on.
		On: Switch is powered on.
SYS	Green	Off: System is starting or has no power.
		Blinking: System is operating.
LNK/ACT	Green	Off: No network connection.
		On: A 10/100/1000 Mbps network device is connected.
		Blinking: Data transmission in progress.
PoE	Orange	Off: No PoE powered device (PD) is connected.
		On: A PoE PD is connected and receiving power.

Rear Panel




Mount Installation

Leveled Installation

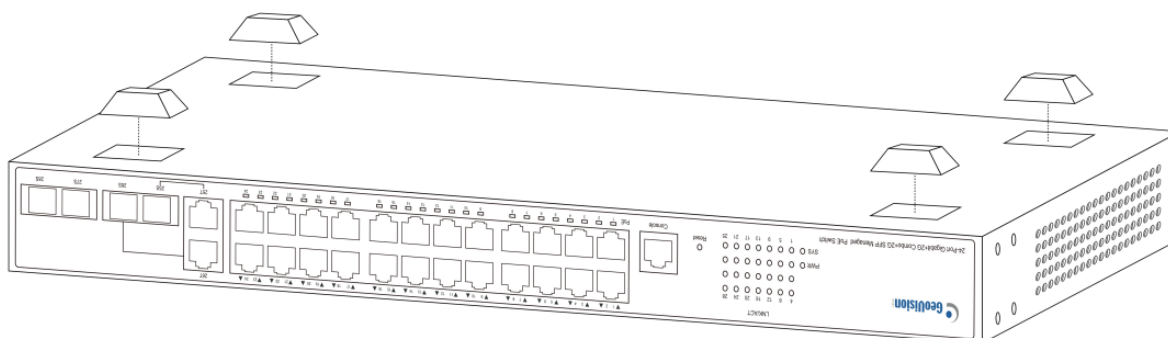


Rackmount Installation

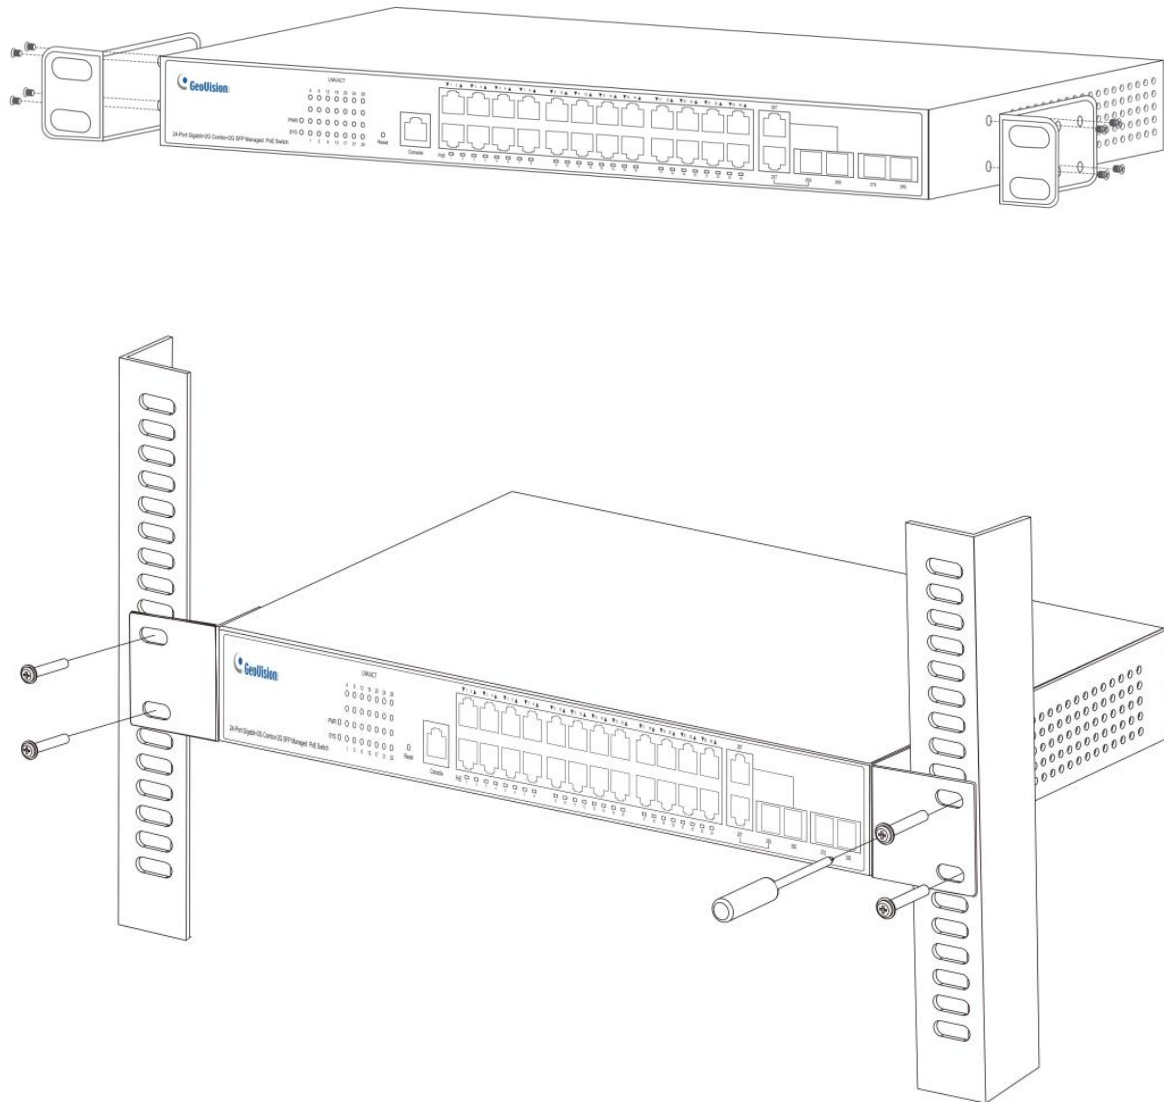

Connecting to GV-IP Camera

The switch can be connected to up to 24 GV-IP Cameras and 1 GV-NVR / VMS System. You can also extend the connection by connecting to another switch.

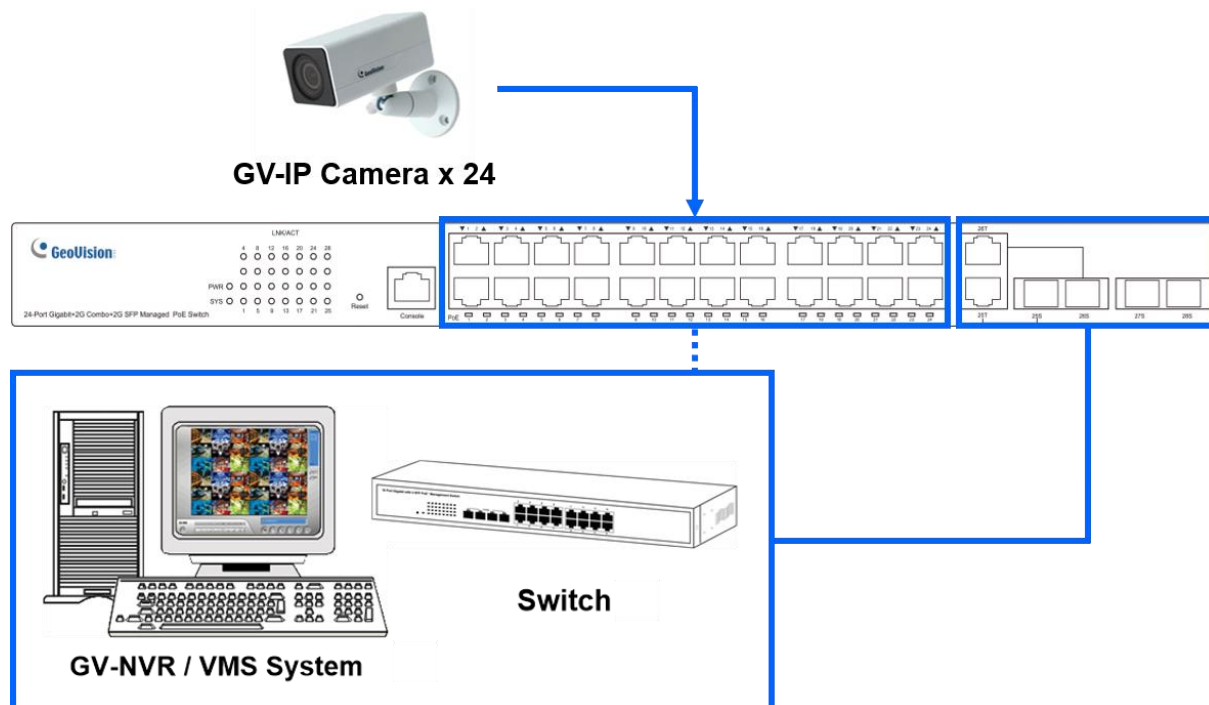

Note:

1. GV-NVR / VMS or a switch can connect to the RJ-45 ports or SFP ports.
2. The maximum cable length for:
 - Gigabit RJ-45 (Cat.5) is 100 m (330 ft).
 - Gigabit RJ-45 (Cat.5e, 6) can achieve 250 m (820 ft) by setting the network bandwidth of the 24 PoE ports to 10 Mbps per port on the switch's Web interface. See details in 3.6 Port Rate, *GV-PoE Switch User's Manual (L2+ Web Managed)*.
3. For connection that exceeds 250 m (820 ft), use the Gigabit SFP ports.

Accessing the Web Interface

Users can log in to the Web interface to manage and set up the switch.

1. To access the Web user interface, type the default IP **192.168.0.250** into your Web browser. The login page appears.



2. Type the default username **admin** and password **admin**. Click **Login In**.
3. When prompted to create your login credentials, type the necessary information and click **Apply**. The System Information page appears.



Note: Before rebooting, make sure click the Save button at the top right of the Web interface in order to save your current settings.

Basic Setup


Refer to the following sections for the basic setup of the switch, including assigning an IP address, port PoE configuration, and switching SFP port between 1G modes.

A. Assigning an IP Address


Adopt one of the following alternatives to assign an IP address to the switch.

a. Assigning a Fixed or Dynamic IP on the Web Interface

1. On the Web interface, select **System Config > IP Config > IPv4 Config**.

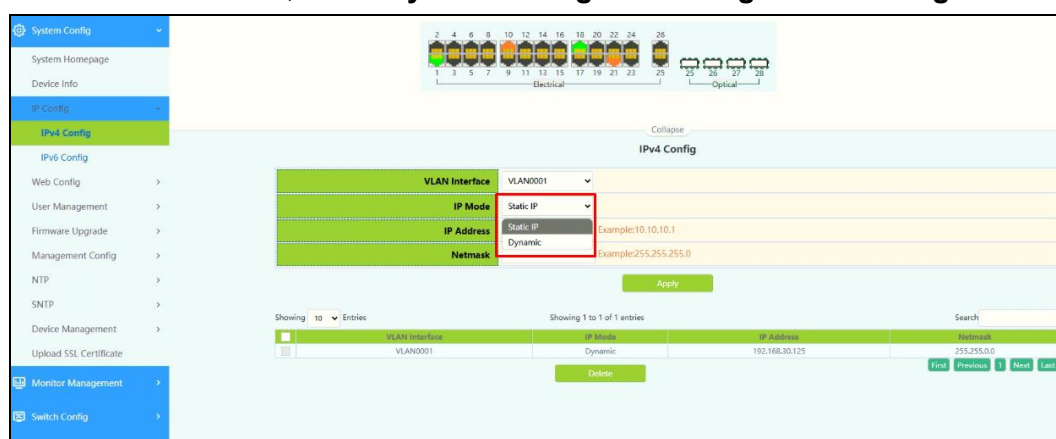


2. In IP Mode, select **Static IP** to change an IP address or click **Dynamic** to allow DHCP to assign a dynamic IP address. Click **Apply**.
3. Log back in to the switch using the newly assigned IP address.
4. From the top-right corner of the web interface, click **Save**. This ensures the settings are stored and will not revert to the default values after a reboot or a power cycle.

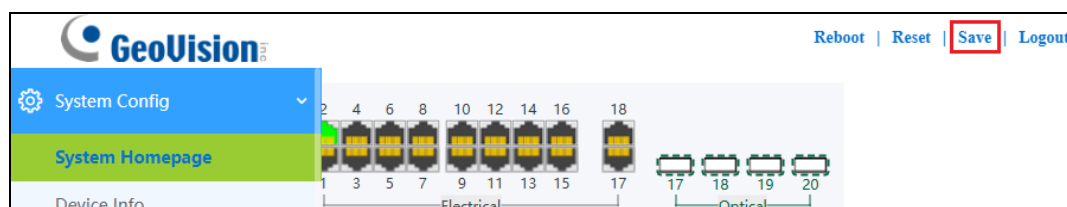

Note: If you select to use a dynamic IP, check the IP address first with [GV-IP Device Utility](#) before logging in again.

b. Assigning an IP Using GV-IP Device Utility

1. Make sure a PC and the switch are connected to the same LAN, and GV-IP Device Utility (V9.0.3 or later) is installed on the PC from our [website](#).
2. On GV-IP Device Utility, click the  button to search for the IP devices in the same LAN.
3. Click the switch's IP address, and select **Set IP Address**.
4. On the configuration dialog box, type the **User Name** and **Password**.
5. Type the desired IP address, subnet mask, and default gateway. Click **OK**.

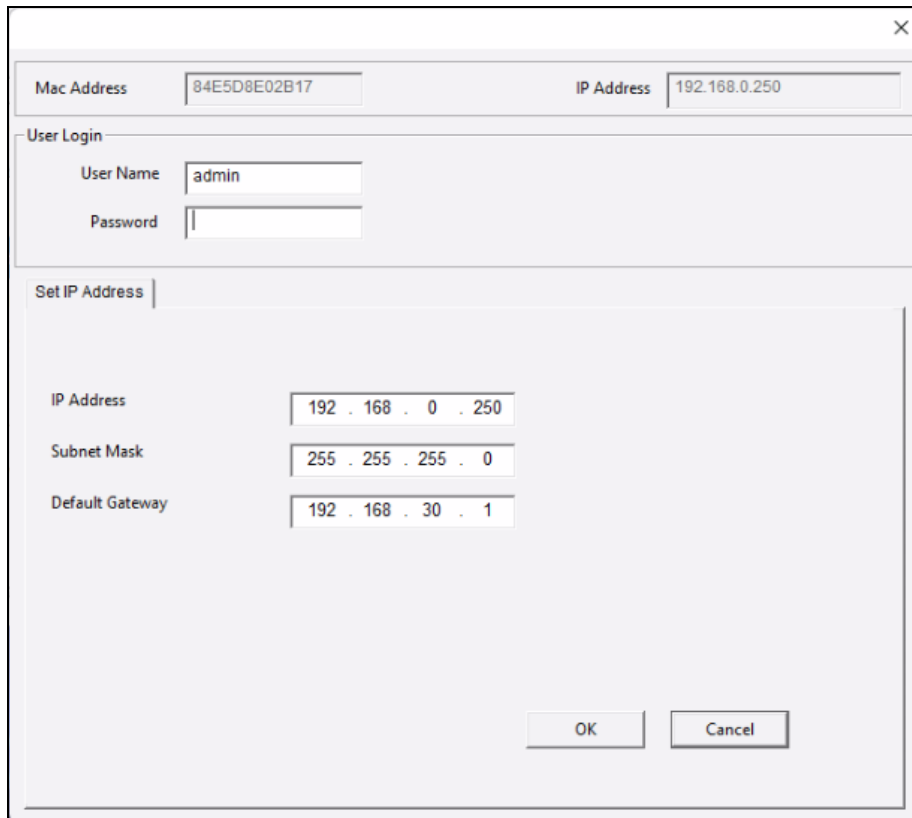

Mac Address: 84E5D8E02B17 IP Address: 192.168.0.250

User Login

User Name: admin Password:

Set IP Address

IP Address: 192 . 168 . 0 . 250

Subnet Mask: 255 . 255 . 255 . 0


Default Gateway: 192 . 168 . 30 . 1

OK Cancel

B. Configuring PoE Port Using GV-IP Device Utility

You can quickly access and configure the PoE port status of the devices connected to the switch by using GV-IP Device Utility. Follow the instructions below:

1. Make sure a PC and the switch are connected to the LAN, and GV-IP Device Utility (V9.0.3 or later) is installed on the PC from our [website](#).
2. On GV-IP Device Utility, click the  button to search for the IP devices in the same LAN.
3. Click the switch's IP address, and select **Configure**.
4. On the configuration dialog box, type the **User Name** and **Password**, and click **Refresh**.

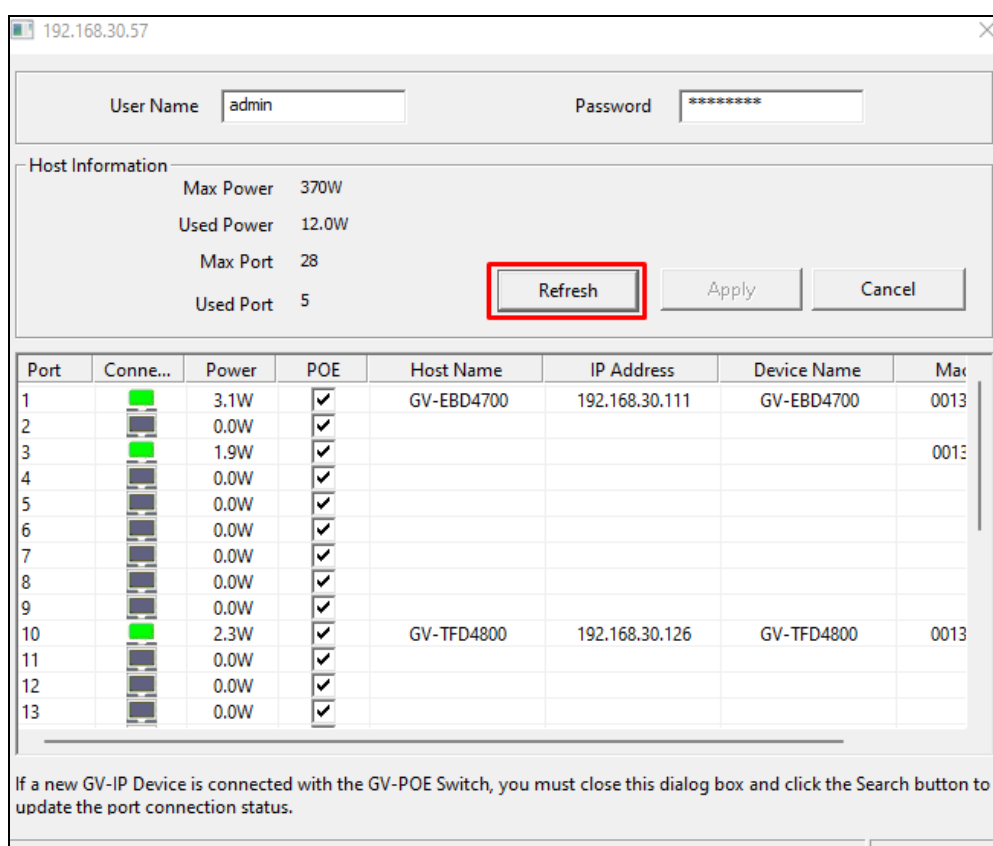

Port	Conne...	Power	POE	Host Name	IP Address	Device Name	Max
1		3.1W	☒	GV-EBD4700	192.168.30.111	GV-EBD4700	0013
2		0.0W	☒				
3		1.9W	☒				0013
4		0.0W	☒				
5		0.0W	☒				
6		0.0W	☒				
7		0.0W	☒				
8		0.0W	☒				
9		0.0W	☒				
10		2.3W	☒	GV-TFD4800	192.168.30.126	GV-TFD4800	0013
11		0.0W	☒				
12		0.0W	☒				
13		0.0W	☒				


If a new GV-IP Device is connected with the GV-POE Switch, you must close this dialog box and click the Search button to update the port connection status.

5. To enable or disable the PoE function of a device connected to the switch, select or deselect the **POE** checkbox.
6. Click **Apply**.


C. Enabling the DHCP Server

To enable the DHCP server function on the switch, follow the instructions below.


1. On the Web interface, select **DHCP Config > DHCP Server > Global Config**.
2. Enable **DHCP Server**.

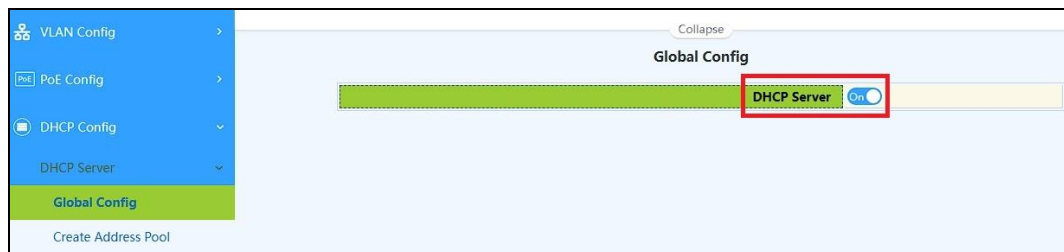


3. To create an address pool, select **DHCP Config > DHCP Server > Create Address Pool**. Here, we create an address pool called “1” as an example.

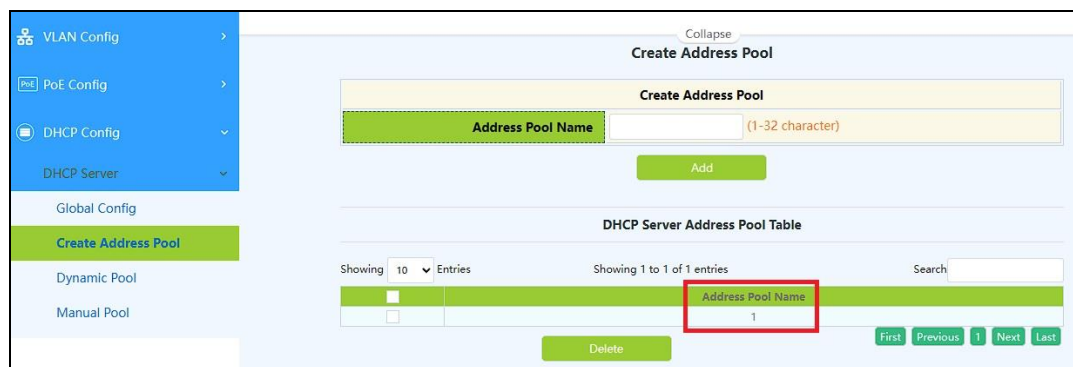

4. To configure IP parameters, type the switch’s IP in **IP Address** and the switch’s netmask in **Netmask**, and click **Apply**. In this example, switch’s IP is 192.168.0.0 and netmask is 255.255.255.0.

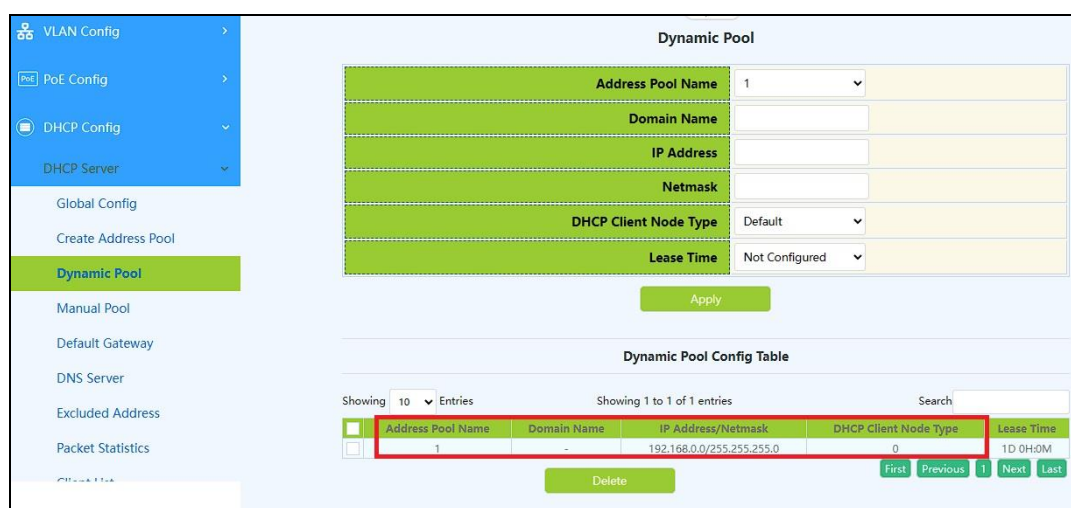

- From the top-right corner of the web interface, click **Save**. This ensures the settings are stored and will not revert to the default values after a reboot or a power cycle.



Loading Default Setting


If for any reason the device is not responding properly, you can reset it to its factory default settings either directly on the device or through its Web interface.

Hardware

- Turn on the switch.
- Press and hold the **Reset** button on the front panel of the switch for 5 seconds until all the LED start blinking.
- Release the button. The switch is restored to its default settings.

Web Interface

- Access the following functions from the top-right corner of the web interface:
 - Reboot:** Click to restart the switch. Note that the configurations will revert to the last saved settings. See the **Save** function below.
 - Reset:** Click to restore the switch to its factory default configurations.
 - Save:** Click to ensure settings are stored and will not revert to the default values after a reboot or a power cycle.




Note:

- After restoring the default settings by pressing the **Reset** button on the hardware or by clicking **Reset** on the Web interface, you will need to configure the IP address and password again.
- You can also access these functions by selecting **System Config > Device Management > Device Reboot/Reset** from the left menu. The **Device Management** table opens.

Updating Firmware

1. Select **System Config > Firmware update > HTTP Upgrade**. This page appears.

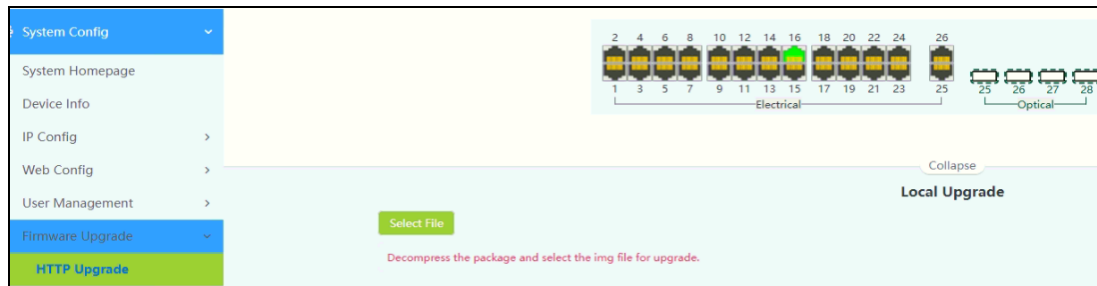

2. Click **Select File** to select the firmware file.
3. Click **Apply**. The upgrade process starts.
4. After the firmware is successfully upgraded, the system will automatically log out and reboot.

Specifications

For detailed specifications, see the [datasheet](#).